

POSITIONING JACK:

To move Jack, tilt on wheels by holding foot against axle. Adjust sliding arm supports under bumper as close as possible to the brackets which attach bumper to car. Pulling back on handle while shoving axle or wheels forward with foot will permit Jack to be easily positioned under bumper.

TO RAISE JACK:

Apply air to either top or bottom valve, item 29. Use air line with Standard air tire chuck. The mechanical safety lock will automatically lock Jack in consecutive raised positions. If Air Valve Conversion, item 29A, is used, Quick Disconnect Air Chuck can be left in position, and Jack raised by opening valve. Jack is stopped by closing valve.

TO LOWER JACK:

Release mechanical safety lock found protruding from side plate of carriage at bottom of cylinder. As this lock is connected in part with the air exhaust valve, the air will escape and the Jack will lower. To stop the lowering at a desired position, trip the lock plate — thus closing

the exhaust valve. If the Jack is resting on the mechanical safety lock it is necessary to apply air pressure before the lock can be released. Safety lock will automatically reset itself and air valve will automatically close when Jack is completely lowered.

WARNING:

Before lifting car, release brake and place shift in neutral so wheels are free to turn. Do not lift cars by weak, broken or faulty bumpers.

MAINTENANCE

Lubricate both roller pins weekly with a good grade of chassis grease. Daily put ¼ teaspoon of medium grade corrosion preventing lubrication oil into cylinder through valve found in head of cylinder. Occasionally put a few drops of oil on wheel bearings at both sides of each wheel. Wipe excess oil off wheel tires. As required oil or grease springs and sliding surfaces of spring suspension units at each end of axle. Occasionally check, and if necessary tighten all bolts and fastenings.

REPAIR PARTS LIST FOR SJ-61 AND SJ-61-A AIR-OPERATED ONE-END LIFTS

WHEN ORDERING PARTS INCLUDE BOTH MODEL AND SERIAL NUMBER AS WELL AS PART NAME AND NUMBER

Item No.	Part No.	No. Description Req
1	D589,106	Wheel2
2	D588.104	Axle1
* 3	D613.061	
4	D590.183	. Spring2
5	D606.001	Frame1
6	D612.028	
7	D615.108	
8	D635.043	
8	D734.043	
* 9	D634.041	
*9	D735.041	
10	D633.040	
10	D736.071	. Plunger Disc, 6" (for SJ-61-A only)1
11	D615.108	. Washer2
12	D611.028	. Screw2
13	D600.103	. Elevator1
14	D605.103	. Arm L.H1
15	D604.103	
16	D599.061	
17	D591.061	. Pin2
18	D625.104	
19	D608.096	
20	D626.107	
*21	D597.044	. Ring1
22	D601.062	
23	D587.061	
24	D607.030	. Cylinder (for SJ-61 only)1
24	D737.030	. Cylinder, 6" (for SJ-61-A only)1
25	AJ100.373	
26	D602.188	
27	D618.096	
28	D619.096	
*29	D609.165	
+29A	V107	Air Valve Conversion for
		SJ61, SJ61A
30	D621.096	
31	D621.096	
32	D621.096	
33	D620.096	Fitting1

Item No.	Part No.	Description	No. Req.
34	D636.268	Tube	1
35	D610.028		
36	D617.108	<u> </u>	
37	D594.039		
*38	D595.108		
39	D593.040		
*40	D596.183		
41	D592.580		
42	D624.061		
43 44	D630.157 D631.039		
44 45	D614.108		
46	D629.135		
*47	D628.183		
48	D598.108		
49	D632.111		
50	D627.157		1
51	D623.039		1
52	D622.055		1
53	D738.107		
54	D739.104		
†	\$J61.026		
†	SJ61.026B	Decal (Instruction)	1
	RK-1 Front Roll	er Conversion Kit for SJ-61	only
55	D738.107	Roller	1
56	D739.104		
57	D740.111	Mounting Bracket	1
•	Shown.		
top Chu	or bottom locati	of item 29, D609.165 Air Val on. Allows use of Quick-Di ly attached Air Hose. Must essory.	sconnect Ai
*For €	economy repair, i	use Jack/Saver Kit SJ61K-3.	
		Kit are marked with asteri	

Guarantee

Blackhawk guarantees its Lifting Equipment and Porto-Power Repair Tools against defects in workmanship and material for 90 days from date of delivery to the user. Only exception is chain, which follows the trade custom of its manufacturers and cannot be guaranteed.

When question of warranty arises, the user should send his unit to the nearest Blackhawk Franchised Service Depot for inspection, transportation to be prepaid and evidence of delivery date furnished. Contact Blackhawk Mfg. Co., Milwaukee, Wis., for list of Franchised Service Depots.

If the difficulty comes under the terms of our guarantee, the Franchised Service Depot will repair or replace parts affected and return prepaid. Our guarantee does not cover ordinary wear and tear, abuse, misuse, overloading, altered products or use of improper fluid.

Franchised Service Depots



For quality workmanship with genuine Blackhawk parts select a Franchised Blackhawk Service Depot for your repair work. Only

repairs performed by a franchised service depot displaying this official franchise service depot sign are backed with full factory guarantee. The Classified Section in your Phone Book lists your nearest Franchised Service Depot.

BLACKHAWK MFG. CO.



MILWAUKEE 46. WISCONSIN