
BLACKHAWK®

instructions & repair parts

Master Copy

MODEL T-4-2
TRANSMISSION JACK
Capacity 1 Ton

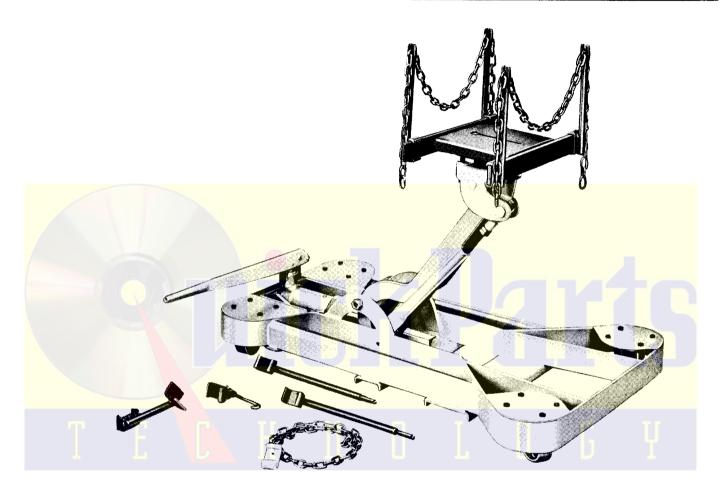

OPERATING INSTRUCTIONS FOR MODEL T-4 BLACKHAWK HEAVY DUTY TRUCK AND BUS TRANSMISSION JACK


Used for (1) truck and passenger car transmissions and truck differentials (2) the removal and replacement of both front and rear type engines (3) placing compact cars on jack stands. NO HOIST REQUIRED!

- 1. Unpack jack and tighten all cap screws (it is possible these may loosen in shipping).
- 2. Check for hydraulic leaks and damage in shipment.
- Remove solid closure screw from reservoir and install vented plug attached to this unit making sure oil level is even with fill hole. Use only LX-21 Jack Oil for filling. DO NOT USE BRAKE FLUID.
- 4. TO EXPEL AIR:

To remove air pockets or vacuum, raise arm manually to top position and block there. Open the

- release valve, pull ram forward manually to the outward position. Lower arm and ram assembly and repeat this operation two or three times if necessary.
- Install proper adaptor for work to be done. This
 is accomplished by removing L shaped hinge pin
 and placing adaptor clevis over jack head and
 re-inserting hinge pin. See diagram reverse side of
 this page.


Note: Always install end of adaptor as marked "TOWARD PUMP HANDLE" or "TOWARD ENGINE" as the case may be. Adaptor not shown.

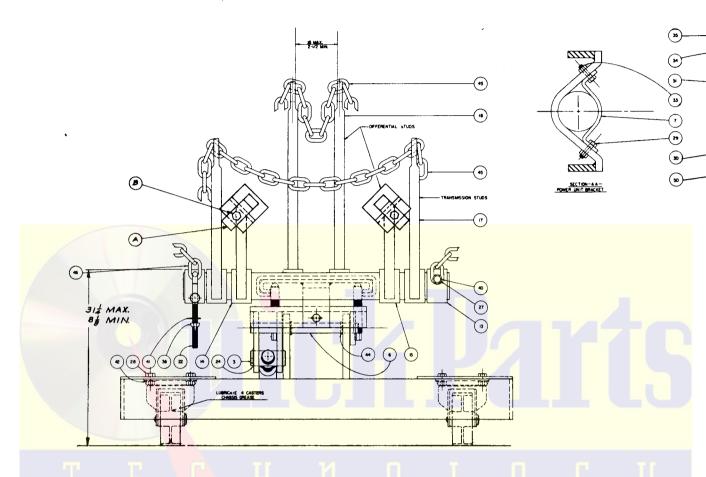

WHEN ORDERING PARTS INCLUDE BOTH MODEL AND SERIAL NUMBER AS WELL AS PART NAME AND NUMBER

ltem No.	Part No.	No. Description Req.
1	D44.103	Arm Assembly1
2	D45.028	Parallel Screw1
3	D46.055	Parallel Nut1
4	D47,039	Sleeve1
5	D48.061	Stud Pivot1
6	D49.104	Shaft Tilt1
7	D50.111	Support Bracket1
8	D51,001	Frame Assembly1
9	D52.111	Head Assembly1
10	D53.111	Channel Assembly, Lower1
11	D54.111	Channel Assembly, Upper1
12	D55.135	Handle-Pump1
13	D56.111	Chain Adapter1
14	D57.111	Angle Assembly, R.H1
15	D58.111	Angle Assembly, L.H1
16	D59.111	Hook Adapter Assembly1
17	D60.111	Stud Assembly, Short4
18	D61,111	Stud Assembly, Long2
20	D63.061	Hinge Pin1
21	D64.028	Tilt Screw2
22	D65.017	Chain Hook1
23	D66.154	Bassick Caster4
24	D241.044	RS-112 Spirolox Ring2

ltem No.	Part No.	Description	No. Req.
26	D243.096	Grease Fitting	1
27	D244.028	5/16-18x1/2 Hex Cap Screw	1
28	D245.028	%-16x% Hex Cap Screw	16
29	D246.028	36-16x11/4 Hex Cap Screw	2
30	D247.028	38-24x11/2 Hex Cap Screw	1
31	D248.028	½-20x1¾ Hex Cap Screw	2
32	D249.028	½-13x1 Carriage Bolt	1
33	D250.055	3/8-16 Hex Nut Automotive	18
34	D232.055	%-24 Palnut	1
35	D231.055	36-24 Hex Nut Jam	1
36	D251.055	3/8-16 Wing Nut	1
37	D252.055	1/2-13 Hex Nut Automotive	1
38	D253.055	34-10 Hex Nut Jam	2
39	D254.055	34-16 Hex Nut Automotive	2
40	D255.108	5/16 SAE Washer	1
41	W40.108	3/8 SAE Washer	1
42	D256.108	3/8 Shake Proof Washer	16
43	D257.108	½ SAE Washer	1
44	D238.061	5/32 Dia. Roll Pins	4
45	D258.066		
46	D259.066		
47	T-4.26		
48	117-R	Instruction Card	1
50	T4.05A-2	Power Unit Assembly	1

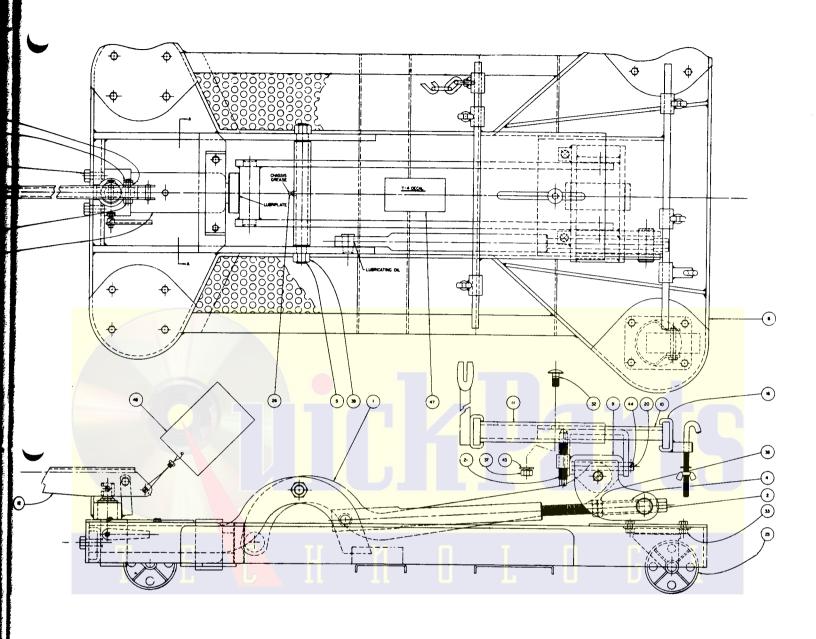

SPECIFICATIONS

Capacity	2000 Lbs	
Overall Length	46% In.	
Overall Width: Front	29% In.	
Back	25 In.	
Low Lifting Height	81/s In.	
Max. Lifting Height	31¼ In.	
Wheel Diameter	4 In.	
Shipping Weight	250 Lbs.	

TILT FEATURE


Front	45°
Back	
Side, L.H	
Side, R.H.	10°



USE ONLY BLACKHAWK LX-21 JACK OIL AND GENUINE FACTORY PARTS.

T4.05A-2 POWER UNIT FOR T-4-2 TRANSMISSION JACK

WHEN ORDERING PARTS INCLUDE BOTH MODEL AND SERIAL NUMBER AS WELL AS PART NAME AND NUMBER

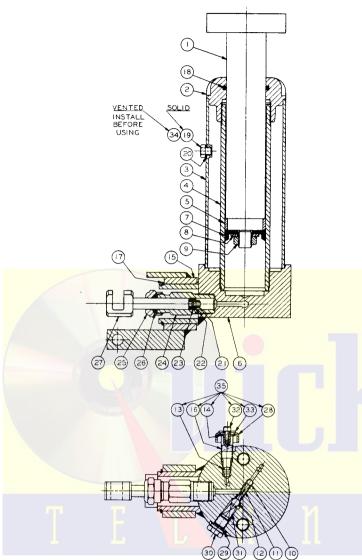

Item No.	Part No.	No. Description Req
1	D68.040	Ram Assembly
2	AA85.20-2	
3	AA85.25-2	Reservoir1
4	CB9.30-2	Cylinder1
5	AA85.29-2	
6	D940.005	Base
* 7	M73.41-1	Plunger Cup1
8	AA85.43	Plunger Cup Washer1
9	AA85.120	Hex Nut
*10	1.16	
*11	D97.183	
*12	\$1.16	
*13	AJ100.312	"O" Ring1
14	D943.044	
15	D62.151	
16	D941.010	Release Valve Spindle
17	D242.044	
*18	EJ100.102	Quad Ring 1
19	C9.22-2	
*20	C9.37	Gasket—Filler Plug1
*21	CB9.55	
*22	F11.52	Spreader—Pump Cup1
*23	F11.53	Pump Cup1
24	CB9.50-1	Cylinder—Pump1
25	CB9.54-1	Nut-Pump Gland1
*26	5.75S	Packing—Pump1
27	D72.040	Piston—Pump1
28	D942.135	Release Valve Handle1
*29	B159.167	Valve Plug Gasket
30	C89.185-2	Valve Plug1
*31	BA85.183	Spring-Exhaust Valve1
32	D945.028	Lockscrew1
33	D944.108	
34	AJ100.406	Vent Plug1
35	D941.900	Release Valve Assembly
Use Aste	Jack/Saver Kit N risk (*).	No. T4K-3 Containing Items Indicated by

NOTE: Complete T4.05A-2 Power Unit is available either as exchange or outright purchase.

Guarantee

Blackhawk guarantees its Lifting Equipment against defects in workmanship and material for 90 days from date of delivery to the user. Only exception is chain, which follows the trade custom of its manufacturers and cannot be guaranteed.

When question of warranty arises, the user should send his unit to the nearest Blackhawk Franchised Service Depot for inspection, transportation to be prepaid and evidence of delivery date furnished. Contact Blackhawk Mfg. Co., Milwaukee, Wis., for list of Franchised Service Depots.

If the difficulty comes under the terms of our guarantee, the Franchised Service Depot will repair or replace parts affected and return prepaid. Our guarantee does not cover ordinary wear and tear, abuse, misuse, overloading, altered products or use of improper fluid.

Franchised Service Depots



For quality workmanship with genuine Blackhawk parts select a Franchised Blackhawk Service Depot for your repair work. Only

repairs performed by a franchised service depot displaying this official franchise service depot sign are backed with full factory guarantee. The Classified Section in your Phone Book lists your nearest Franchised Service Depot.

BLACKHAWK MFG. CO.



MILWAUKEE 46, WISCONSIN