

REPAIR PARTS LIST

Parts No.	Parts Name	Q'ty/set	Parts No.	Parts Name	Q'ty/set
1-2	Washer	2	7-3	Air vent plug	1
1-3	Front wheel	2	7-4	O-ring	1
1-4	Snap ring	2	8-1	Pump plunger	1
2-1	Saddle	1	8-2	Back-up ring	1
2-3	Link rod pin(A)	1	8-3	O-ring	1
2-5	Link rod	2	8-4	Oil seal	1
2-6	Link pin (B)	2	9-1	Safety valve cap plug	1
2-7	Nut	2	9-2	Rubber packing	1
2-8	Spring washer	2	9-3	Retainer	1
3-0	Arm ass'y	1	9-4	Safety valve	1
•2-2	•Saddle base (1 piece)		9-5	Spring	1
•2-4	•Arm pin(A) (1 piece)		9-6	Packing	1
•3-3	•Arm (1 piece)		10-0	Release valve ass'y	1
•3-4	•Grease nipple (1 piece)		•10-1	•Release valve (1 piece)	
•3-9	•Link (2 pieces)		•10-2	•O-ring (1 piece)	
•3-10	•Pin (2 pieces)		•10-3	•Release valve gear(B) (1 piece)	
3-1	Arm pin	1	•10-5	•Release valve lock nut (1 piece)	
3-5	Piston connecting joint	1	•10-6	•Release valve connecting rod (1 piece)	
3-6	Snap ring	1	•10-7	•Steel ball (1 piece)	
3-7	Cotter pin	1	10-4	Collar	1
3-11	Snap ring	2	10-8	Copper packing	2
4-0	Castor ass'y	2	11-0	Handle fork ass'y	1
4-7	Spring washer	4	•11-3	•Handle fork (1 piece)	
4-8	Bolt	2	•12-3	•Release valve gear(A) (1 piece)	
4-9	Bolt	2	•12-4	•Release valve connecting bar(B) (1 piece)	
5-1	Tank nut	1	•12-5	•Cotter pin (1 piece)	
5-2	By-pass bar	1	•12-7	•Nut (1 piece)	
5-3	By-pass rod	1	11-1	Plunger connecting pin	1
5-5	Piston rod	1	11-2	Rivet	1
5-6	Piston packing retainer	1	11-4	Handle shaft(A)	1
5-7	By-pass screw	1	11-5	Handle shaft(B)	1
5-9	Spring	1	11-6	Spring washer	2
5-10	Snap ring	1	11-7	Spring	1
5-11	Steel ball	1	12-20	Handle ass'y	1
5-12	U-type packing	1	•12-6	•Spring pin (1 piece)	
5-13	Spring retainer	1	•12-21	•Lower handle (1 piece)	
5-14	Oil seal	1	•12-22	•Upper handle (1 piece)	
6-0	Oil box ass'y	1	•12-24	•Bolt (1 piece)	
•5-4	•Cylinder (1 piece)		12-2	Handle set screw	1
•6-1	•Oil box (1 piece)		13-0	Frame ass'y	1
•6-3	•Oil strainer (1 piece)		•1-1	•Front wheel shaft (1 piece)	
•7-1	•Oil tank (1 piece)		•13-1	•Frame (2 pieces)	
6-2	Bolt	1	•13-2	•Oil box stopper(A) (2 pieces)	
6-4A	Steel ball	1	•13-4	•Oil box stopper(B) (1 piece)	
6-4B	Steel ball	1	•13-5	•Stopper (1 piece)	
6-5	O-ring	1	13-3	Spring	1
6-11	Back-up ring	1			