



**Astro Pneumatic
Tool Company**

372 Old US Highway 52 South
Mount Airy, NC 27030

Model:


5304

Product Type:

**20 TON LOW PROFILE AIR/
MANUAL BOTTLE JACK**

PARTS BREAKDOWN

Call 1.800.221.9705 for questions concerning performance of the product or other inquiries.

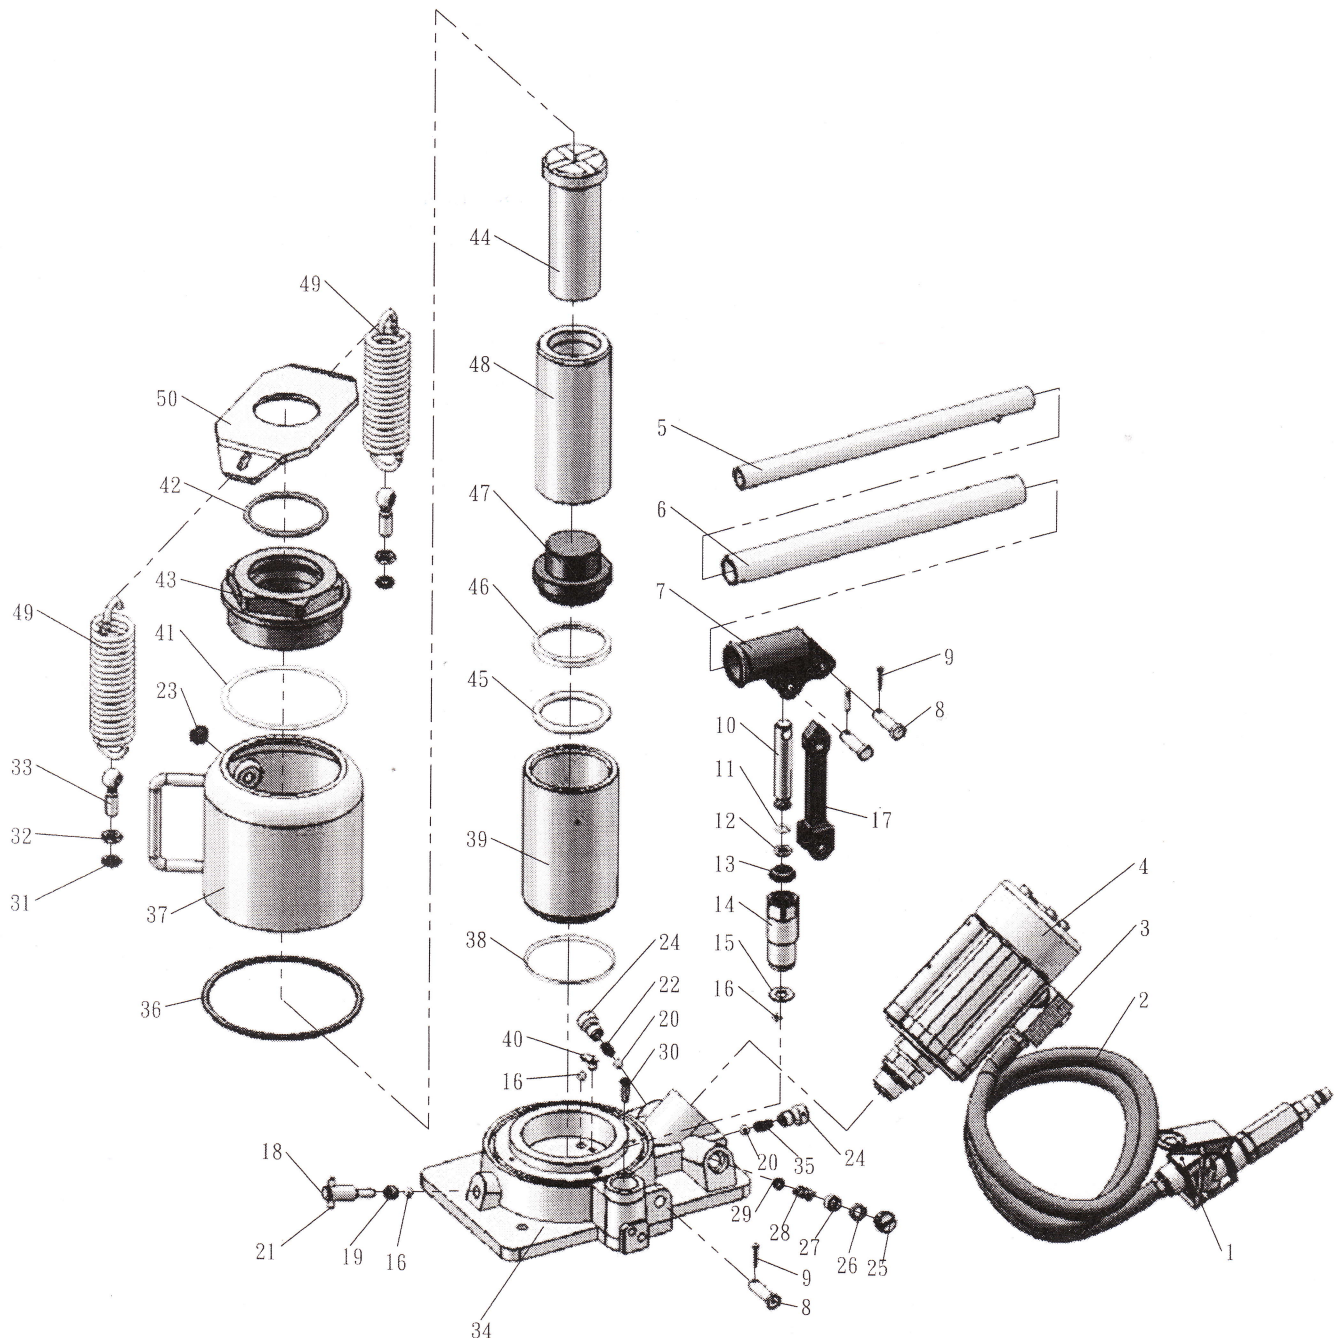



**Astro Pneumatic
Tool Company**

372 Old US Highway 52 South
Mount Airy, NC 27030

Model:

5304

Product Type:

**20 TON LOW PROFILE AIR/
MANUAL BOTTLE JACK**

PARTS BREAKDOWN

Call 1.800.221.9705 for questions concerning performance of the product or other inquiries.

Parts List

<i>Index No.</i>	<i>Part No.</i>	<i>Description</i>	<i>Qty</i>	<i>Index No.</i>	<i>Part No.</i>	<i>Description</i>	<i>Qty</i>
1	5304-01	Air Valve Assembly	1	27	5304-27	Overload Valve Screw	1
2	5304-02	Air Hose	1	28	5304-28	Safety Valve Spring	1
3	5304-03	Connector	1	29	5304-29	Overload Tapering Valve	1
4	5302-04	Air Pump	1	30	5304-30	Filter	2
5	5304-05	Upper Handle	1	31	5304-31	Spring Washer	2
6	5304-06	Lower Handle	1	32	5304-32	Nut 8	2
7	5304-07	Pump Handle Socket	1	33	5304-33	Bolt M8 x 35	2
8	5304-08	Pump Plunger Pin	3	34	5304-34	Base	1
9	5304-09	Cotter Pin	3	35	5304-35	Valve Spring	1
10	5304-10	Pump Plunger	1	36	5304-36	Reservoir Bottom Seal	1
11	5304-11	Pump Plunger Retainer	1	37	5304-37	Reservoir	1
12	5304-12	O-Ring	1	38	5304-38	Cylinder Packing	1
13	5304-13	Dust Proof Ring	1	39	5304-39	Cylinder	1
14	5304-14	Pump Reservoir	1	40	5304-40	Steel Ball Retainer	2
15	5304-15	Copper Washer	1	41	5304-41	Reservoir Top Seal	1
16	5304-16	Steel Ball 6	6	42	5304-42	O-Ring	1
17	5304-17	Plunger Connecting Rod	1	43	5304-43	Top Nut	1
18	5304-18	Release Valve Screw	1	44	5304-44	Extension Screw	1
19	5304-19	Release Valve Seal	1	45	5304-45	O-Ring	1
20	5304-20	Steel Ball 6.35	2	46	5304-46	O-Ring Returner	1
21	5304-21	Pin	1	47	5304-47	Piston	1
22	5304-22	Valve Spring	1	48	5304-48	Piston Rod	1
23	5304-23	Filler Plug	1	49	5304-49	Spring	2
24	5304-24	Screw	2	50	5304-50	Spring Plate	1
25	5304-25	Plug Screw	1				
26	5304-26	Plug Washer	1				

Call 1.800.221.9705 for questions concerning performance of the product or other inquiries.

Air Pump Assembly

Parts List

Index No.	Part No.	Description	Qty
1	5302-04-1	Connector	1
2	5302-04-2	Hex-Socket Screw M8 x 100	3
3	5302-04-3	Top Cylinder Head	1
4	5302-04-4	O-Ring 63 x 3.55	1
5	5302-04-5	Air Pump Cylinder	1
6	5302-04-6	Spring Washer 8	3
7	5302-04-7	Seal	1
8	5302-04-8	O-Ring 60 x 35	1
9	5302-04-9	Square Ring	2
10	5302-04-10	Piston	1
11	5302-04-11	Nut M5	1
12	5302-04-12	Plunger Spring Seat	1
13	5302-04-13	Plunger	1
14	5302-04-14	Spring	1
15	5302-04-15	Nut	1
16	5302-04-16	Packing Guide	1
17	5302-04-17	NL Reainer	1
18	5302-04-18	Y Seal	1
19	5302-04-19	Bottom Cylinder Head	1
20	5302-04-20	Adjusting Nut	1
21	5302-04-21	Plunger Cylinder	1
22	5302-04-22	Cover	1
23	5302-04-23	Thread Seal	1
24	5302-04-24	O-Ring 5.6 x 1.8	1
25	5302-04-25	Shuttle Valve	1
26	5302-04-26	O-Ring 23.6 x 3.55	1
27	5302-04-27	O-Ring 31.5 x 1.8	1
28	5302-04-28	Muffler Filter	1
29	5302-04-29	Muffler Cover	1
30	5302-04-30	Bolt M4x8	4
31	5302-04-31	Washer	1

