


PARTS BREAKDOWN

Model No: 53-391

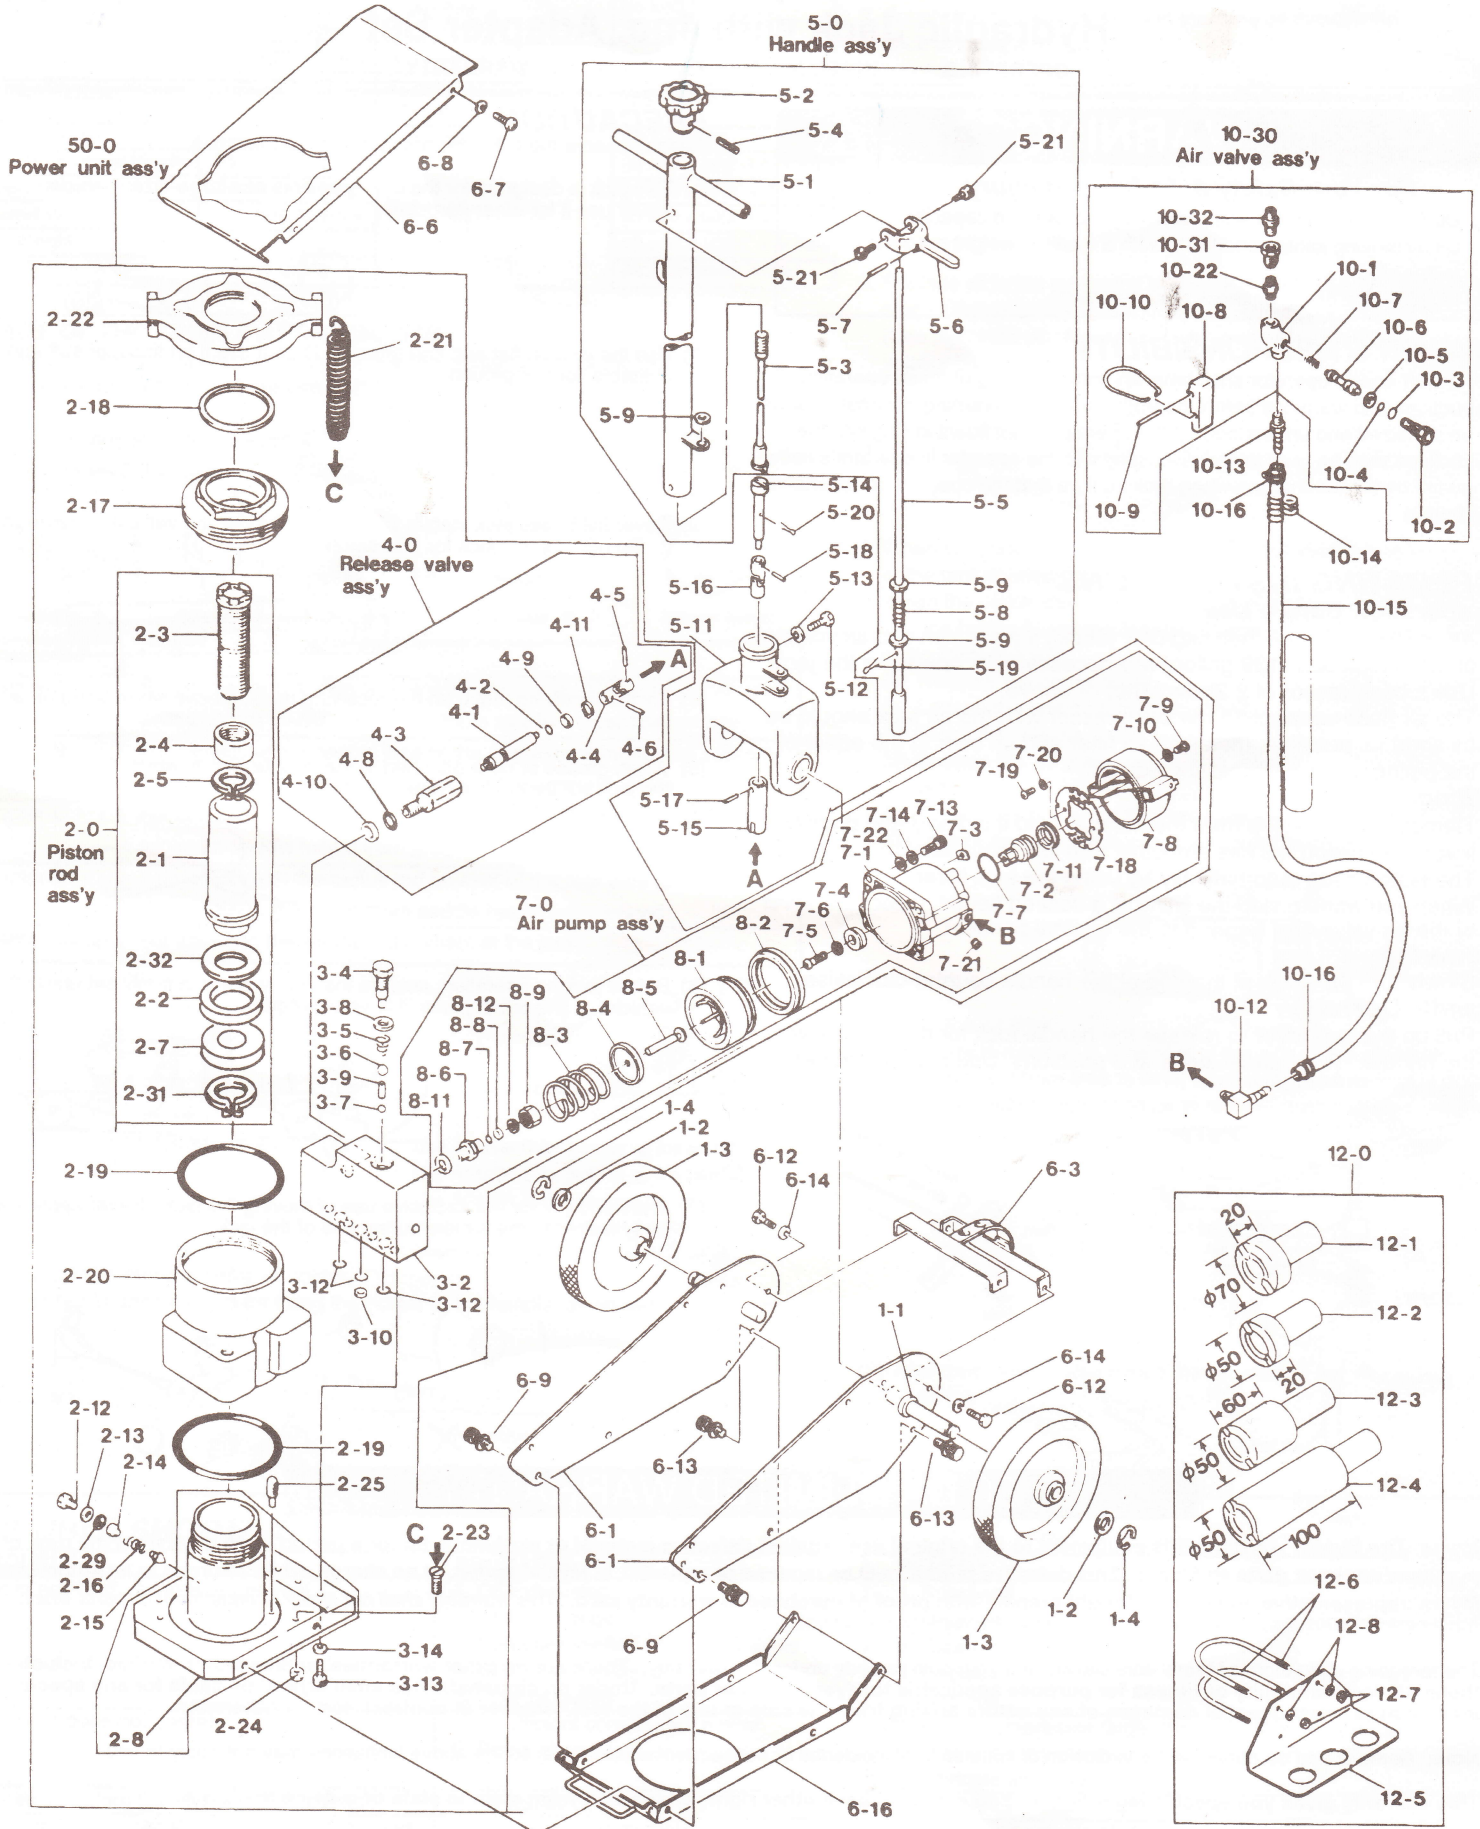

For information regarding the maintenance and use of this unit call:
1-800-820-7236

REPAIR PARTS LIST

Parts No.	Parts Name	Q'ty/set	Parts No.	Parts Name	Q'ty/set
1-1	Wheel shaft	2	7-0	Air Pump ass'y	1
1-2	Washer	2	● 7-1	● Air pump body(1 piece)	
1-3	Wheel	2	● 7-2	● Servo valve(1 piece)	
1-4	Snap ring	2	● 7-3	● Packing(1 piece)	
2-0	Piston rod ass'y	1	● 7-4	● Packing guide(1 piece)	
● 2-1	● Piston rod(1 piece)		● 7-5	● Bolt(1 piece)	
● 2-2	● Packing(1 piece)		● 7-6	● Lock washer(1 piece)	
● 2-3	● Screw(1 piece)		● 7-7	● "O"ring(1 piece)	
● 2-4	● Bush(1 piece)		● 7-8	● Muffler cover(1 piece)	
● 2-5	● Snap ring(1 piece)		● 7-9	● Bolt(4 pieces)	
● 2-7	● Packing retainer(1 piece)		● 7-10	● Lock washer(4 pieces)	
2-8	Cylinder	1	● 7-11	● Packing(1 piece)	
2-12	Bolt	2	● 7-13	● Bolt(4 pieces)	
2-13	Packing	2	● 7-14	● Spring washer(4 pieces)	
2-14	Spring retainer	1	● 7-18	● Plate(1 piece)	
2-15	Safety valve	1	● 7-19	● Screw(2 pieces)	
2-16	Spring	1	● 7-20	● Spring washer(2 pieces)	
2-17	Nut	1	● 7-21	● Plug(1 piece)	
2-18	Oil seal	1	● 7-22	● Washer(4 pieces)	
2-19	"O"ring	2	8-1	Air piston	1
2-20	Oil tank	1	8-2	Packing	1
2-21	Spring	4	8-3	Spring	1
2-22	Spring hunger	1	8-4	Spring retainer	1
2-23	Machine screw	4	8-5	Plunger	1
2-24	Nut	4	8-6	Cylinder	1
2-25	Oil strainer	1	8-7	"O"ring	1
2-29	Packing	1	8-8	Back-up ring	1
2-31	Snap ring	1	8-9	Nut	1
2-32	Back-up ring	1	8-11	Packing	1
3-2	Oil box	1	8-12	Back-up retainer	1
3-4	Bolt	1	10-30	Air valve ass'y	1
3-5	Spring	1	● 10-1	● Valve body(1 piece)	
3-6	Steel ball	1	● 10-2	● Nut(1 piece)	
3-7	Steel ball	1	● 10-3	● "O"ring(1 piece)	
3-8	Copper packing	1	● 10-4	● "O"ring(1 piece)	
3-9	Separator	1	● 10-5	● Packing(1 piece)	
3-10	Back-up ring	1	● 10-6	● Throttle(1 piece)	
3-12	"O"ring	3	● 10-7	● Spring(1 piece)	
3-13	Bolt	3	● 10-8	● Lever(1 piece)	
3-14	Spring washer	3	● 10-9	● Lever pin(1 piece)	
4-0	Release valve ass'y	1	● 10-10	● Lock lever(1 piece)	
● 4-1	● Valve(1 piece)		● 10-12	● Pump elbow(1 piece)	
● 4-2	● "O"ring(1 piece)		● 10-13	● Hose connector(1 piece)	
● 4-3	● Guide(1 piece)		● 10-14	● Spring(1 piece)	
● 4-4	● Universal joint(1 piece)		● 10-15	● Air hose(1 piece)	
● 4-5	● Spring pin(1 piece)		● 10-16	● Hose band(2 pieces)	
● 4-6	● Spring pin(1 piece)		● 10-22	● Filter(1 piece)	
● 4-8	● "O"ring(1 piece)		● 10-31	● Bush(1 piece)	
● 4-9	● Washer(1 piece)		● 10-32	● Plug(1 piece)	
● 4-10	● Packing(1 piece)		50-0	Power unit ass'y	1
● 4-11	● Snap ring(1 piece)		12-0	Holder adaptor ass'y	1
5-0	Handle ass'y	1	● 12-1	● Adaptor-A(1 piece)	
● 5-1	● Handle(1 piece)		● 12-2	● Adaptor-B(1 piece)	
● 5-2	● Knob(1 piece)		● 12-3	● Adaptor-C(1 piece)	
● 5-3	● Connecting rod(1 piece)		● 12-4	● Adaptor-D(1 piece)	
● 5-4	● Spring pin(1 piece)		● 12-5	● Holder adaptor(1 piece)	
● 5-5	● Stopper(1 piece)		● 12-6	● U-Bolt(2 pieces)	
● 5-6	● Lock lever(1 piece)		● 12-7	● Not(4 pieces)	
● 5-7	● Spring pin(1 piece)		● 12-8	● Spring washer(4 pieces)	
● 5-8	● Spring(1 piece)				
● 5-9	● Washer(3 pieces)				
● 5-11	● Handle fork(1 piece)				
● 5-12	● Bolt(1 piece)				
● 5-13	● Spring washer(1 piece)				
● 5-14	● Connecting rod(1 piece)				
● 5-15	● Connecting rod(1 piece)				
● 5-16	● Universal joint(1 piece)				
● 5-17	● Spring pin(1 piece)				
● 5-18	● Spring pin(1 piece)				
● 5-19	● Cotter pin(1 piece)				
● 5-20	● Cotter pin(1 piece)				
● 5-21	● Bolt(2 pieces)				
6-1	Frame	1 set			
6-3	Handle fork bracket	1			
6-6	Upper cover	1			
6-7	Machine screw	4			
6-8	Lock washer	4			
6-9	Bolt	4			
6-12	Bolt	4			
6-13	Bolt	4			
6-14	Spring washer	4			
6-16	Lower cover	1			

REPAIR KITS

Parts No.	Parts Name	Q'ty/set
2-2	Packing	1
2-13	Packing	2
2-19	"O"ring	2
3-12	"O"ring	3
4-2	"O"ring	1
4-8	"O"ring	1
4-10	Packing	1
7-11	Packing	1
8-2	Packing	1
8-7	"O"ring	1
8-8	Back-up ring	1
8-11	Packing	1
10-3	"O"ring	1
10-4	"O"ring	1
10-5	Packing	1

For information regarding the maintenance and use of this unit call:
1-800-820-7236