



PARTS SHEET
MODEL 5-51202
CAPACITY 2 TON
MARCH 1972

SS-720

OPERATING INSTRUCTIONS

1. Upon receiving Jack, open release valve and pump handle several times. This will eliminate any airbound condition that may have occurred during shipment.
2. To raise Jack, close release valve and operate pump handle.
3. To lower, open release valve.

FAILURE TO OPERATE

1. Release may not be completely closed.
2. Airbound - See Instruction No. 1.
3. Foreign matter in valve line - Repeat Instruction No. 1.
4. Too much oil - Lower to filler screw level.
5. Interior parts may be worn allowing oil to by-pass. Contact nearest Franchised Service Depot.

FAILURE TO LIFT LOAD

1. Airbound pump - Operating Instructions No. 1.
2. By-pass at valve balls - Operating Instructions No. 1. Reseat valve balls using small brass rod and hammer.
3. Foreign matter on release seat - Operating Instructions No. 1.
4. Lack of oil - With lifting arm down, fill to filler plug level.
5. Overload set too low - Contact nearest Franchised Service Depot from list on back page.

GENERAL INSTRUCTIONS


1. Keep all moving parts well lubricated to prevent rust and excessive wear.
2. Repair Kit Number 5-551.


CAUTION - This Jack is designed for lifting purposes only.
Always use garage stands to support vehicle before making under-vehicle repairs.

WARRANTY

These Jacks, Pumps and Rams are fully guaranteed against defective material and workmanship for 90 days from date of original sale to user when submitted or shipped with proof of purchase date, transportation prepaid, to the nearest franchised service depot for inspection. (Do not return to factory.) This warranty does not cover units that have been altered or attachments added to them which are not recommended by the manufacturer. The use of hydraulic brake or shock absorber fluid, alcohol, kerosene or other deleterious fluids voids this warranty as does improper use through overloading or any other abusive practice or accident.


AUTO SPECIALTIES MANUFACTURING COMPANY
St. Joseph, Michigan

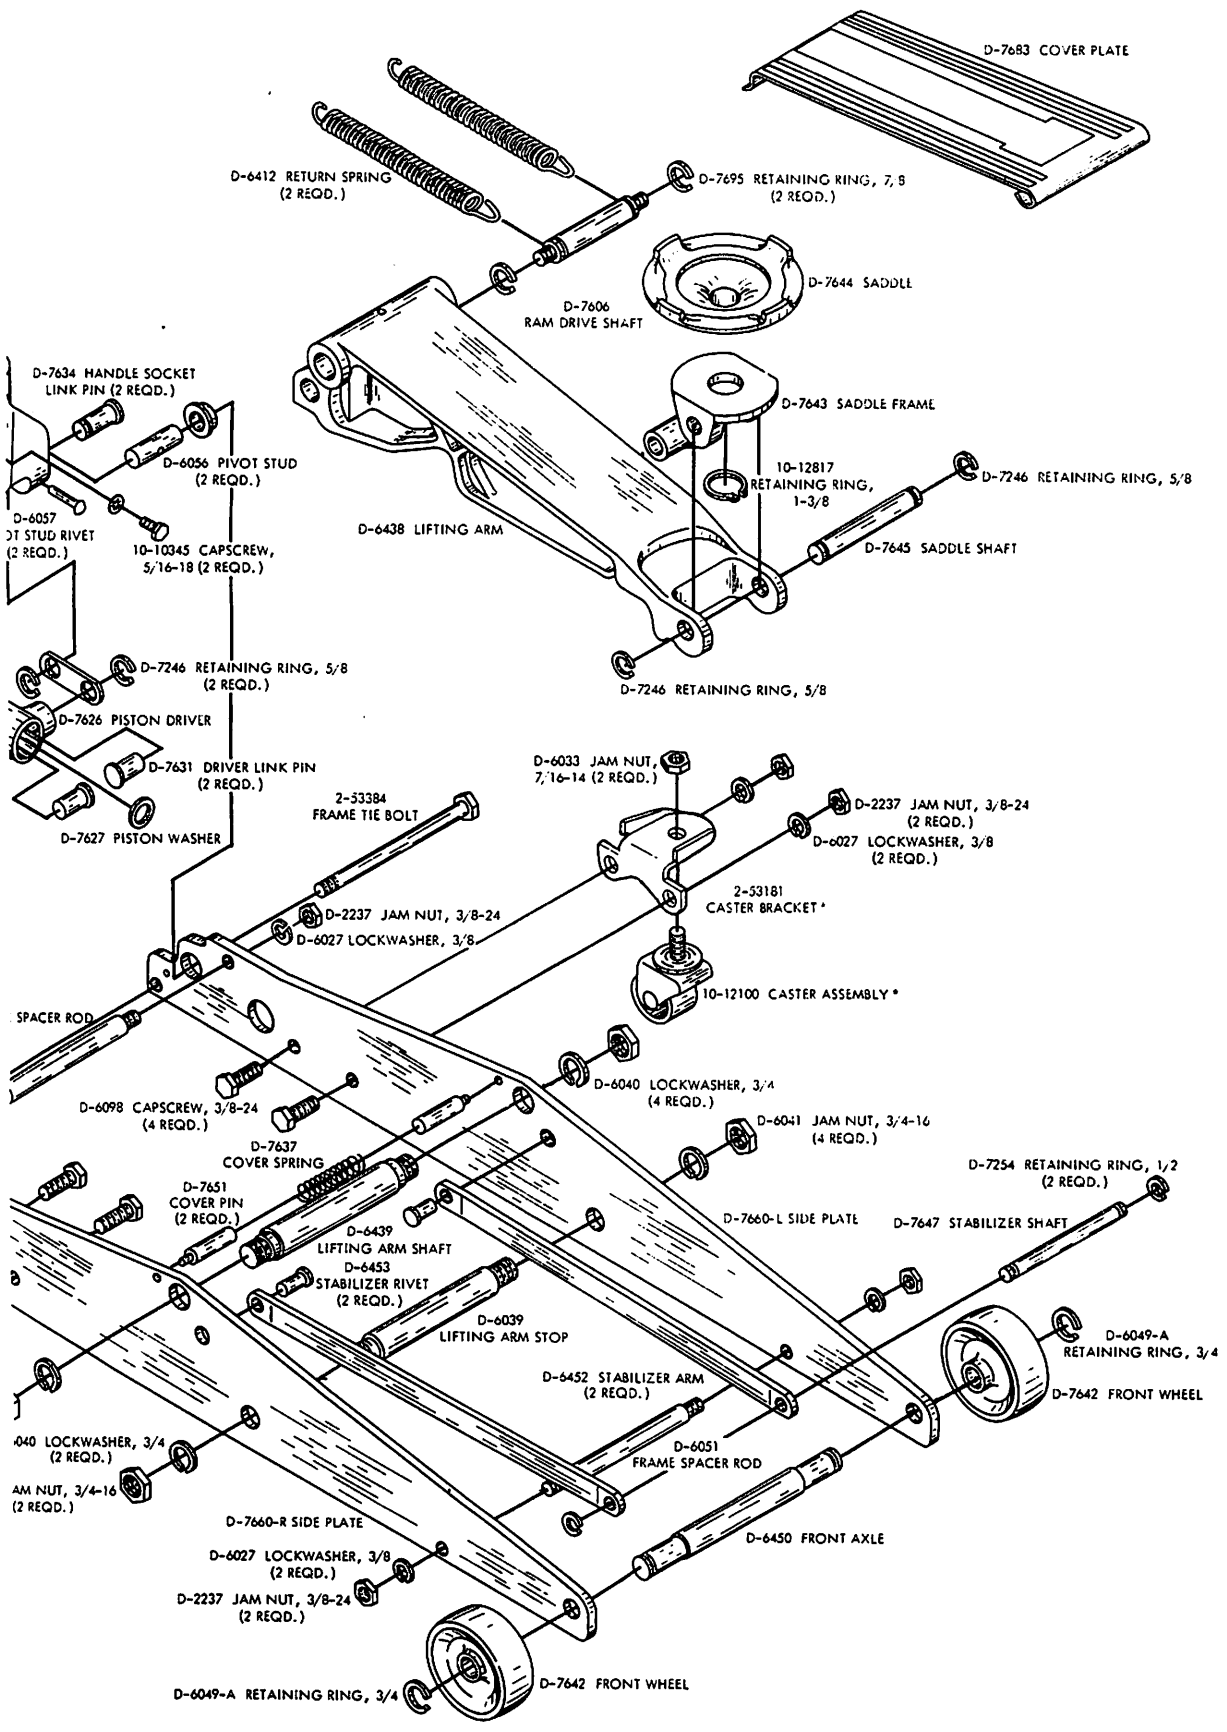

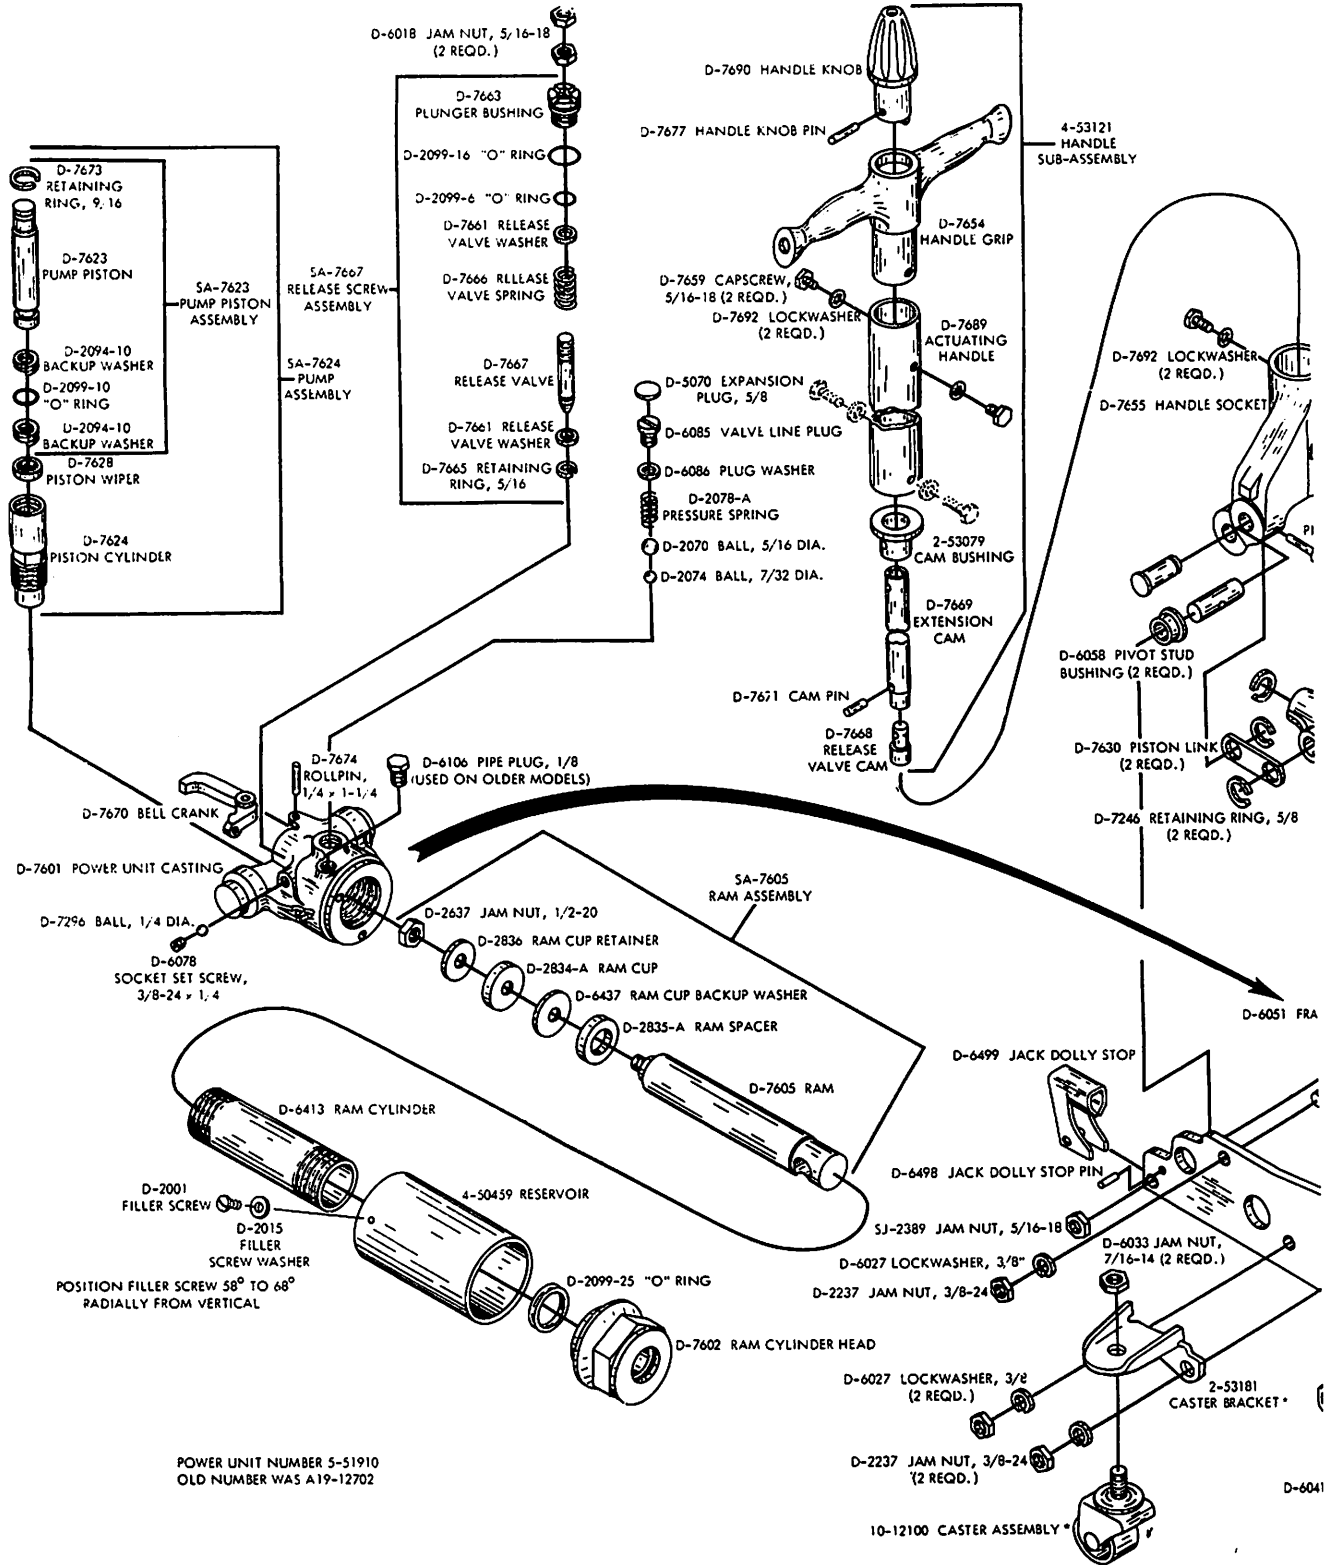

POWER UNIT NUMBER 5-51910
OLD NUMBER WAS A19-12702

* WITH CASTER BRACKET D-6095
ORDER BRACKET NUMBER 10-12056
AND CASTER ASS'Y. NUMBER 10-12100.

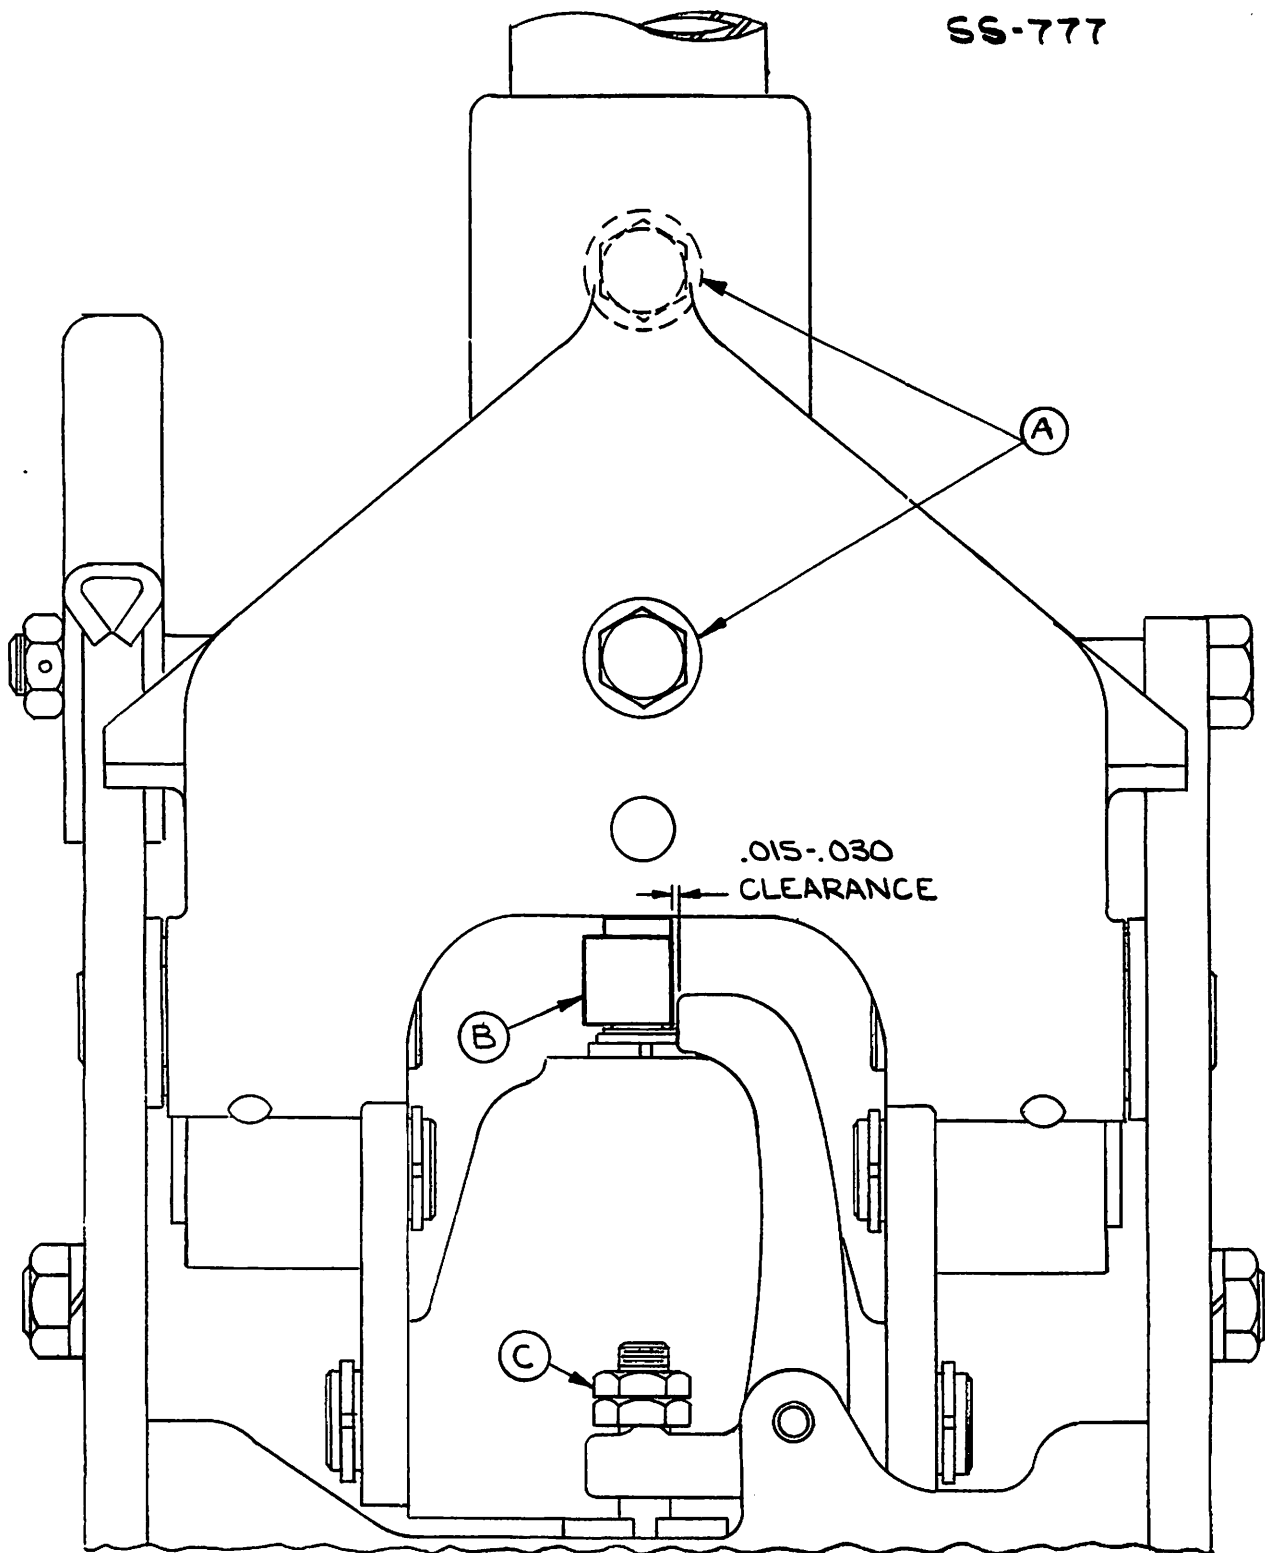

RELEASE VALVE ADJUSTING INSTRUCTIONS

AFTER HANDLE ASSEMBLY IS SECURELY INSTALLED IN HANDLE SOCKET WITH BOLTS AND LOCK WASHERS(A), ROTATE KNOB SO THAT HIGH SIDE OF CAM (B) IS IN POSITION SHOWN. IF ADJUSTMENT IS REQUIRED, LOOSEN JAM NUTS (C), CHECK FOR PROPER CLEARANCE AND RETIGHTEN NUTS.