

Operating Instructions • Warning Information
• Parts Breakdown



! WARNING

- DO NOT EXCEED RATED CAPACITY OF 1100 LBS.
- NEVER CRAWL UNDER THE SUSPENDED LOAD FOR ANY REASON.
- BE SURE ENGINE IS SUPPORTED SECURELY BEFORE PROCEEDING.
- TO AVOID PERSONAL INJURY OR PROPERTY DAMAGE, READ, UNDERSTAND AND FOLLOW ALL INSTRUCTIONS BEFORE USING.

! WARNING



ALWAYS READ
INSTRUCTIONS



ALWAYS WEAR
SAFETY
GOGGLES

! WARNING

FAILURE TO OBSERVE THESE WARNINGS COULD RESULT IN INJURY.



THIS INSTRUCTION MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.

READ THIS INSTRUCTION MANUAL CAREFULLY AND UNDERSTAND ALL INFORMATION BEFORE OPERATING THIS TOOL.




- Always wear impact-resistant eye and face protection that meets ANSI Z87-1 and OSHA standards when operating or performing maintenance on this tool.
- Keep the tool in efficient operating condition.
- Do not remove any labels. Replace any damaged labels.
- Never crawl underneath suspended load for any reason.
- This tool is designed to be an engine support bar when a transverse axle or transmission is being repaired or removed. Do not use this tool for any purpose other than for which it was designed.
- Do not exceed the rated capacity (1100 lbs.) of this tool.

- The vehicle's lip structure strength must be able to support the weight of the engine; the lip structure surface must be flat to prevent the engine support bar from slipping.
- After the support bar is positioned correctly, tighten all lock knobs, nuts, and bolts before applying the load.
- Stay out from underneath a load which is suspended by a lifting or support device.

CSE-1100ESB

Engine Support Bar

PARTS BREAKDOWN - CSE-1100ESB

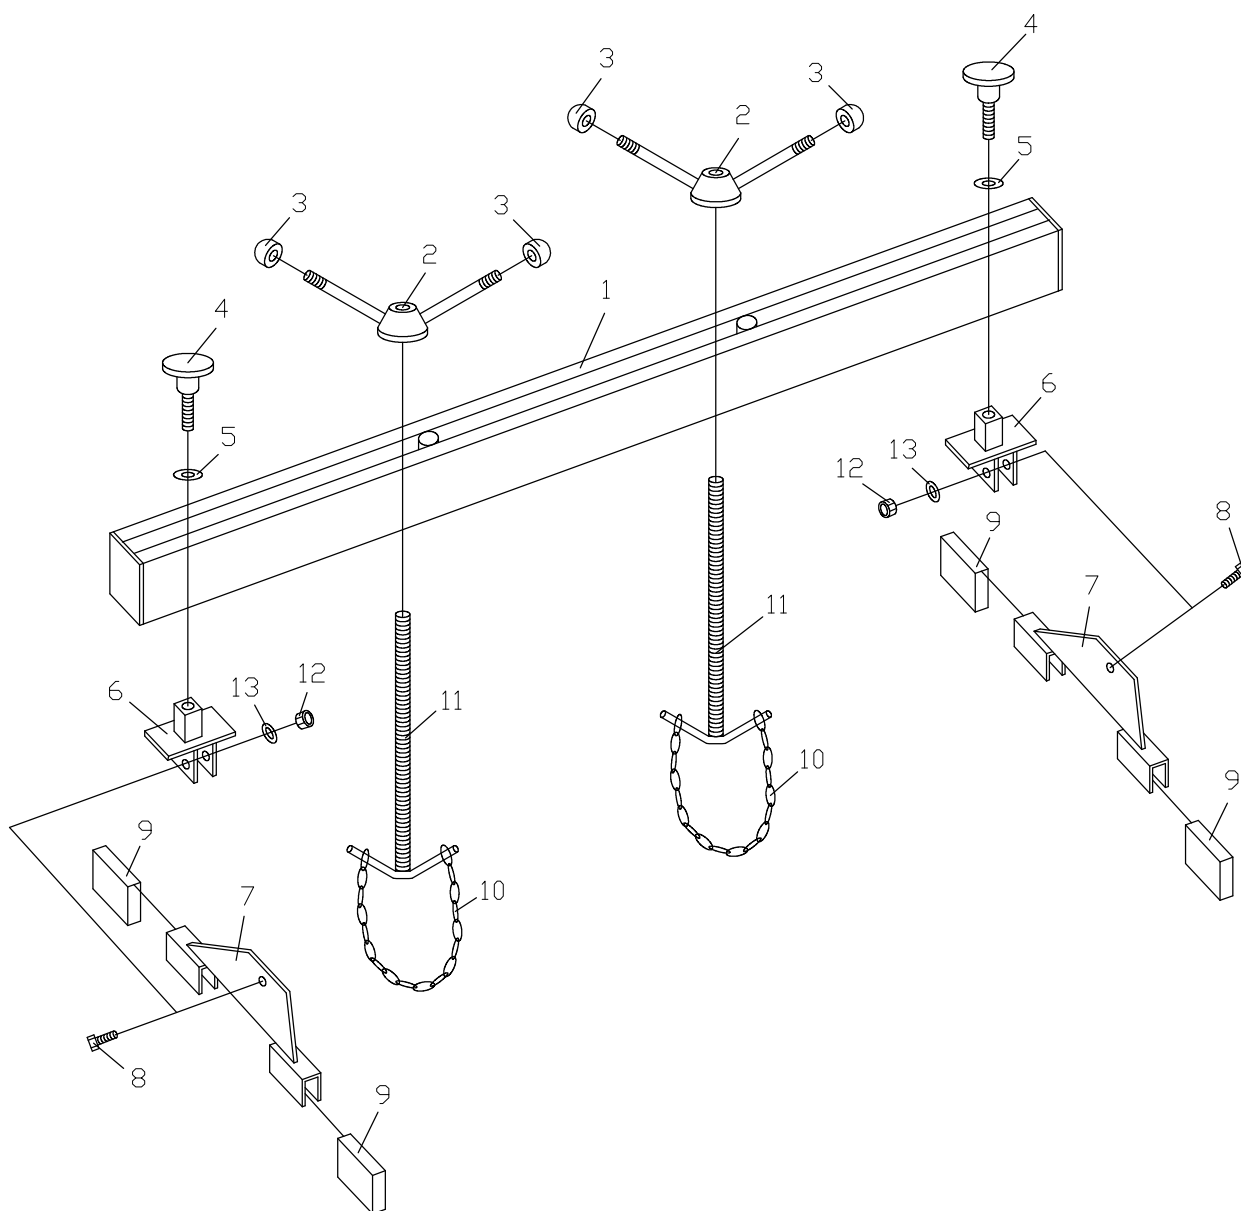

OPERATION...

1. Inspect the mounting areas of the vehicle's lip structure to determine the strongest area in which to mount the engine support bar.

Note: Do not place supports on the fenders.

2. Attach the engine to the support bar by wrapping the chains around engine and attaching the chains to the J-hooks.

3. Turn the handles on the adjustable screws to lift the engine.

MAINTENANCE...

Periodically clean and lubricate the threaded portion of the hook assemblies.

REF. NO.	PART NO.	DESCRIPTION	QTY.
1		BEAM	1
2	RSESB02	T-HANDLE -WITH (2) #3	2
3		PLASTIC KNOB (INCLUDED W/#2)	4
4	*	CAPSCREW	2
5	*	WASHER (SMALL)	2
6	RSESB06	STANDING BLOCK	2
7	RSESB07	STANDING BRACKET-WITH (2) #9	2
8	*	BOLT M10X30	2
9		RUBBER CUSHION (INCLUDED W/#7)	4
10	*	CHAIN	2
11	RSESB11	ADJUST SCREW	2
12	*	NUT	2
13	*	WASHER	2

*Available in bolt kit, RSESBK.

Ref. No.'s without accompanying part numbers are not available individually.

WARRANTY COVERAGE

Cornwell Quality Tools Company ("Cornwell") warrants against defects in material and workmanship on this product for a period of ONE (1) YEAR from the date of original retail purchase. Subject to the conditions and limitations set forth below, Cornwell will, at its option, either repair or replace any part of the product(s) that proves defective by reason of improper workmanship or materials.

This warranty does not cover any damage to this product that results from accident, abuse, misuse, natural or personal disaster, or any unauthorized disassembly, repair, or modification. Repairs, disassembly and modification are only authorized to be made by Cornwell or a warranty service center approved by Cornwell.

WARRANTY SERVICE

To obtain warranty service, contact your Cornwell dealer, or you may ship the product to the nearest Cornwell Authorized Warranty Center (see listing), transportation prepaid. You must include your name and address, proof of the date of original retail purchase (receipt), and a detailed description of the problem you are experiencing and suspected defect.

EXCLUSIONS AND LIMITATIONS

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. CORNWELL SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, TO THE EXTENT PERMITTED BY APPLICABLE LAW, ANY WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF CORNWELL CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

IN NO EVENT SHALL CORNWELL BE LIABLE TO THE PURCHASER OR TO THE USER OF A CORNWELL PRODUCT FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES BASED UPON BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, TORT, OR ANY OTHER LEGAL THEORY. SUCH DAMAGES INCLUDE, WITHOUT LIMITATION, EXPENSES, LOST REVENUES, LOST SAVINGS, LOST PROFITS, OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM THE PURCHASE, USE OR INABILITY TO USE THE CORNWELL PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages or exclusions or limitation on the duration of implied warranties or conditions, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by state.

Repair kits and replacement parts are available for many Cornwell products, regardless of whether or not the product is still covered by a warranty plan.

Cornwell Quality Tools Company
667 Seville Road • Wadsworth, OH 44281-1094

