



Pistol Style Grease Gun Operating Instructions

For use with Model No. CTG-PGGG

CAUTION: ALWAYS WEAR EYE PROTECTION WHEN OPERATING THE GREASE GUN.

How to Cartridge Load Your Grease Gun

1. Remove the head from the grease gun barrel.
2. Pull the "T" handle plunger rod back until it is fully retracted and locked into position.
3. Remove the cap from the grease gun cartridge and place the open end of the cartridge in the barrel of the grease gun. Push the cartridge into the barrel. A slight twist will seat the follower in the tube.
4. Remove the cap from the grease gun cartridge.
5. Screw the head assembly on the barrel of the grease gun.
6. Release the lock on the follower rod and push into the body.

Bulk Loading with Grease Filling Pump

MAKE SURE THE OLD GREASE CARTRIDGE IS REMOVED BEFORE LOADING.


1. Wipe grease filler adapter clean.
2. Insert grease gun filler nipple into the filler fitting on the pump.
3. Hold the grease gun to the filler pump until the gun is filled.
4. Push rod follower back into the barrel.

Suction Loading

1. Remove the head from the grease gun barrel.
2. Insert the open end of the grease gun 2" into the bulk grease container.
3. Slowly pull the follower rod back until the rod is fully extracted.
4. Lock the follower rod in place.

5. Screw the head assembly back on the barrel of the grease gun.
6. Release the follower rod and push into body.
7. Press the bleeder valve to release air.
8. The grease gun is now ready to use.

Note: Air pockets may form in the container, and can cause the gun to bind or stop running. If the grease gun does bind or stops working, push the air vent plug. If the grease gun is still not working, loosen the head of the gun allowing the air to escape. Then retighten the head assembly and continue to operate.

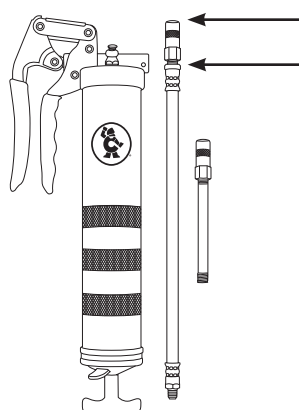

This coupler is available as replacement part number RSGGGF.

CTG-PGGG 05/08/07



Pistol Style Grease Gun Operating Instructions

For use with Model No. CTG-PGGG

CAUTION: ALWAYS WEAR EYE PROTECTION WHEN OPERATING THE GREASE GUN.

How to Cartridge Load Your Grease Gun

1. Remove the head from the grease gun barrel.
2. Pull the "T" handle plunger rod back until it is fully retracted and locked into position.
3. Remove the cap from the grease gun cartridge and place the open end of the cartridge in the barrel of the grease gun. Push the cartridge into the barrel. A slight twist will seat the follower in the tube.
4. Remove the cap from the grease gun cartridge.
5. Screw the head assembly on the barrel of the grease gun.
6. Release the lock on the follower rod and push into the body.

Bulk Loading with Grease Filling Pump

MAKE SURE THE OLD GREASE CARTRIDGE IS REMOVED BEFORE LOADING.


1. Wipe grease filler adapter clean.
2. Insert grease gun filler nipple into the filler fitting on the pump.
3. Hold the grease gun to the filler pump until the gun is filled.
4. Push rod follower back into the barrel.

Suction Loading

1. Remove the head from the grease gun barrel.
2. Insert the open end of the grease gun 2" into the bulk grease container.
3. Slowly pull the follower rod back until the rod is fully extracted.
4. Lock the follower rod in place.

5. Screw the head assembly back on the barrel of the grease gun.
6. Release the follower rod and push into body.
7. Press the bleeder valve to release air.
8. The grease gun is now ready to use.

Note: Air pockets may form in the container, and can cause the gun to bind or stop running. If the grease gun does bind or stops working, push the air vent plug. If the grease gun is still not working, loosen the head of the gun allowing the air to escape. Then retighten the head assembly and continue to operate.

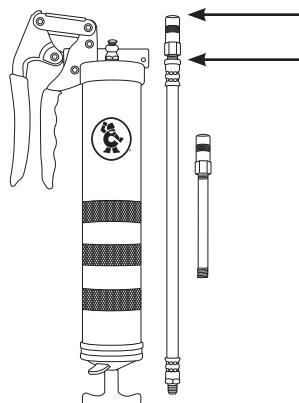

This coupler is available as replacement part number RSGGGF.

CTG-PGGG 05/08/07