




## INFORMATION TO CONVERT FROM LINCOLN TO HASKEL AIR MOTOR (713036 KIT)

Double Pump Haskel Air-Draulic Presses –  
6-425, 6-525, 6-450, 6-550, 6-475, 6-575, 6-850 and 6-950

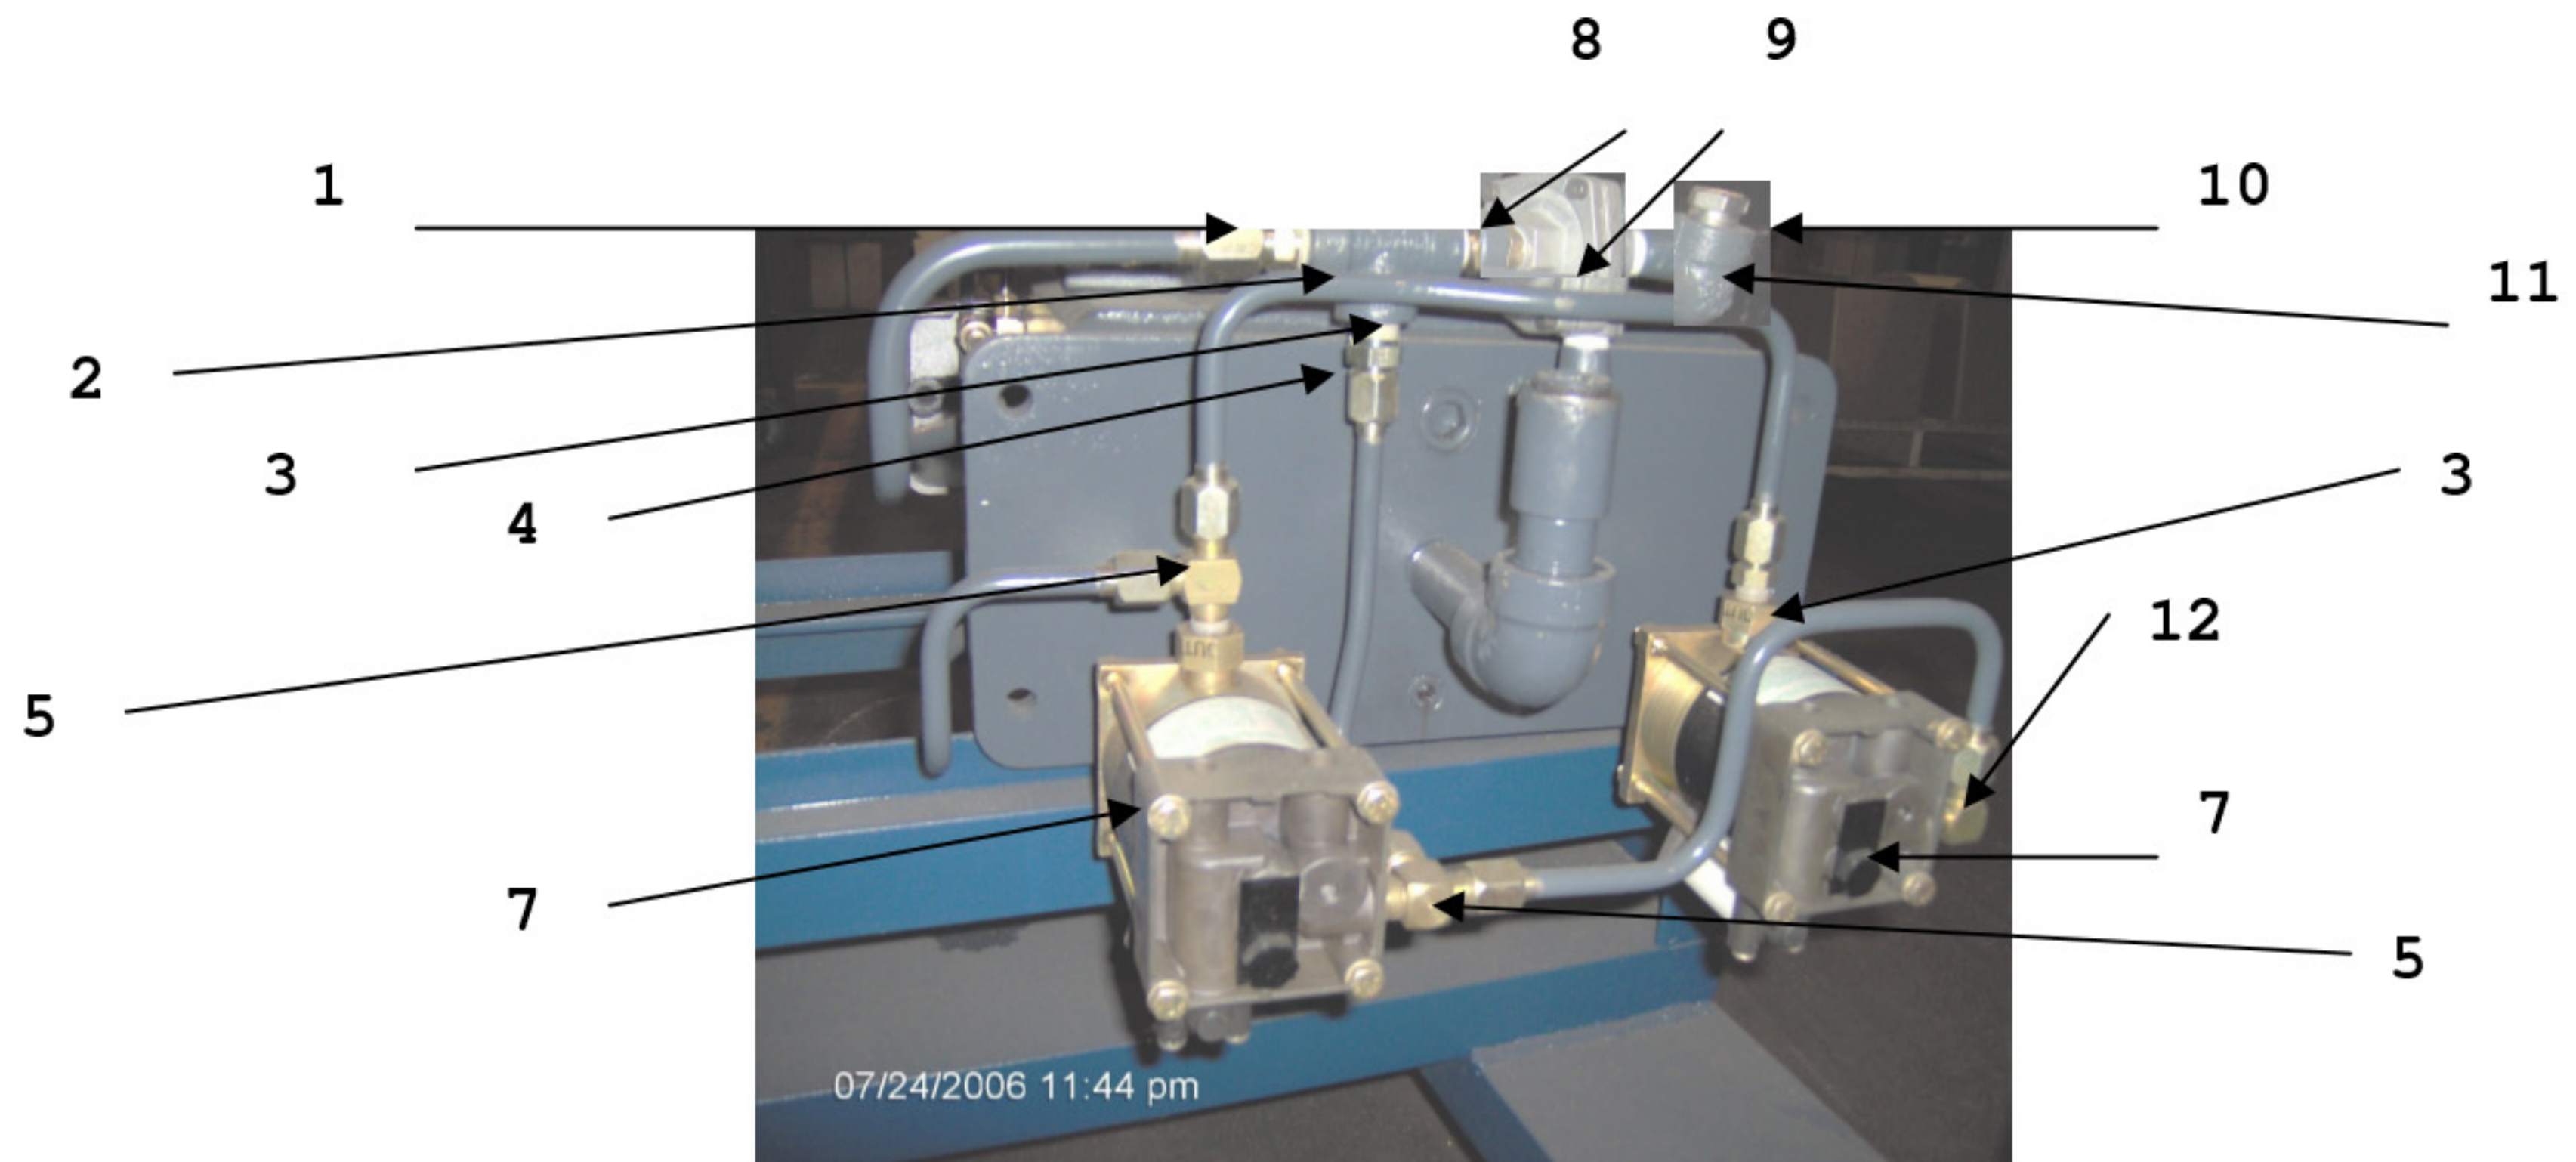

Item #	Part description	Part #	Qty.	Item #	Part description	Part #	Qty.
1	Straight 1/2x3/8 nptf	1251	1	2	Tee pipe 3/8 threa	1333	1
3	Straight 3/8x1/4 nptf	1247	2	4	Reducer 3/8x1/4	1102	1
5	Run tee 3/8x1/4	1249	2	7	Air Pump	63453	2
8	Nipple 3/8x3/8	58226	1	9	Quick exhaust	1911	1
10	Breather vent	7368	1	11	3/8-90 deg elbow	1108	1
12	3/8x1/4 90 deg	1248	1				

### INSTRUCTIONS

- A. Lock out air supply. Drain oil.
- B. Disconnect tubes to Lincoln pumps & remove pumps from reservoir and discard.  
**NOTE – If you find reservoir is dirty, clean up before proceeding.**
- C. Assemble items together as shown.
- D. Put o-rings item 4 in place and bolt both assemblies to reservoir.
- E. Now fill reservoir with clean hydraulic oil.  
Now press is ready for operation.

### Items not shown

63491 Adaptor plate 2 pc  
912 O-ring fits on adaptor 2 pc  
43305 Bolts for adaptor plate 8 pc