




## INFORMATION TO CONVERT FROM LINCOLN TO HASKEL AIR MOTOR (713035 KIT)

Single Pump Haskel Air-Draulic Presses –  
6-225, 6-425, 6-250, 6-450, 6-275, 6-475, 6-650 and 6-850

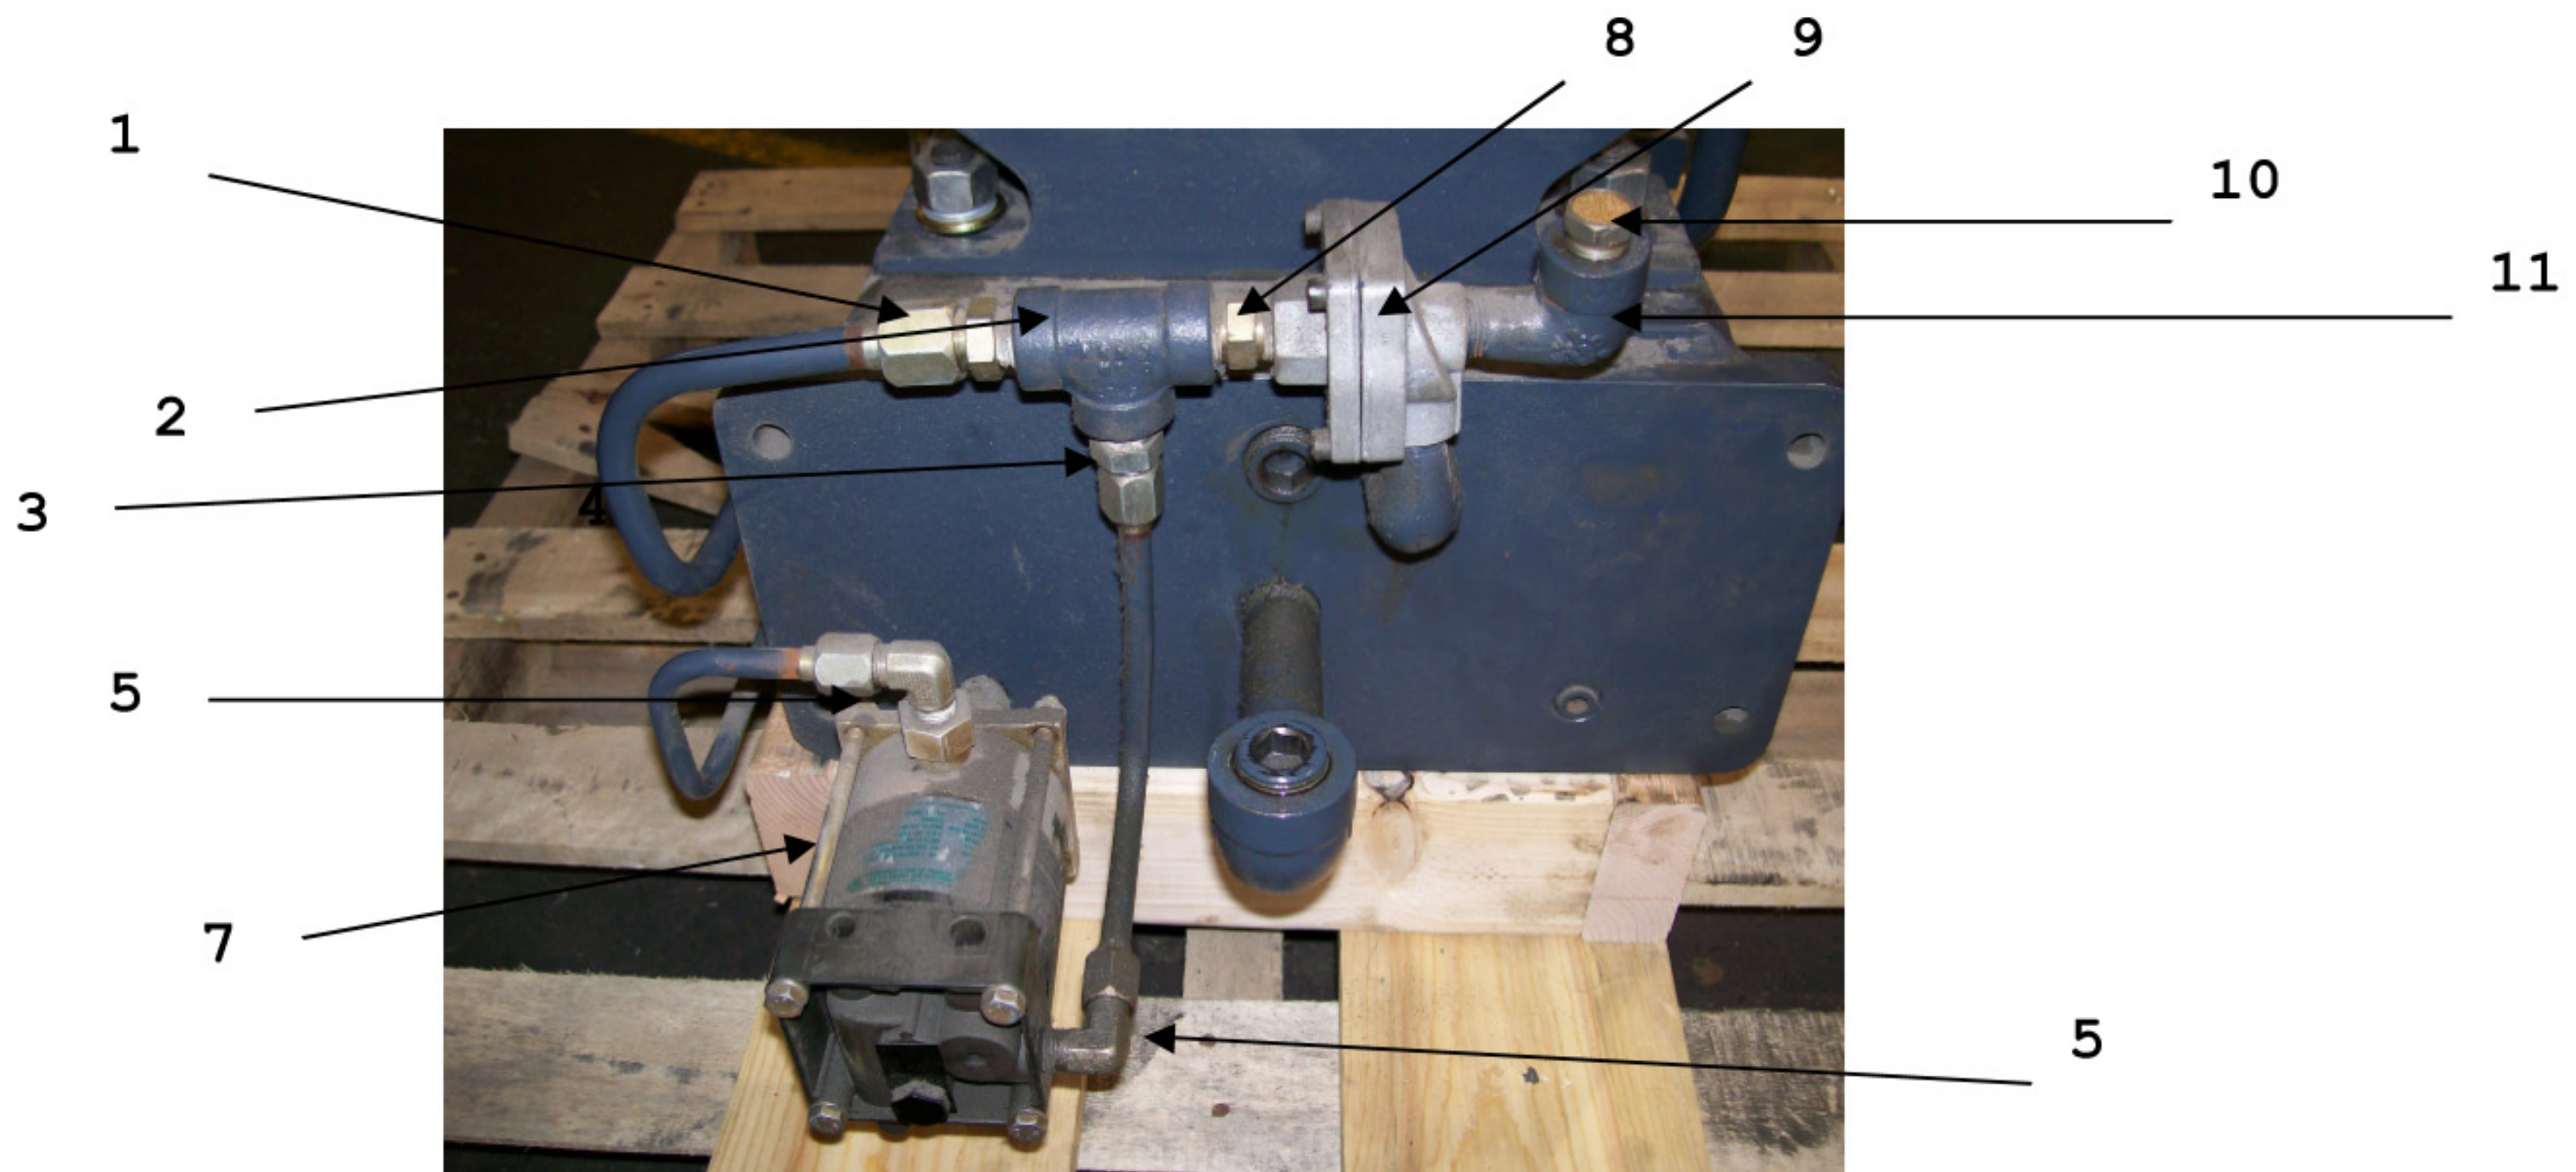

Item #	Part description	Part #	Qty.	Item #	Part description	Part #	Qty.
1	Straight 1/2x3/8 npts	1251	1	2	Tee Pipe 3/8 threa	1333	1
3	Straight 3/8x1/4 nptf	1247	2	4	Reducer 3/8x1/4	1102	1
5	3/8x1/4 90 deg	1248	2	7	Air Pump	63453	1
8	Nipple 3/8x3/8	58226	1	9	Quick Exhaust	1911	1
10	Breather vent	7368	1	11	3/8 90 deg	1108	1

### INSTRUCTIONS

- Lock out air supply. Drain oil.
- Disconnect tubes to Lincoln pumps & remove pumps from reservoir and discard.  
**NOTE – If you find reservoir is dirty, clean up before proceeding.**
- Assemble items together as shown.
- Put o-rings item 4 in place and bolt both assemblies to reservoir.
- Now fill reservoir with clean hydraulic oil.  
Now press is ready for operation.

### Items not shown

63491 Adaptor plate 1 pc  
912 O-ring fits on adaptor 1 pc  
43305 Bolts for adaptor plate 4 pc