



For Repair Parts, call 1-800-323-0620

24 hours a day – 365 days a year

Please provide following information:

-Model number
-Part description and number
as shown in parts list

Address parts correspondence to:

Granger Parts
P.O. Box 3074
1657 Shermer Road
Northbrook, IL 60065-3074 U.S.A.

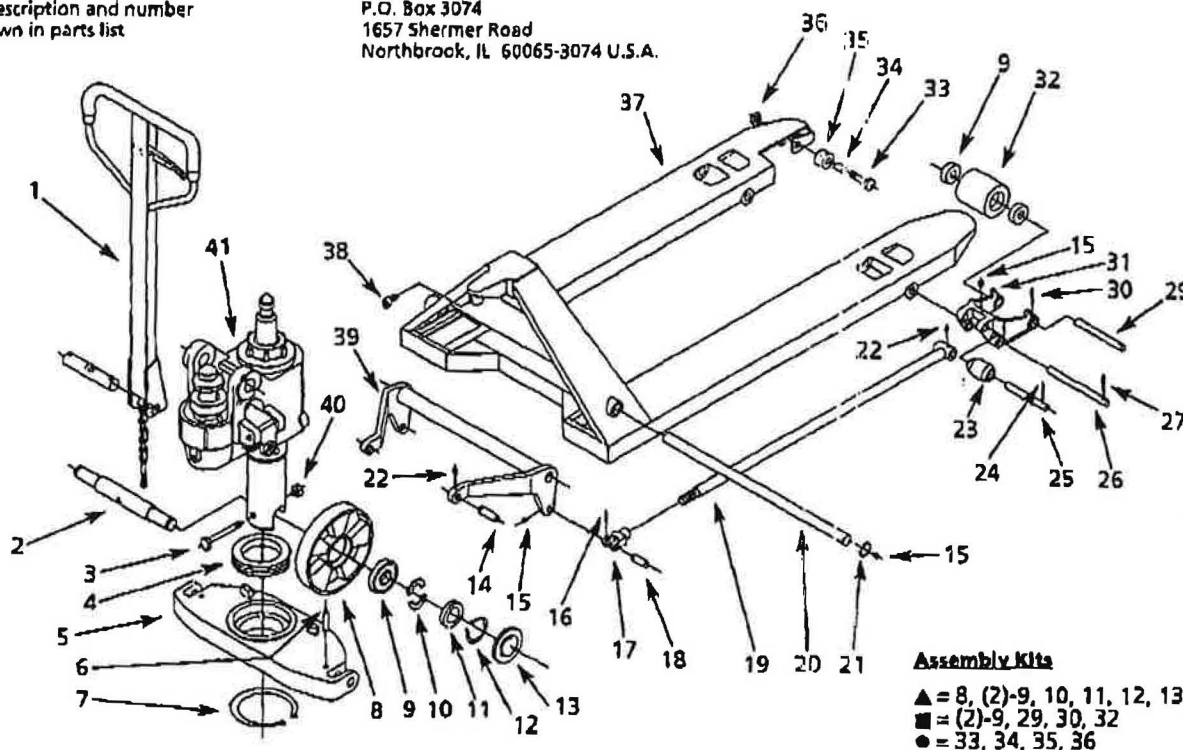


Figure 10 - Repair Parts Illustration for General Assembly

Repair Parts List for General Assembly

Ref. No.	Description	Part No. for 4YX97	Qty.	Ref. No.	Description	Part No. for 4YX97	Qty.
1	Handle assembly (See Figure 11)	97-1	1	23	Exit Wheel	97-23	2
2	Wheel shaft	97-2	1	24	Roll pin	97-24	2
3	Bolt	97-3	1	25	Push pin	97-25	2
4	Bearing	97-4	1	26	Exit axle	97-26	2
5	Base	97-5	1	27	Roll pin	97-27	2
6	Roll pin	97-6	2	29	Lift axle	■	2
7	Snap ring	97-7	1	30	Roll pin	■	2
8	Wheel -main	▲	2	31	Wheel bracket	97-31	2
9	Bearing	6L026, ▲, ■	8	32	Lift wheel	■	2
10	Split washer	▲	2	33	Bolt	●	2
11	Washer	▲	2	34	Bushing	●	2
12	Snap ring	▲	2	35	Entry wheel	●	2
13	Wheel cap	97-13, ▲	2	36	Nut	●	2
14	Pin	97-14	2	37	Fork base	97-37	2
15	Oiler	97-15	10	38	Screw	97-38	1
16	Roll pin	97-16	2	39	Rocker arm	97-39	1
17	Rod end	97-17	2	40	Nut	97-40	1
18	Pin	97-18	2	41	Hydraulic Pump (See Figure 11);	97-41	1
19	Push rod	97-19	2		page 7		
20	Rocker shaft	97-20	1	▲	Main Wheel Kit	97-42	1
21	Snap ring	97-21	2	■	Lift Wheel Kit	97-43	1
22	Oiler	97-22	2	●	Entry Wheel Kit	97-44	1

For Repair Parts, call 1-800-323-0620**24 hours a day – 365 days a year**


Please provide following information:

- Model number
- Part description and number as shown in parts list

Address parts correspondence to:
Greinger Parts
P.O. Box 3074
1657 Shermer Road
Northbrook, IL 60065-3074 U.S.A.

Assembly Kits

- ▲ = 101-108
- = 117-122
- = 126-129
- ◆ = 131-135
- ▼ = 140-141, 143-144
- n = 147-149
- s = 150-151

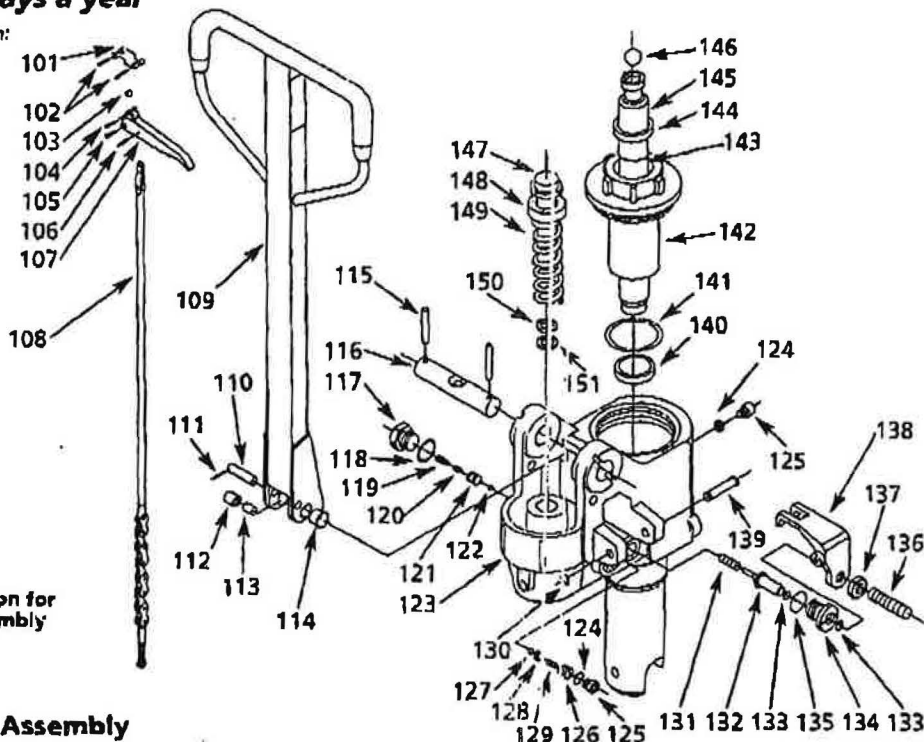Figure 11 - Repair Parts Illustration for Handle and Hydraulic Pump Assembly**Repair Parts List for Handle and Pump Detail Assembly**

Ref. No.	Description	Part No. for 4YX97	Qty.	Ref. No.	Description	Part No. for 4YX97	Qty.
Following included in Ref. No. 1 (See Figure 10)				130	Snap ring	97-130	1
101	Spring plate	▲	1	131	Spring	●	1
102	Roll pin	▲	2	132	Strike pin	●	1
103	Roller	▲	1	133	O-ring	●	2
104	Roll pin	▲	1	134	Sleeve	●	1
105	Roll pin	▲	1	135	O-ring	●	1
106	Roll pin	▲	1	136	Set screw	97-136	1
107	Control lever	▲	1	137	Nut	97-137	1
108	Plunger	▲	1	138	Lowering lever	97-138	1
109	Handle body	97-109	1	139	Pin	97-139	1
110	Shaft	97-110	1	140	Seal	▼	1
111	Roll pin	97-111	1	141	O-ring	▼	1
112	Roller	97-112	1	142	Cylinder cap	97-142	1
113	Bushing	97-113	1	143	O-ring	▼	1
114	Bushing	97-114	2	144	Seal	▼	1
Following included in Ref. No. 41 (See Fig. 10)				145	Piston rod	97-145	1
115	Roll pin	97-115	2	146	Steel ball	97-146	1
116	Handle shaft	97-116	1	147	Plunger	n	1
117	Plug	■	1	148	Spring cap	n	1
118	Washer	■	1	149	Spring	n	1
119	Spring	■	1	150	Seal	s	1
120	Valve spindle	■	1	151	Seal	s	1
121	Valve seat	■	1	Assemblies and Seal kits			
122	Steel ball	■	1	▲	Up/Down control assembly	97-152	1
123	Pump body	97-123	1	■	Control valve assembly	97-153	1
124	Copper washer	97-124	2	●	Plunger valve assembly	97-154	1
125	Screw	97-125	2	◆	Pump valve assembly	97-155	1
126	Screw	●	1	▼	Piston seal kit	97-156	1
127	Steel ball	●	1	n	Plunger assembly	97-157	1
128	Ball base	●	1	s	Plunger seal kit	97-158	1
129	Spring	●	1				

Dayton®