

 
RAM-PAC®

INTEGRAL JACKS

25-H-7.5A 25-H-8.7B
25-H-9.3A 35-H-7.7A 35-H-9.7A

PARTS LIST

PUBLICATION PART NO. XP-7717-1

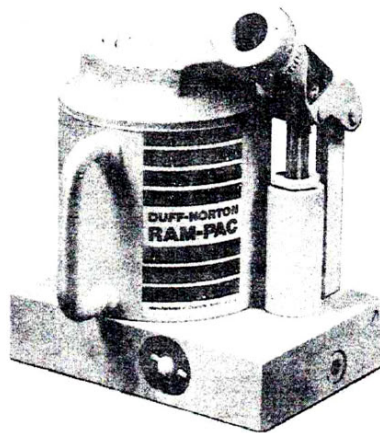

©DUFF-NORTON COMPANY, INC. 1979
CHARLOTTE, NORTH CAROLINA, U.S.A.
ALL RIGHTS RESERVED

Duff-Norton

Amstar

Duff-Norton Company, P.O. Box 32605, Charlotte, North Carolina 28232 (704) 588-0300, Telex: 575188
The Canadian Duff-Norton Company, Ltd., 15 Lockport Avenue, Toronto, Ontario M8Z2R6 (416) 239-3525,
Telex: 06967601

GENERAL

Part numbers applicable to parts are subject to change from time to time. Therefore, new parts list can be published easier and will be more convenient to you if they are separate from the Maintenance Instructions with Illustrated Parts Lists manual. See the current price list for prices.

The parts list contains a separate list of parts for each Ram. Each list has the same figure number as the exploded illustrations contained in this Parts Book and the Maintenance Instructions with Illustrated Parts List manual supplied with your Jack.

These lists are made up of three columns as follows:

1. Index Number — This index number corresponds to the number adjacent to each part on the illustrations found in the Parts Book and the Maintenance Instructions with Illustrated Parts List manual supplied with your Jack.
2. Part Number
3. Part Name

When ordering parts, please give the following information:

1. Model number of your Jack.
2. Desired part number and name.
3. Quantity desired.

HOW TO USE THE PARTS LIST

1. Obtain the figure number and index number from the exploded illustration of the Jack model you want.
2. Locate the corresponding figure number and index number which is on the opposite page of each exploded illustration to obtain the part number for the desired part.

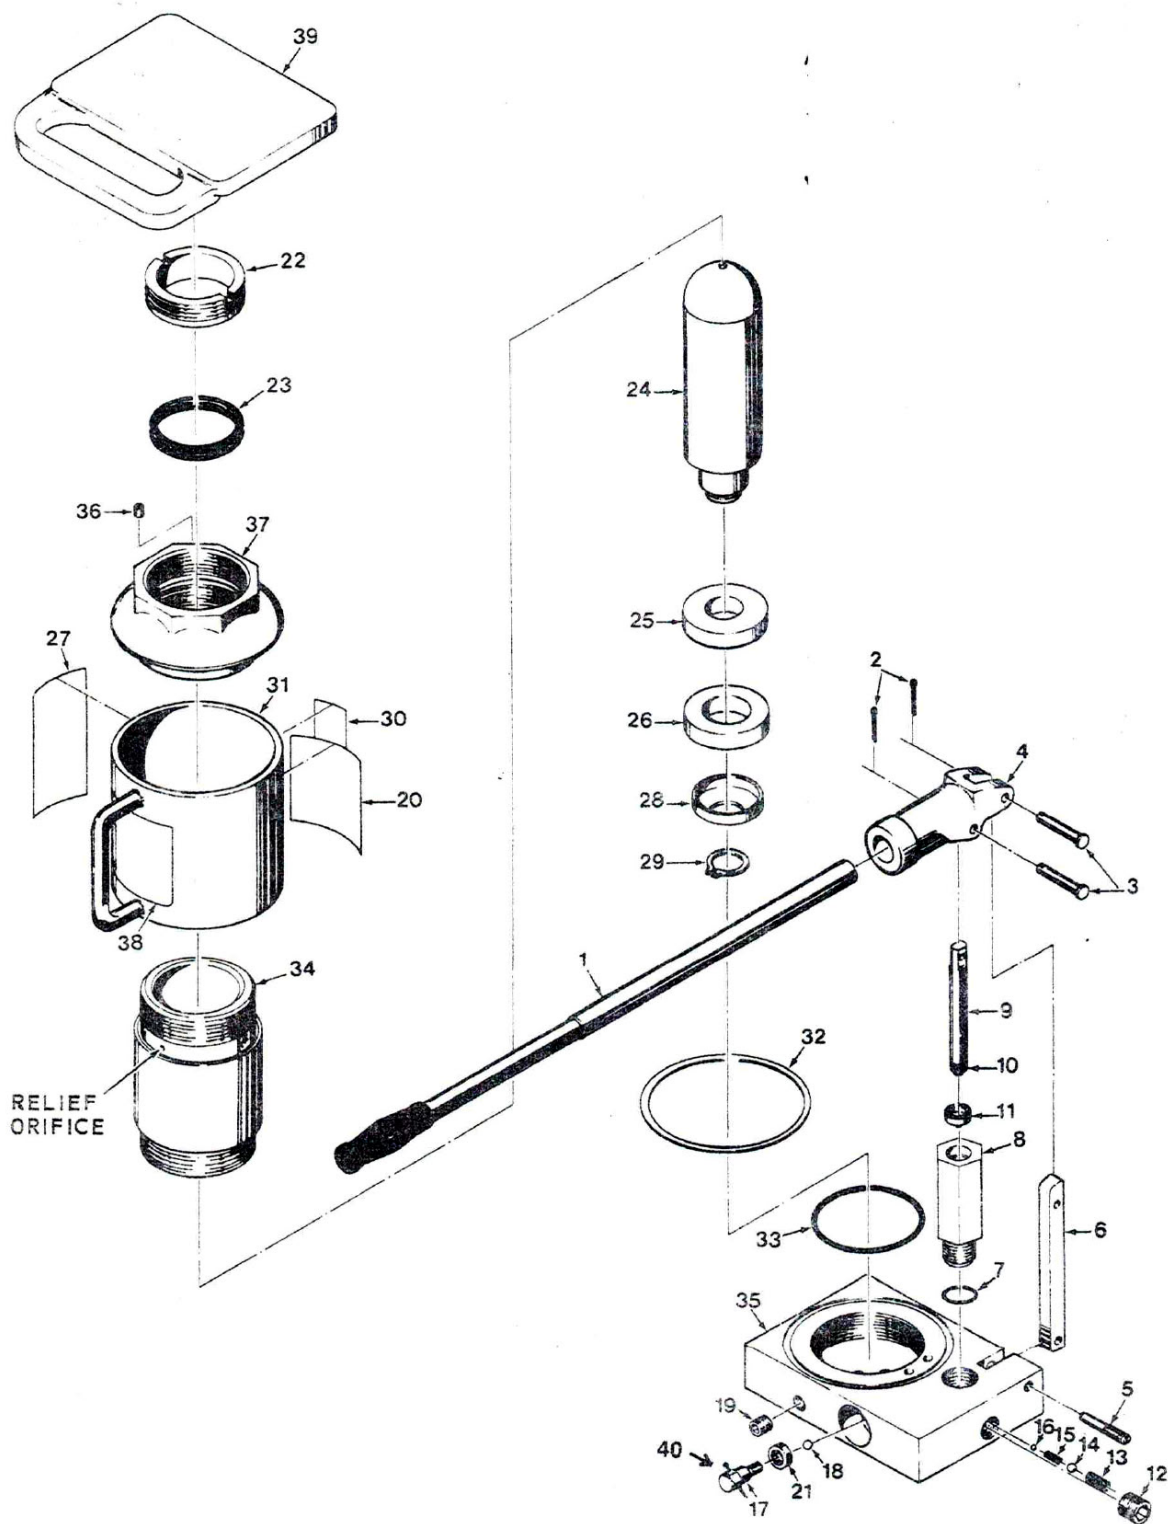


FIGURE 4-1 EXPLODED ILLUSTRATION OF 25-H-8.7A

PARTS LIST FOR 25-H-8.7A

INDEX NO.	25-H-8.7B PART NO.	PART NAME
1	X-4473-A	Operating Lever Assembly
2	S-2-10	Cotter Pin
3	X-6024	Fulcrum Pin
4	X-6026	Socket Lever
5	X-6025	Fulcrum Screw
6	X-6023	Link
7	X-6477-58	O-Ring
8	X-7683	Pump Cylinder
9	X-7044	Pump Plunger
10	X-7011-3	"U" Cup
11	X-7144	Oil Seal
12	X-6294	Pipe Plug
13	X-6069-1	Discharge Spring
14	X-6028	Ball, 11/32" Diameter
15	X-6068	Suction Spring
16	N-382	Ball, 1/4" Diameter
17	X-7386-1	Bleeder Screw
18	X-7155	Ball, 5/16" Diameter
19	S-25-9	Pipe Plug
20	X-6830	Instruction Decal
21	X-7684	Oil Seal
22	X-6010	Gland
23	X-7675	Quad Seal
24	X-7692-A	Standard Sub-Assembly
25	X-7678	Follower Plate
26	X-7679	"U"-Cup Packing
27	X-6782	Identification Decal
28	X-7680	"U"-Cup Retainer
29	X-7681	Retaining Ring
30	X-6416-51	Decal
31	X-6003-1-A	Reservoir Tube Assembly
32	X-6016	Gasket
33	X-6170	"O" Ring
34	X-7691	Cylinder
35	X-7673	Base Plate
36	X-6029	Oil Level Plug
37	X-7674	Cap
38	X-7669	Warning Label
39	X-6064	Special Top Plate
40	S-2-10	Cotter Pin

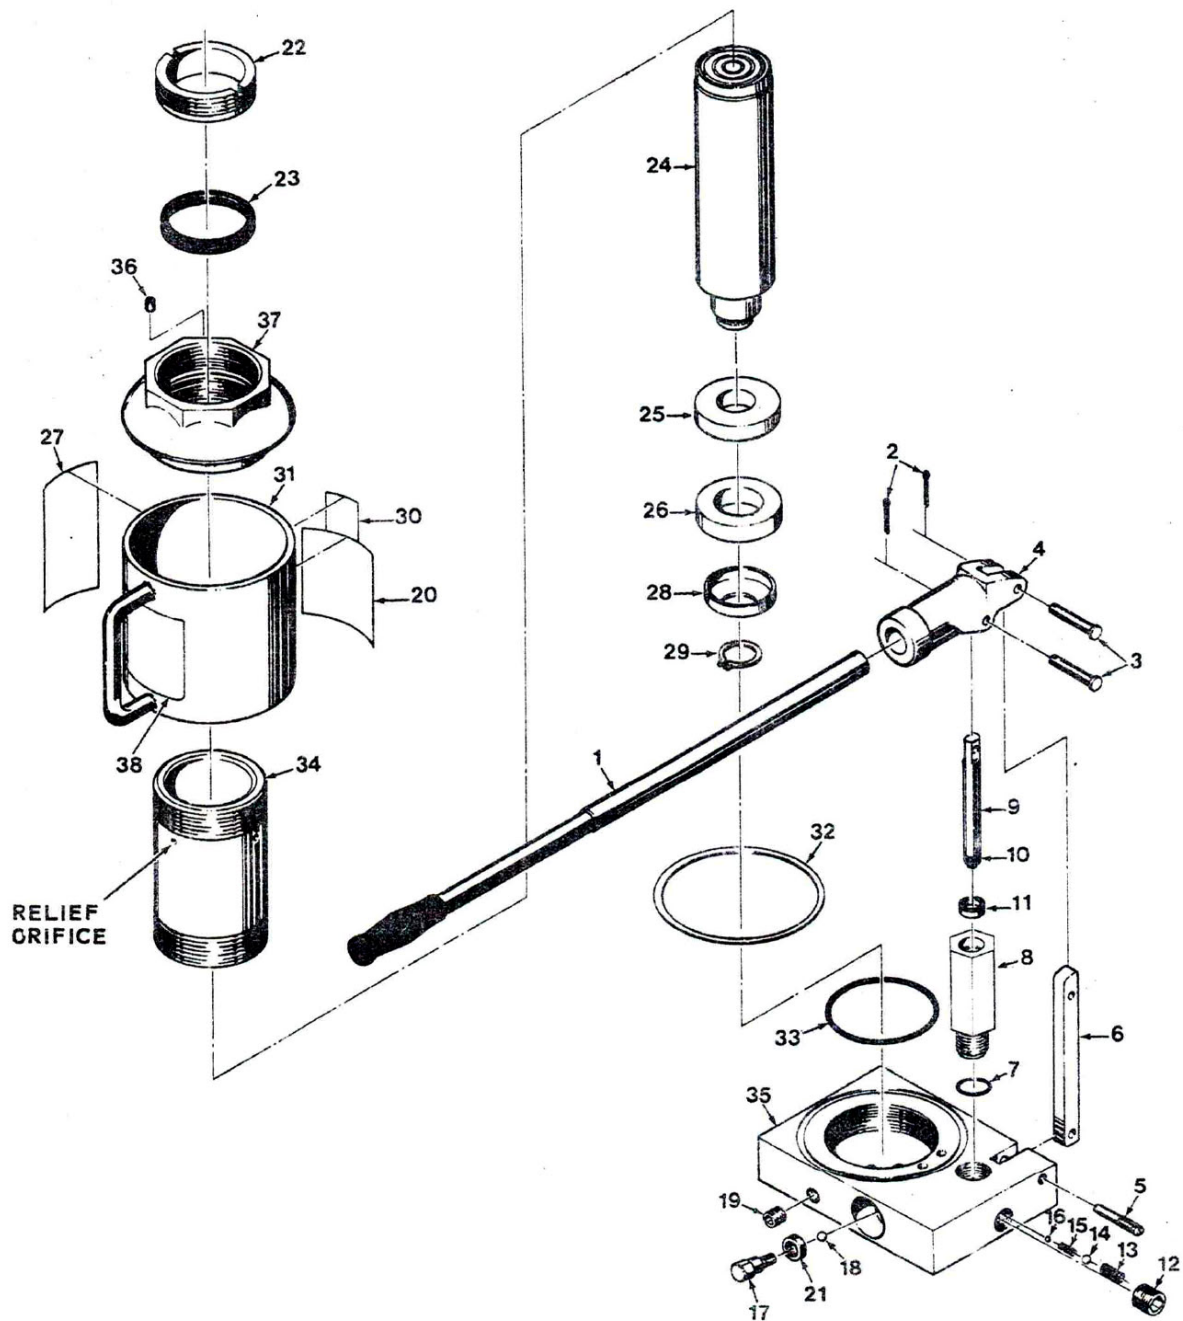 


FIGURE 4-2 EXPLODED ILLUSTRATION OF 25-H-7.5A, 25-H-9.3A, 35H-7.7A & 35-H-9.7A

PARTS LIST FOR 25-H-7.5A, 25-H-9.3A, 35-H-7.7A, 35-H-9.7A

INDEX NO.	25-H-7.5A PART NO.	25-H-9.3A PART NO.	35-H-7.7A PART NO.	35-H-9.7A PART NO.	PART NAME
1	X-7686-A	X-7686-A	X-7686-A	X-7686-A	Operating Lever Assembly
2	S-2-10	S-2-10	S-2-10	S-2-10	Cotter Pin
3	X-6024	X-6024	X-6024	X-6024	Fulcrum Pin
4	X-6026	X-6026	X-6026	X-6026	Socket Lever
5	X-6025	X-6025	X-6025	X-6025	Fulcrum Screw
6	X-6023	X-6023	X-6023	X-6023	Link
7	X-6477-58	X-6477-58	X-6477-58	X-6477-58	"O"-Ring
8	X-7683	X-7683	X-7683	X-7683	Pump Cylinder
9	X-7044	X-7044	X-7044	X-7044	Pump Plunger
10	X-7011-3	X-7011-3	X-7011-3	X-7011-3	"U" Cup
11	X-7144	X-7144	X-7144	X-7144	Oil Seal
12	X-6294	X-6294	X-6294	X-6294	Pipe Plug
13	X-6069-1	X-6069-1	X-6069-1	X-6069-1	Discharge Spring
14	X-6028	X-6028	X-6028	X-6028	Ball, 11/32" Diameter
15	X-6068	X-6068	X-6068	X-6068	Suction Spring
16	N-382	N-382	N-382	N-382	Ball, 1/4" Diameter
17	X-7682-1	X-7682-1	X-7682-2	X-7682-2	Bleeder Screw
18	X-7155	X-7155	X-7155	X-7155	Ball, 5/16" Diameter
19	S-25-9	S-25-9	S-25-9	S-25-9	Pipe Plug
20	X-6830	X-6830	X-6830	X-6830	Instruction Decal
21	X-7684	X-7684	X-7684	X-7684	Oil Seal
22	X-6010	X-6010	X-6094	X-6094	Gland
23	X-7675	X-7675	X-7706	X-7706	Quad Seal
24	X-7676-1-A	X-7676-2-A	X-7707-1-A	X-7707-2-A	Standard Sub-Assembly
25	X-7678	X-7678	X-7710	X-7710	Follower Plate
26	X-7679	X-7679	X-7711	X-7711	U-Cup Packing
27	X-6782	X-7682	X-6782	X-6782	Identification Decal
28	X-7680	X-7680	X-8004	X-8004	U-Cup Retainer
29	X-7681	X-7681	X-7709	X-7709	Retaining Ring
30	X-6416-40	X-6416-39	X-6416-42	X-6416-43	Decal
31	X-6003-1-A	X-6003-2-A	X-6088-3-A	X-6088-1-A	Reservoir Tube Assembly
32	X-6016	X-6016	X-6099	X-6099	Gasket
33	X-6170	X-6170	X-6477-53	X-6477-53	"O" Ring
34	X-6002-1	X-6002-2	X-6087-3	X-6087-1	Cylinder
35	X-7673	X-7673	X-7704	X-7704	Base Plate
36	X-6029	X-6029	X-6029	X-6029	Oil Level Plug
37	X-7674	X-7674	X-7705	X-7705	Cap
38	X-7669	X-7669	X-7669	X-7669	Warning Label

FOR THE COMPLETE LINE OF RAM-PAC HYDRAULIC RAMS, PUMPS, H-FRAMES AND ACCESSORIES, CONTACT YOUR LOCAL RAM-PAC PRODUCTS DISTRIBUTOR.

WARNING: The equipment shown in this bulletin is intended for industrial use only and should not be used to lift, support, or otherwise transport human cargo.



Duff-Norton Company, P.O. Box 32605, Charlotte, North Carolina 28232, (704) 588-0300, Telex: 575188
The Canadian Duff-Norton Company, Ltd., 15 Lockport Avenue, Toronto, Ontario M8Z2R6 (416) 239-3525,
Telex: 06967601

Warehouses:

1278 West Ninth Street, Cleveland, Ohio 44113, (216) 781-4232, Telex: 980187
801 Pratt Boulevard, Elk Grove Village (Chicago), Illinois 60007, (312) 439-8666, Telex: 253765
480 Coney Island Drive, Sparks (Reno), Nevada 89431, (702) 331-1111, Telex: 354457
10681 N. Stemmons Freeway, Dallas, Texas 75220, (214) 556-0430, Telex: 791531