


Repair Parts Sheet

Model GBJ-100 Hydraulic Bottle Jack

Repair Parts Sheet	Revision	Revision Date	Date Code
L4003	Rev. A	06/2012	AXXXXMG

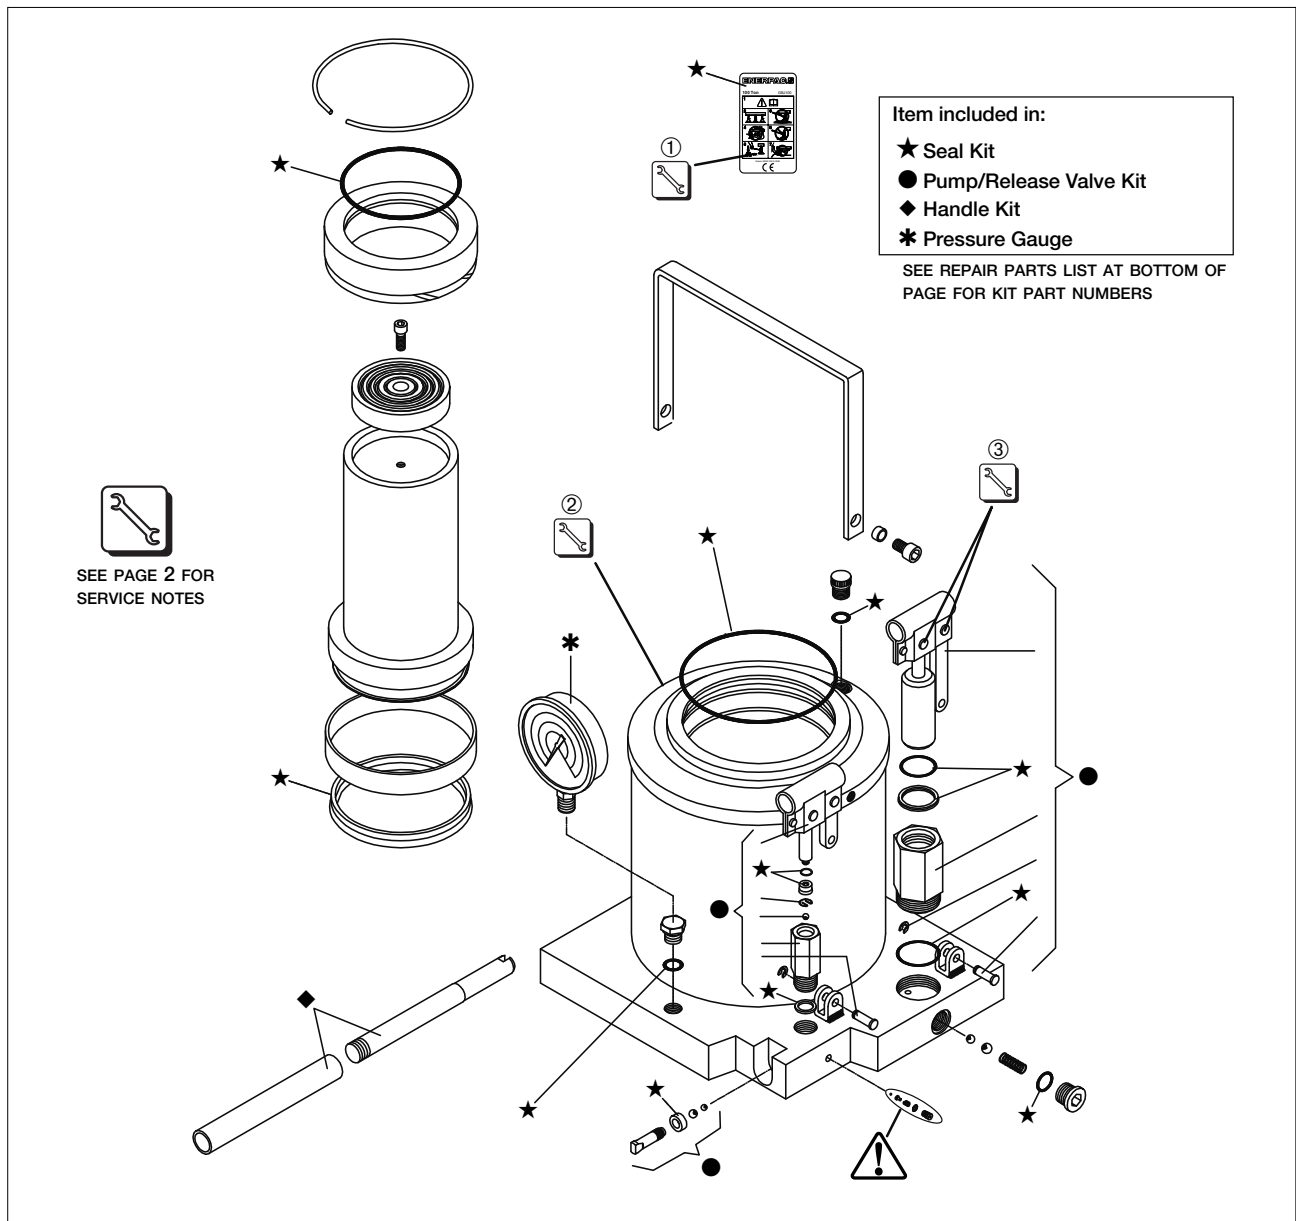

Repair Parts List		L4003
Item	Part Number	Description
★	GBJK100S	Seal Kit
●	GBJK100	Pump/Release Valve Kit
◆	RH-100	Handle Kit
*	GFJ100	Pressure Gauge

Notes:

- Jack components are available only in kits and are not sold separately.
- Items not identified in graphic above are NOT AVAILABLE for purchase.



WARNING: DO NOT adjust the emergency relief valve setting. If required, adjustments should be made ONLY by an Enerpac authorized service center.



Service Information Repair Parts Sheet L4003

Note: See graphic on page 1 for service item locations

Service Item	Action / Comment
①	Replace decal if worn or unreadable.
②	<p>Approximate oil capacity with jack in upright position, ram fully retracted and oil level about 3 inches [75 mm] below fill hole: 3300 cc (111 fluid ounces)</p> <p>Important:</p> <ul style="list-style-type: none">• Use only Enerpac HF Series hydraulic oil.• Be sure ram is fully retracted before checking oil level or adding additional oil.• Jack hydraulic reservoir is full when oil level is approximately 3 inches [75 mm] below the oil fill hole at top of jack housing. Do not overfill!• To prevent dirt entry, always reinstall oil fill plug immediately after checking oil level or adding oil.
③	Apply lubricating oil to pins and linkage.



To maintain your warranty:

- Use only Enerpac Oil
- Have your products inspected and repaired by an Enerpac Authorized Service Center

ENERPAC 