

MODEL QP-50  
Located inside door



MODEL FLJ-770  
Located on frame



MODEL FLJ-400B / FLJ-400 / FLJ-400A  
Located on frame



MODEL WD-150S  
Located on caster bracket




MODEL QP-100/QP-160  
Located on front plate



MODEL QL-60 PLUS

Located on top of intensifier

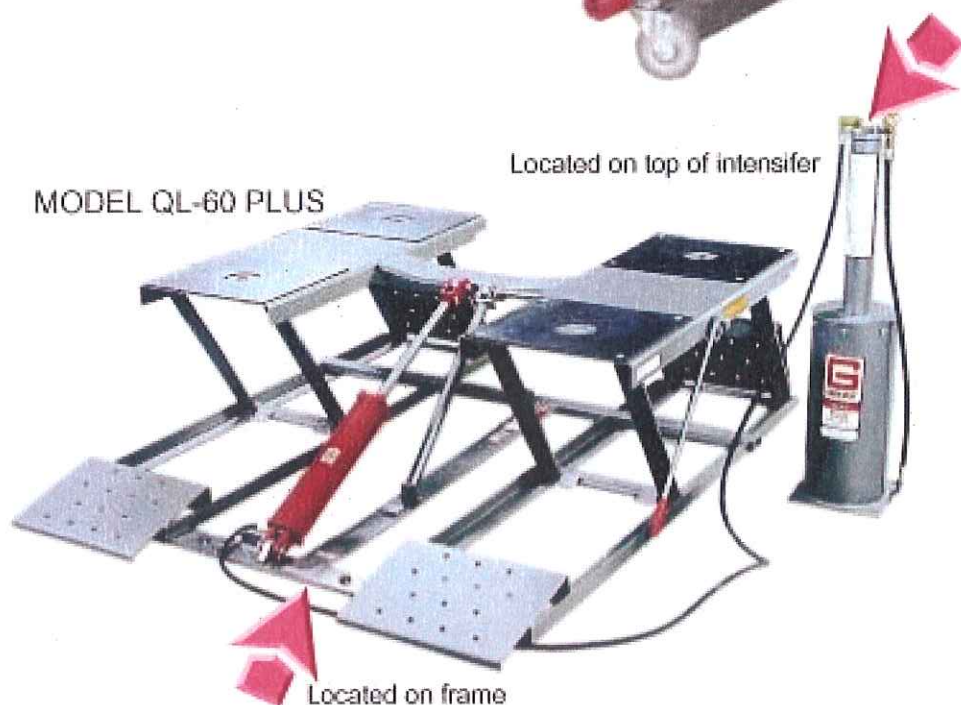

Located on frame