


Rec'd 10-3-71



MODEL "57-1" HYDRAULIC JACK REPAIR PARTS LIST

UNIT ASSEMBLY

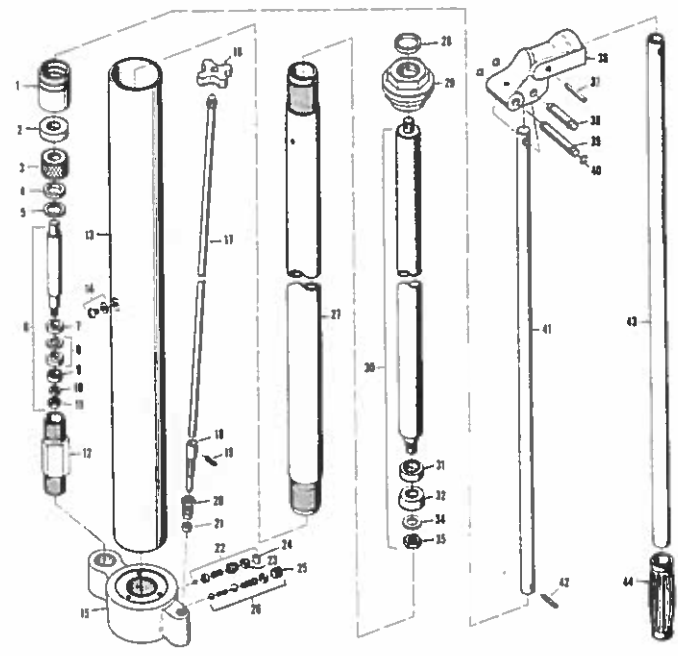


ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	13905	Guard	23	11520	Seal
2	13920	Retainer	24	25370	Exp. Plug
3	13935	Packing Nut	25	3525	Plug (3)
4	13880	Packing	26	81051	Pump Valves
5	13760	Packing Retainer	27	10559	Cylinder
6	395	Piston Assembly	28	20675	Quad Ring
7	13950	Spacer	29	10423	Top Nut
8	10045	Cup w/3057 Washer	30	576	Ram Assembly
9	9965	Cup Retainer	31	10710	Spacer
10	26880	Washer	32	11115	Cup
11	25480	Hex Jam Nut	34	11030	Washer
12	8255	Pump Cylinder	35	18960	Hex Jam Nut
13	10614	Reservoir	36	14155	Handle Socket
14	80187	Rd. Head Machine Screw w/139-4 Washer	37	25905	Roll Pin
15	10340	Base w/pump valves	38	15725	Pin
16	14240	Knob	39	14222	Handle Socket Pin
17	46737	Release Rod Extension	40	12345	Pin Ring
18	13520	Release Screw	41	46738	Piston Link
19	26710	Roll Pin	42	25965	Roll Pin
20	13485	Packing Nut	43	80132	Handle w/grip
21	4520	Packing	44	13830	Handle Grip
22	81052	Safety Valve Complete			

REV. 10-1-71

Order parts from the nearest Hein-Werner Official Service Station. Always state both model and serial number.
USE ONLY GENUINE HEIN-WERNER HYDRAULIC JACK OIL IN ANY HEIN-WERNER JACK
 HEIN-WERNER CORPORATION PRINTED IN U.S.A. WAUKESHA, WISCONSIN — AJAX, ONTARIO

CHASSIS ASSEMBLY FOR MODEL "57-1"

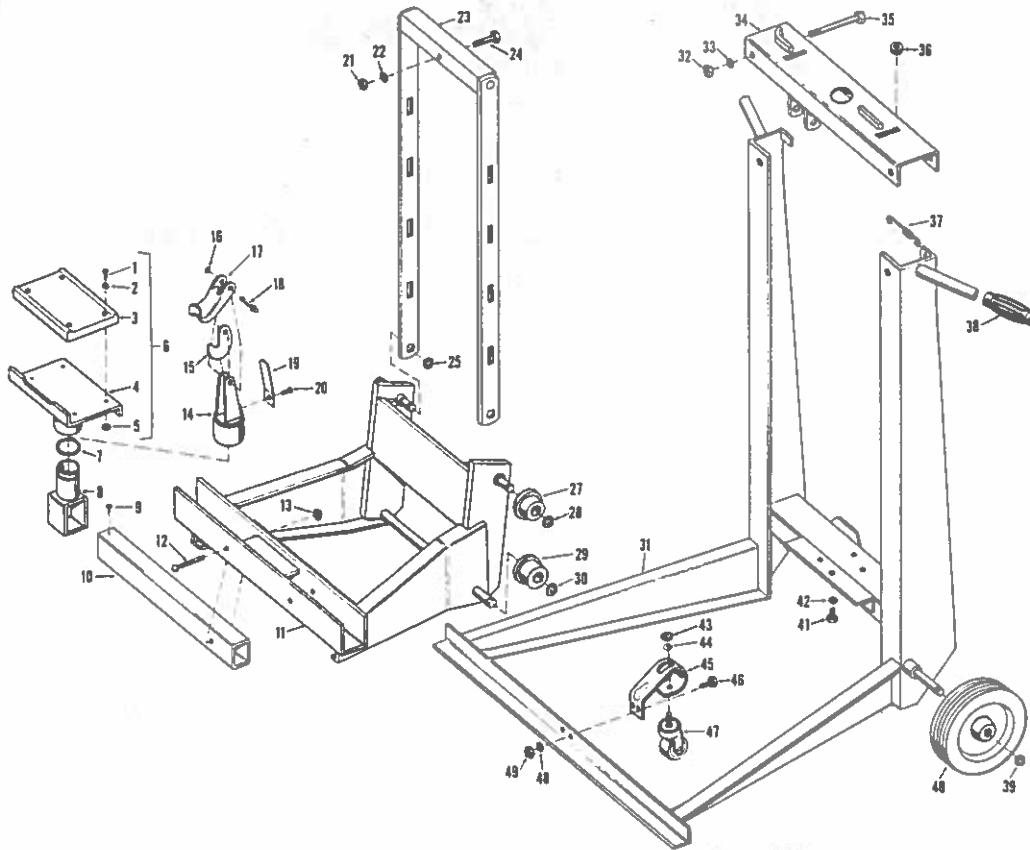

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	25282	Round Head Machine Screw	27	584	Upper Roller Assembly
2	24160	Washer	28	13095	Retaining Ring
3	16090	Saddle Pads	29	586	Lower Roller Assembly
4	574	Saddle	30	13095	Retaining Ring
5	16510	Speed Nut	31	567	Frame Assembly
6	564	Saddle assembly	32	26170	Hex Nut
7	16350	Buna N "O" Ring	33	26385	Shakeproof Washer
8	608	Saddle Adapter	34	577	Cover Assembly
9	60059	10 x 3/8 Drivescrew Type U	35	26231	Hex Cap Screw
10	46791	Lift Arm	36	13405	Grommet
11	516	Carriage Assembly	37	20835	Spring
12	60511	5/16 x 2 1/4 R. H. Rivet	38	13830	Handle Grip
13	60512	5/16 Push Nut	39	24490	Clip
	537	Hook and Adapter Assembly	40	24260	2 x 8 Rubber Wheel
14	600	Hook Adapter	41	26525	Hex Hd. Cap Screw
15	60054	Hook	42	55560	Lockwasher
16	12415	Pin Ring	43	26495	Hex Nut
17	42051	Hook	44	1915	Shakeproof Lockwasher
18	1740	Pin	45	14120	Spring
19	46781	Pressure Finger	46	26575	Hex Hd. Cap Screw
20	60059	#10 x 3/8 Drive Screw	47	13715	Caster
21	27310	Hex Nut	48	1915	Shakeproof Washer
22	26030	Lockwasher	49	26546	Hex Jam Nut
23	569	Drag Link Assembly	50	55313	Safety Decal (Not Shown)
24	27350	Fil Head Screw	51	55301	Nameplate (Not Shown)
25	24490	Clip	52	55302	Decal (Not Shown)

GENERAL CARE

REV. 10-1-71

1. Carriage rollers must be lubricated frequently so they are free to turn easily. Also lubricate Saddle Pins, Handle Socket Pin, all wheels and machined surface of ram.
2. Always release brake of vehicle before lifting, center load on the saddles and raise from a level surface.
3. Keep ram retracted and release closed when not in use.
4. Occasionally hydraulic jacks become airbound in transit or when upset. To correct, open the release valve and pump the handle at least six full strokes.
5. To refill, use only Hein-Werner hydraulic jack oil.
6. To remove the hydraulic unit merely take out the 4 cap screws attaching base to chassis and the small screw connecting tip of ram to drag links. Also disconnect pump and release rods from base of unit.
7. **CAUTION — FOR YOUR SAFETY!** This jack is designed as a lifting device. After lifting, always place axle stands under vehicle before making under vehicle repairs.

USE ONLY GENUINE HEIN-WERNER HYDRAULIC JACK OIL IN ANY HEIN-WERNER JACK