HEIN-WERNER AUTOMOTIVE®

ow the information provided with and on this jack.

It safe operating procedures before attempting to
product may require special skills and knowledge.

ative language before use of this jack is authorized.
from service immediately.

naged parts (including labels) are noted. Any jack parts, shall be removed from service immediately ected to a shock are authorized and enclared to a shock are authorized. The enclared to a shock are authorized to a shock are authorized to a shock are authorized.

Truck Jacks

Operating Instructions & Parts Manual

Model Number

Capacity

HW93731

20 Ton

HW93733

SEE NOTES 20 Ton

B67415XD = AP ARMORE SEAY THE MOTE Alominio B67415XD-2 = SEAK MINE

Made in the

Gray Mfg Air Motor
Seal Kit Air Motor and
Hydraulic Jack Seal Ki

B67415XO-1

Model HW93731

Model HW93733



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.


SFA companies

10939 N. Pomona Ave. Kansas City, MO 64153 customerservices@heinwerner-automo

Read this manual and follow all the Safety Rules and Operating Instructions before using this product.

HW93731-M0 rev 12/07

Replacement Parts Illustration For Model HW93733 (Part II) - refer to page 11 for parts list Hydraulic Unit Assembly (includes Air Motor)

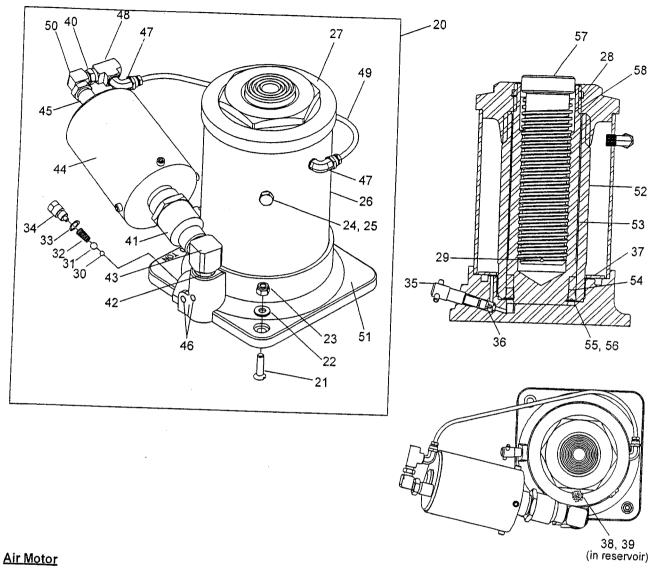

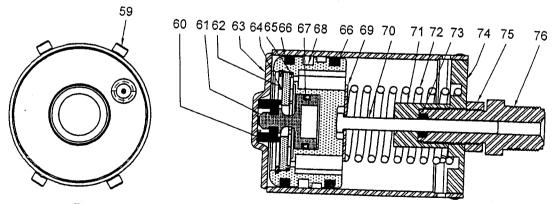


Figure 8 - Parts Illustration for Model HW93733 - Air Motor & Hydraulic Unit