

PARTS BREAKDOWN/OPERATING MANUAL



! WARNING



FOR YOUR SAFETY AND TO PREVENT INJURY:

- Read, understand & follow these instructions and warnings before use.
- It is the responsibility of the owner to make sure all personnel read this manual prior to using the device. It is also the responsibility of the device owner to keep this manual intact and in a convenient location for all to see and read. If the manual or product labels are lost or not legible, contact Mac Tools for replacements. If the operator is not fluent in English, the product and safety instructions shall be read and discussed with the operator in the operator's native language by the purchaser/owner or his designee, making sure that the operator comprehends its contents.
- Always wear safety goggles (including users & bystanders).
- Use only approved hoses and follow the hose instructions and warnings.
- Hold the hose only by the metal spring guards on the end.
- Do not allow hose to kink. Do not bend the hose in a tight radius.
- Replace the hose at first sign of wear, kink or damage to the outside jacket.
- Use only heavy duty grease gun hose as a replacement.
- This product may contain one or more chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. *Wash hands thoroughly after handling.*
- Failure to heed these warnings may result in serious or fatal personal injury and/or property damage.

Model GG33HD Pistol Grip Grease Gun

FEATURES AND FUNCTIONS

- 3-Way loading: bulk, 14 oz. cartridge, filler pump
- Heavy-Duty 1.7mm thick seamless barrel
- Special Acme threads machined in barrel for better seal
- Chrome plated pistol grip handle with cushion grip
- Barrel features special textured finish
- Aluminum head reduces the overall weight for easier use
- Air vent plug standard on head
- Satin finish tapered end cap
- Heavy-Duty "T" handle with finger grooves

PROPER GREASE GUN USE

This Pistol Grip Grease Gun should only be used for its designed purpose and according to the instructions in this manual.

GENERAL CAUTIONARY NOTES

Do not allow bystanders, children or other on-lookers in the work area as they can cause distractions, which may lead to mistakes and accidents.

Carefully inspect the equipment for damaged, loose or missing parts. If the unit is worn or damaged, do not use it.

 
The Pistol Grip Grease Gun must be primed after each refill or grease cartridge change. You should also check the priming of the gun before each use.

CAUTION!

Air pockets in the cartridge will cause the gun to lose prime.

REMOVING AN EMPTY GREASE CARTRIDGE

1. Pull the T-handle until the rod is fully extended. Hook the rod into the rod notch in the end cap.
2. Unscrew the grease tube from the gun.
3. Carefully center the grease rod and eject the empty cartridge from the grease barrel.



This coupler is available as replacement part number RSGGGF.


INSTRUCTIONS FOR CARTRIDGE LOADING

1. Remove the gun head from the container tube.
2. Completely draw back the plunger handle.
3. Insert open end of cartridge into container tube and push all the way in. Remove the seal or pull tab end from the cartridge.
4. Reassemble the gun head to the container tube. Press the catch plate and release the piston rod. Pull down the plunger handle.



SUCTION FILLING

1. Remove the gun head from the container tube.
2. Submerge open end of the container tube into grease bucket about 2" deep and pull the plunger handle out slowly and engage rod into key slot.
3. Reassemble the gun head to the container tube. Press the catch plate and release the piston rod. Pull down the plunger handle.

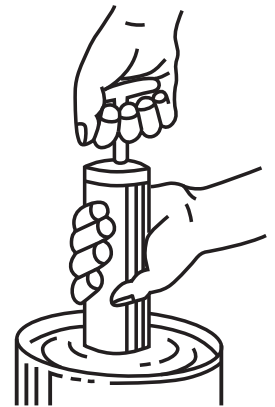

TROUBLESHOOTING/PRIMING

If your gun fails to work, first check for air pockets in the gun. To remove trapped air, unscrew the gun head 1 to 1-1/2 turns and do as follows:

1. Draw back plunger rod fully and release quickly. Repeat several times.
2. Push plunger rod all the way in.
3. Tighten the head to the barrel.
4. Press air vent valve several times to expel the air.

