# HYDRAULIC LOG SPLITTER




owner's guide

5 H.P. HYDRAULIC LOG SPLITTER


MODEL NOS. UDR-24372F UDR-24371F

FORM NO. 89M-635B\*

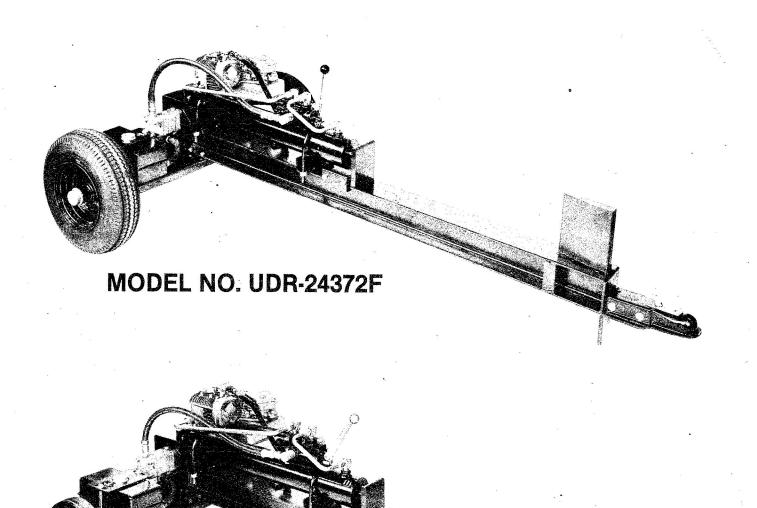



MODEL NO. UDR-24371F

### MODEL NO. UDR-24372F

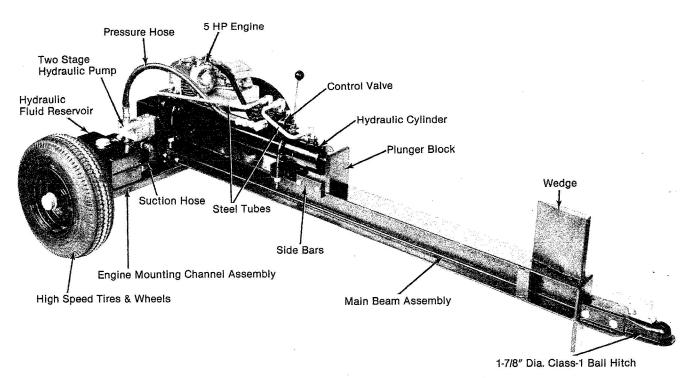

### MODEL NO. UDR-24371F

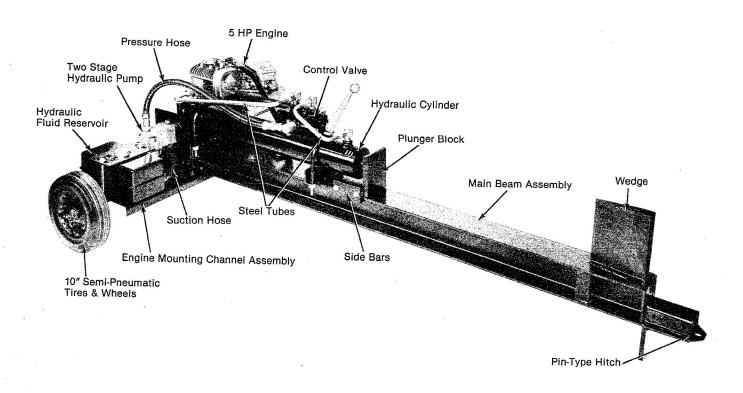

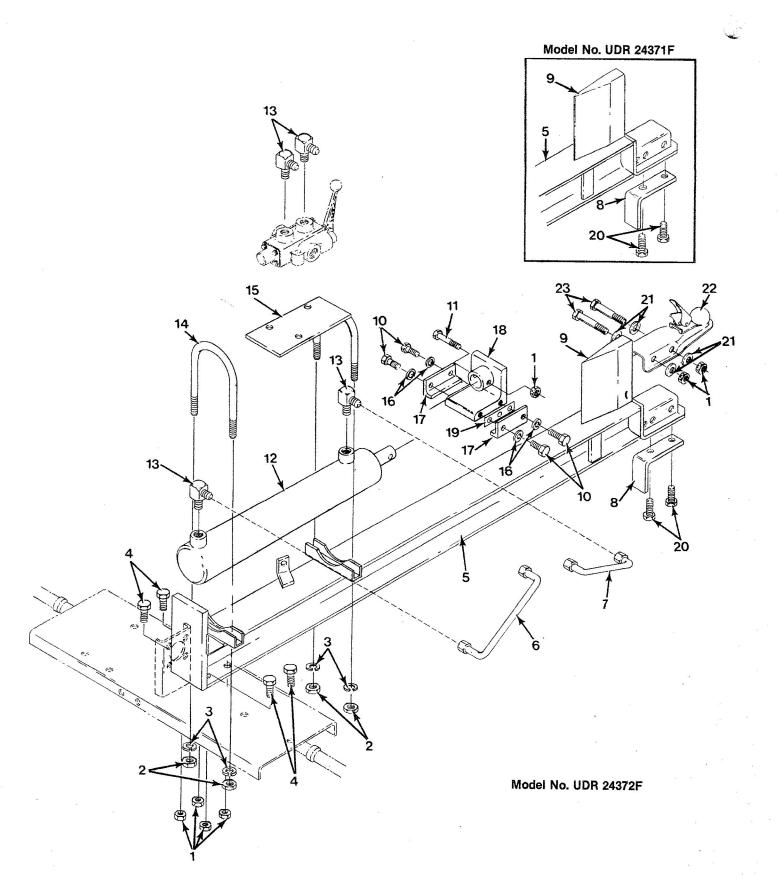


## **REPAIR PARTS**

Key Danielle		
No.	Part No.	Description
1	900039	Hex Lock Nut (3/8-16) (7 used)
2	900022	Hex Nut (1/2-13) (4 used)
3	900021	Split Lock Washer (1/2) (4 used)
4	900036	Hex Head Bolt (3/8-16 x 1 (4 used)
5	200874	Main Beam
6	200128	Long Steel Tube
7	200127	Short Steel Tube
8	200369	Coupler Bracket
9	200003	Wedge
10	900074	Hex Head Bolt (3/8-16 x 1-1/4) (4 used) GR 8
11	900077	Hex Head Bolt (3/8-16 x 2-1/2)
. 12	200880	Hydraulic Cylinder (3-1/2 x 24)
13	200063	90° Male Elbow Fitting (4 used)
14	200014	U-Bolt
15	200266	Valve Mtg. Plate Ass'y.
16	900015	Split Lock Washer (3/8) (4 used)
17	200868	Side Bar (2 used)
18	200866	Plunger Block Ass'y.
19	200402	Shim (use as required)
20	900013	Hex Head Bolt (3/8-16 x 1-1/4) (2 used) GR 5
21	900026	Flat Washer (5/16) (4 used)
22	200582	Trailer Hitch Ass'y.
23	900076	Hex Head Bolt (3/8-16 x 3-3/4) (2 used) GR 5

### **CYLINDER INFORMATION**

- If the entire cylinder needs replacing, order by the part number listed on page 14 & 15.
- If your cylinder should begin to leak, you must order the packing seal kit.
- Always refer to cylinder type and the kit number when ordering seal kits.
- Your seal kit will include complete instructions on how to change the seals in the cylinder. The tools required are listed below.

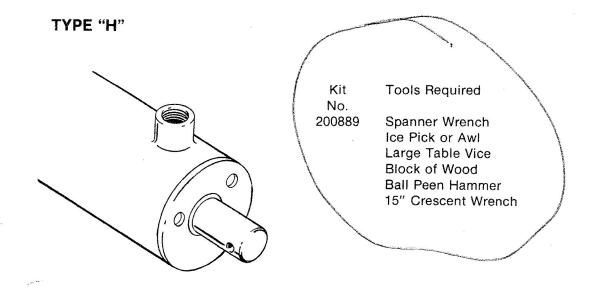

### **VALVE INFORMATION**

#### **Cross Control Valve**

1. 900014 3/8-16 x 1-3/4 Hex Bolt 2. 200032 Cross Control Valve (Regular) 3. 200855 Pin Kit 4. 200856 Handle 5. 900015 3/8 Lock Washer 6. 900017 3/8-16 Hex Nut

