



**The holes in the end caps are threaded. The end caps are press fit into the reservoir. We find a bolt with matching threads and partially thread the bolt into the holes in the center of the end caps. Then, using a wrench on the bolt, jiggle loose the end cap. You can also knock the bolt with a mallet to loosen the end caps.**