

NO.	DESCRIPTION	PART No.	QTY.
1	Handle grip	251113	2
2	Handle	255626	1
3	Cover screw	255639	4
4	Cover	255188	1
5	Cylinder	255738	1
6	Cylinder assy. complete	255491	1
7	Retaining ring	255025	1
*8	Ram "U" cup	255026	1
9	Ram	255493	1
*10	Oil seal	255058	1
11	Cylinder bearing	255710	1
*12	O-ring	255707	1
13	Retaining ring	222708	1
*14	O-ring	255496	1
15	Screw	255214	1
16	Elevator arm assembly	255176	1
17	Lifting saddle	255163	1
18	Retaining ring	255135	4
19	Shaft	255636	1
20	Torsion spring	255133	1
21	Handle base screw	255122	1
22	Handle base	255123	1
23	Cotter pin	255132	1
24	Cotter pin	255206	1
25	Nut	255128	2
26	Release arm	255131	1
27	Release hub	255130	1
28	Release lever	255127	1
29	Pump pedal	255627	1
30	Torsion spring	255629	1
31	Caster assembly	255177	2
32	Chassis	255165	1
33	Spring	255162	1
34	Elevator arm shaft	255186	1
35	Retaining ring	255175	2

INDEX No.	DESCRIPTION	PART NO.	QTY.
36	Front wheel	255164	2
37	Flat washer	255168	2
38	Hose clamp	255497	2
39	Hose	255495	1
40	Tube assembly	255498	1
41	Cover screw (intake)	255017	1
*42	Copper gasket	255018	2
*43	Check ball, .312 dia.	9005	2
44	Cover screw (discharge)	255020	1
45	Overload spring	255525	1
*46	Check ball, .250 dia.	9004	1
*47	O-ring	255523	1
48	Cover screw (overload)	255524	1
*49	Reservoir fill plug	255015	1
50	Oil block	255494	1
51	Mounting bolt	255166	2
52	Mounting nut	255167	2
*53	Pump piston "U" cup	255136	1
*54	Brass retainer washer	255137	1
55	Retaining ring	255138	1
56	Pump piston	255139	1
57	Connecting rod (steel)	255141	2
58	Hyd. block assy. complete	255509	1
59	Rivet pins	255144	2
60	Retaining ring	255120	4
*61	O-ring	255142	2
62	Pump bearing (brass)	255143	1
*63	Check ball, .156 dia.	9021	1
64	Spring guide	255116	1
65	Release spring	255115	1
66	Release shaft	255114	1
*67	Gasket	255113	1
68	Release guise bushing	255112	1
*69	Release oil seal	255111	1

^{*}Designates those parts found in repair kit part #205310.