


RC-156

NO.	DESCRIPTION	PART NO.	QTY.
1	Half Coupler	CR-400	1
2	Screw	G836.028	1
3	Spring	L119.110	1
4	Plunger	CF304.040	1
5	Retaining Ring	L227.044	1
6	U-cup	CF297.041	1
7	Washer	L231.108	1
8	Rod Bearing	CF295.107	1
9	Cylinder	CF302.030	1
10	Bushing	F948.209	1
11	Screw	B1014.028	1
12	Gasket	G834.167	1
13	Acorn Nut	G833.055	1
14	Sleeve	CF293.446	1
15	Thread Protector	B35.271	1
16	Stopring	CF294.044	1
17	Wiper	CF296.044	1
18	Saddle	CF292.900	1

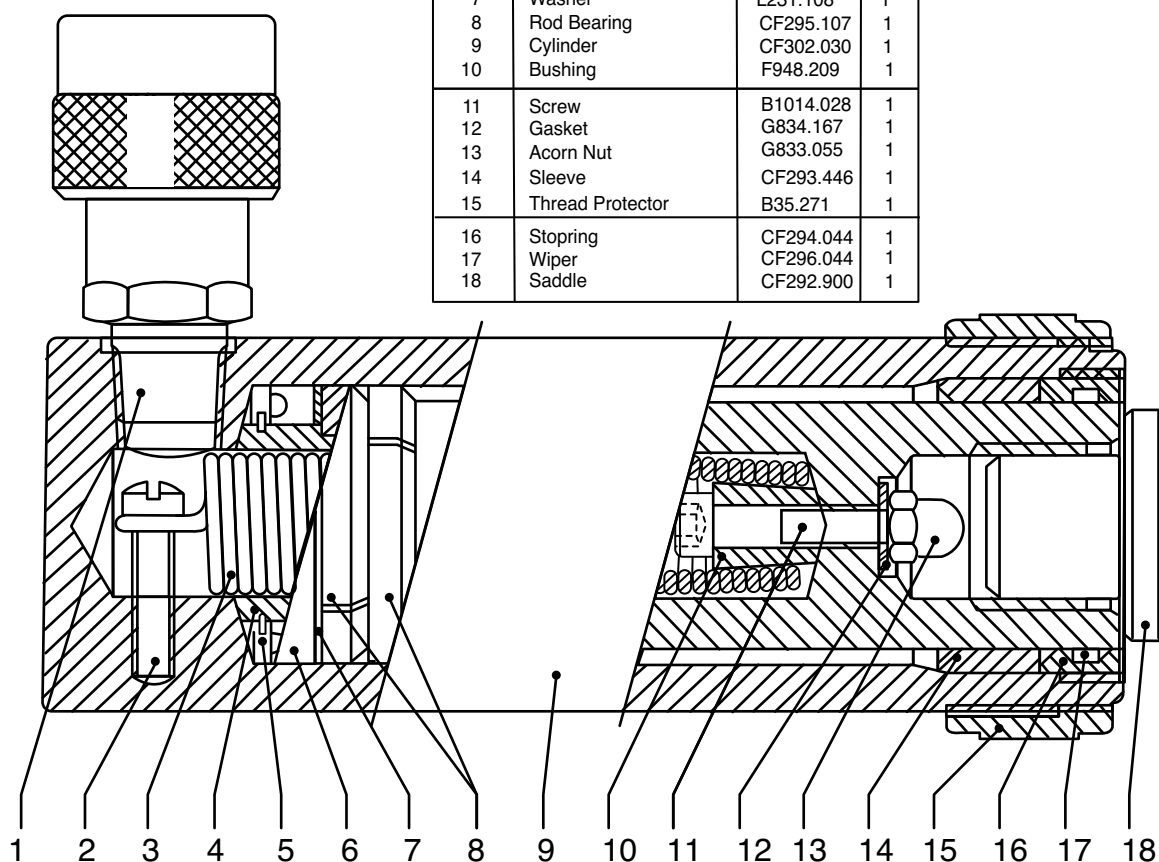

TO PROTECT YOUR WARRANTY, USE ONLY **ENERPAC** HYDRAULIC OIL.

POUR PROTEGER VOTRE GARANTIE, UTILISEZ EXCLUSIVEMENT L'HUILE HYDRAULIQUE **ENERPAC**.

UM IHRE GARANTIE ZU GEWAHRLEISTEN VERWENDEN SIE NUR **ENERPAC**-HYDRAULIKOL.

PER PROTEGGERE LA VOSTRA GARANZIA, USATE UNICAMENTE OLIO **ENERPAC**.

PAPA PROTEGER SU GARANTIA, UTILICE EXCLUSIVAMENTE ACEITE HIDRAULICO **ENERPAC**.