



SPARE PARTS LIST

5 Ton Air / Manual

Hydraulic Service Jack


Model # 22051

ITEM	PARTCODE	DESCRIPTION	QTY	ITEM	PARTCODE	DESCRIPTION	QTY
1	G25-6-1201-107	base	1	46	667-5-0180-009	retaining ring "C"	2
2*	503-9-0050-106	spring cap	1	47	421-6-9001-305	pin	1
3	644-1-0060-05311	screw	1	48	410-4-4010-203	bearing	2
4*	511-7-1164-108	o-ring	2	49	611-3-0130-101	washer	2
5*	511-7-0738-106	o-ring	1	50	661-2-0120-010	nut	2
6*	577-7-0802-109	back-up ring	1	51	521-2-0220-004	return spring	1
7	532-8-0050-024	filter	1	52	677-5-0240-018	retaining ring "E"	2
8	421-6-1203-206	reservoir	1	53	601-8-0006-001	grease fitting nipple	3
9*	505-9-0092-207	filler plug	1	54	500-1-1100-019	front wheel	2
10	421-6-1807-208	cylinder	1	55	421-6-4001-209	saddle	1
11*	521-7-0670-014	u-cup	1	56	G25-3-6000-104	chassis	1
12*	577-7-0670-025	back-up ring	1	57	G25-6-4120-102	cover	1
13	421-6-1109-103	bearing cover	1	58	614-1-0060-02211	screw	4
14	421-3-1200-303	piston rod assy.	1	59	421-6-2202-209	knob	1
15	421-6-1204-309	top nut	1	60	601-4-0040-034	spring pin	1
16*	511-7-0530-111	o-ring	1	61	421-3-9001-105	release valve rod	1
17*	551-7-0060-066	oil seal	1	62	605-3-0050-103	lock washer	2
18	614-1-0050-04711	screw	1	63	609-1-0050-10911	screw	1
19	425-6-1303-107	release valve	1	64	G10-3-2300-204	handle	1
20	G25-3-1300-202	universal joint assy.	1	65	A07-6-2204-102	washer	1
21	524-2-0240-111	compression spring	1	66	524-2-0138-019	compression spring	1
22	421-3-1500-109	hyd. cartridge assy.	1	67	511-3-0105-011	washer	1
23*	581-7-0195-009	packing	1	68	602-4-0025-017	split pin	1
24*	531-3-0270-021	washer	1	69	421-6-0100-100	grip	1
25	421-6-1401-604	pump cylinder	1	70	421-6-2107-306	locking link	1
26*	521-7-0160-011	u-cup	1	71	602-4-0025-026	cotter pin	1
27*	573-7-0162-019	back-cup ring	1	72	421-6-2106-203	locking pin	1
28*	511-7-0120-406	o-ring	1	73	G24-4-2000-103	air motor assy.	1
29*	573-7-0160-024	back-cup ring	1	74	A27-4-0250-105	air inlet control valve	1
30	421-6-1402-404	pump piston	1	75	421-6-2102-104	handle fork collar	2
31	421-6-9005-202	pin	2	76	506-9-0264-106	handle grip	2
32	513-5-0018-012	retaining pin	2	77	511-3-0192-012	washer	2
33	421-3-9010-409	piston link	1	78	421-6-5020-107	rubber pad	2
34	521-2-0155-018	returning spring	1	79	421-3-5100-208	caster	2
35	486-6-1302-100	washer	1	80	620-1-0040-00811	screw	1
36	653-1-0060-072	bolt	1	81	A07-6-2205-104	hose spring clipper	1
37	A20-4-1500-106	hyd. cartridge assy.	1	82	G25-3-9912-102	caster assy.	2
38	653-1-0064-061	bolt	1	83	G25-1-1000-107	power unit	1
39	421-6-9004-200	foot pedal	1	84	G25-3-9901-107	repair kits	1
40	421-6-2404-100	bushing	1				
41	421-6-2403-108	bushing	1	* repair kits includes 2, 4, 5, 6, 9, 11, 12, 16, 17, 23, 24, 26, 27, 28, 29.			
42	421-6-1301-509	handle fork	1				
43	651-2-0100-007	nut	1				
44	605-3-0100-203	lock washer	1				
45	653-1-0100-078	bolt	1				



5 Ton Air / Manual Hydraulic Service Jack

Model # 22051

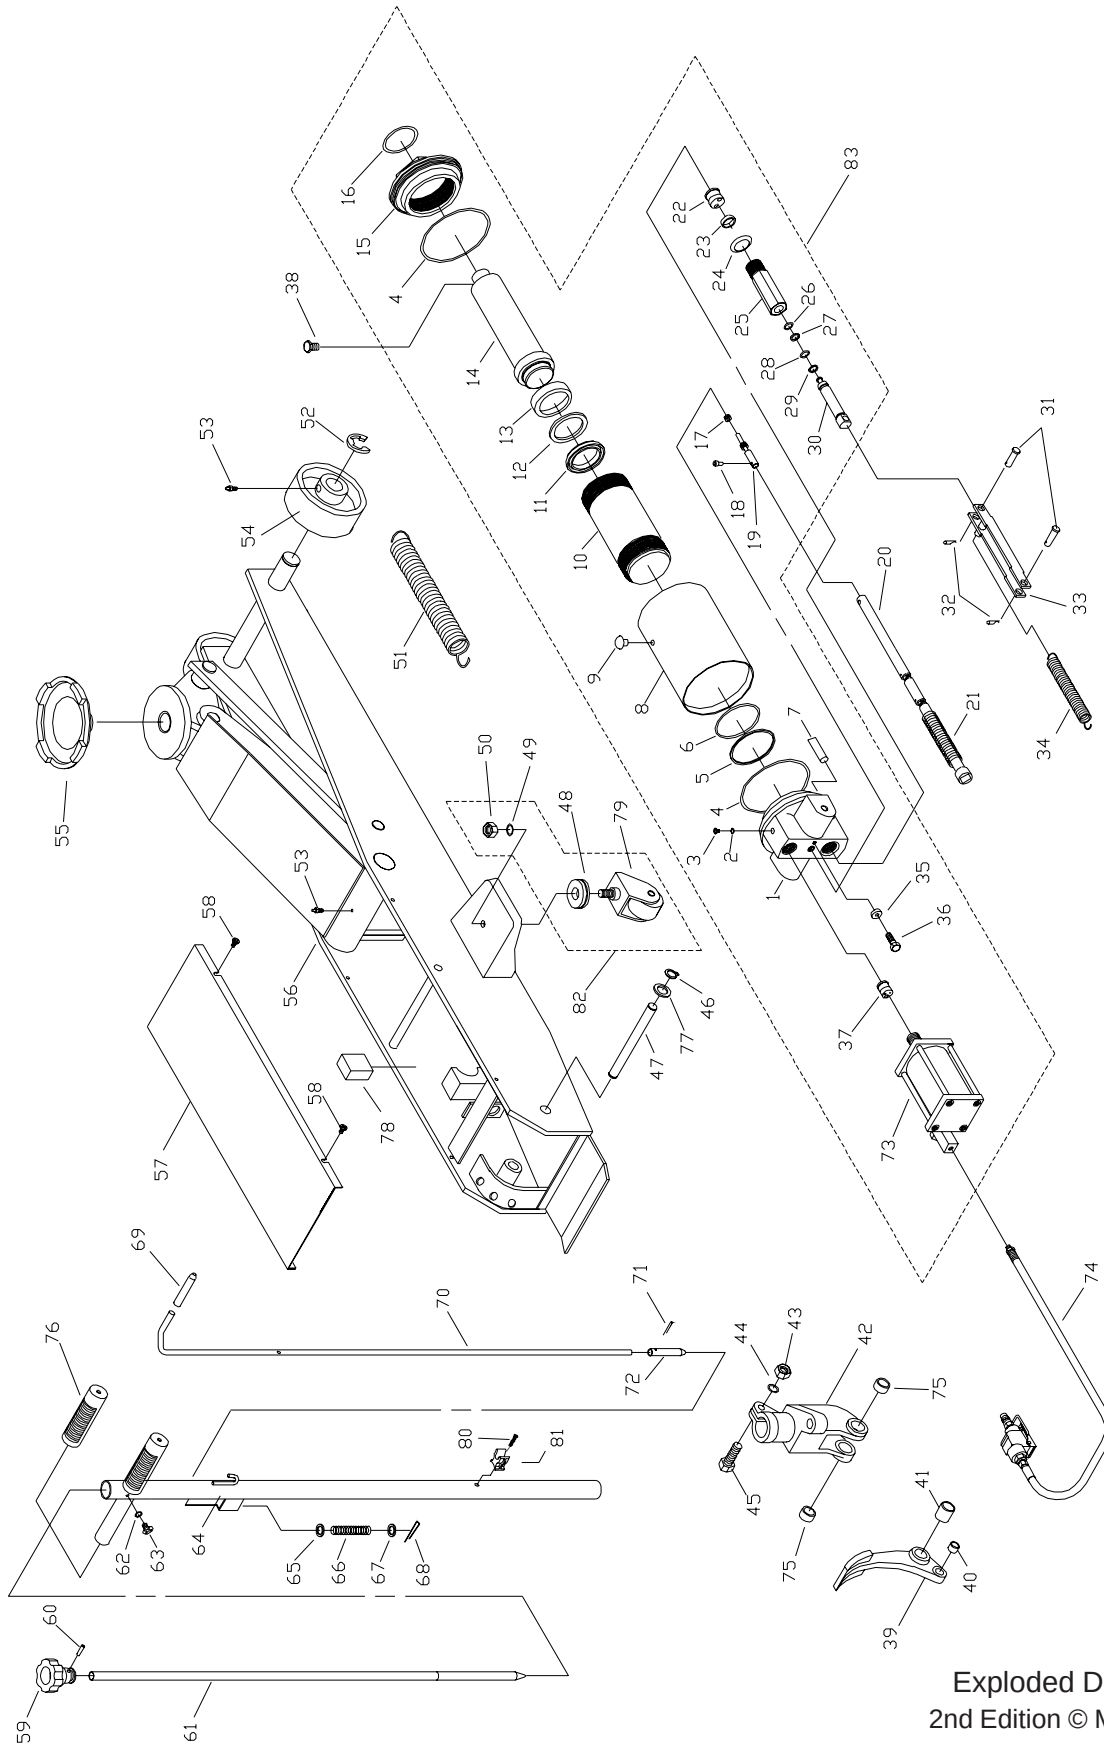

Exploded Drawing
2nd Edition © Mar. 2001