



SPARE PARTS LIST 10 Ton Long Chassis Service Jack

Model # 22100

ITEM	PARTCODE	DESCRIPTION	QTY	ITEM	PARTCODE	DESCRIPTION	QTY
1	G32-6-1601-100	base	1	54	421-6-9004-200	foot pedal	1
2	601-4-0030-013	lock pin	1	55	421-6-2404-100	foot pedal collar (II)	1
3*	551-7-0060-066	oil seal	1				
4	649-1-0050-019	hex. bolt	1	56	421-6-2403-108	foot pedal collar (I)	1
5	G13-6-1701-105	release valve	1	57	421-6-1301-509	handle fork	1
				58	421-6-2102-104	handle fork collar	2
6	A20-3-1500-106	hyd. cartridge assy.	1	59	653-1-0100-078	bolt	3
7	G24-4-2000-103	air motor assy.	1	60	605-3-0100-203	spring washer	5
8	532-8-0050-024	filter	1				
9*	511-7-1280-009	o-ring	2	61	651-2-0100-007	bolt	3
10*	511-7-0918-108	o-ring	1	62	G10-6-1354-200	pedal axle	1
				63	511-3-0192-012	washer	2
11*	573-7-0925-107	back-up ring	1	64	667-5-0180-009	retaining ring "C"	2
12	G10-6-1812-103	reservoir	1	65	G10-6-3111-103	tie rod	4
13*	324-4-1900-208	filler screw	1				
14	G10-6-1807-100	cylinder	1	66	605-3-0140-012	spring washer	8
15*	522-7-0832-002	u-cup	1	67	651-2-0140-018	nut	8
				68	G10-6-3115-101	rod collar	1
16*	573-7-0672-104	back-up ring	1	69	G10-6-3112-105	tie rod	1
17	G10-6-1209-100	ram bearing	1	70	G10-6-3202-207	radius link axle	2
18	G10-4-1200-100	piston rod assy.	1				
19	601-4-0050-019	lock pin	1	71	605-3-0180-014	lock washer	2
20	G10-6-1801-108	top nut	1	72	651-2-0180-010	nut	2
				73	G10-6-4305-202	pin	2
21*	511-7-0456-106	o-ring	1	74	644-1-0060-044	bolt	2
22	421-4-1500-109	hyd. cartridge assy.	1	75	G10-6-4304-200	parallel link axle	1
23*	581-7-0195-009	packing	1				
24	531-3-0270-021	washer	1	76	521-2-0370-104	return spring	1
25	421-6-1401-604	pump cylinder	1	77	677-5-0240-018	retaining ring "E"	2
				78	603-3-0330-013	washer	2
26*	521-7-0160-011	u-cup	1	79	500-1-1500-309	front wheel	2
27*	573-7-0162-019	back-up ring	1	80	601-8-0006-001	grease nipple	6
28*	511-7-0120-406	o-ring	1				
29*	573-7-0160-024	backup ring	1	81	G10-6-5102-203	front wheel axle	1
30	421-6-1402-404	pump piston	1	82	G10-6-4301-103	saddle supporter	1
				83	G10-6-4306-103	saddle spindle	1
31	G58-6-1358-105	pin	2	84	G10-6-4201-109	saddle	1
32	513-5-0018-012	retaining pin	2	85	677-5-0190-019	retaining ring "E"	2
33	521-2-0220-077	returning spring	2				
34	G58-3-1309-104	piston link	1	86	G10-6-4303-107	saddle holder axle	1
35	A27-4-2050-105	air inlet control valve	1	87	G10-3-4100-206	lift arm assy	1
				88	G10-6-4305-101	side plate - R.	1
36	G24-3-1700-100	flex shaft assy.	1	89	G10-3-3100-100	side plate - L.	1
37	421-6-2202-209	knob	1	90	421-6-5020-107	rubber pad	2
38	601-4-0040-034	spring pin	1				
39	G10-3-2500-101	connecting bar	1	91	G10-6-3109-106	base clamp	2
40	506-9-0264-106	handle grip	2	92	G10-6-4120-118	cover	1
				93	620-1-0050-304	screw	4
41	605-3-0050-103	spring washer	2	94	651-2-0190-013	nut	2
42	609-1-0050-10911	screw	1	95	605-3-0190-017	spring washer	2
43	G10-3-2300-204	handle	1				
44	A07-6-2204-102	washer	1	96	605-3-0095-307	spring washer	2
45	524-2-0138-019	compression spring	1	97	651-2-0095-019	nut	2
				98	653-1-0095-200	bolt	2
46	511-3-0105-011	washer	1	99	500-1-1000-208	caster	2
47	602-4-0025-017	cotter pin	1	100	473-3-5000-107	caster bracket	2
48	620-1-0040-00811	securing screw	1				
49	A07-6-2205-104	house clip	1	101	473-4-5000-103	caster assy.	2
50	421-6-0100-100	grip	1	102	G10-6-2403-101	grip	1
				103	G10-1-1000-104	hyd. power nut	1
51	421-6-2107-306	lock bar	1	104	G10-3-9901-104	repair kit	1
52	602-4-0025-026	cotter pin	1				
53	421-6-2106-203	lock pin	1				

(*) Repair kit includes 3, 9, 10, 11, 13, 15, 16, 21, 23, 26, 27, 28, 29.

