



SPARE PARTS LIST

10 Ton Long Chassis Service Jack

Model # 25108

ITEM	PARTCODE	DESCRIPTION	QTY	ITEM	PARTCODE	DESCRIPTION	QTY
1	G58-3-1600-209	base	1	61	602-4-0025-017	pin	1
2*	551-7-0060-066	oil seal	1	62	421-6-2202-209	knob	1
3	649-1-0050-019	screw	1	63	601-4-0040-034	spring pin	1
4	G13-6-1701-105	release valve	1	64	G58-3-2500-109	release valve connecting bar	1
5	601-7-0010-006	steel ball	1	65	421-6-9004-200	foot pedal	1
6	601-7-0014-013	steel ball	1	66	421-6-2404-100	foot pedal collar	1
7	521-2-0011-106	compression spring	1	67	421-6-2403-108	foot pedal collar	1
8*	511-7-0110-302	o-ring	2	68	421-6-1301-509	handle fork	1
9*	573-7-0110-102	back-up ring	2	69	421-6-2102-104	handle fork collar	2
10	G57-6-1212-201	screw	2	70	653-1-0100-078	bolt	3
11	601-7-0008-009	steel ball	1	71	605-3-0100-203	spring washer	5
12	501-9-0085-303	spring cap	1	72	651-2-0100-007	but	3
13	512-2-0078-107	safety spring	1	73	G10-6-4120-118	cover	1
14	426-6-1201-106	safety valve screw	1	74	620-1-0050-304	screw	4
15	486-6-1302-100	washer	1	75	G10-6-1354-200	pedal axle	1
16	653-1-0060-072	bolt	1	76	511-3-0192-012	washer	2
17	532-8-0008-108	filter	1	77	667-5-0180-009	retaining ring "C"	2
18*	511-7-0180-303	o-ring	1	78	G10-6-3111-103	tie rod	4
19	573-7-0022-105	back-up ring	1	79	605-3-0140-012	spring washer	8
20	G58-6-1213-109	retaining small piston rod	1	80	651-2-0140-018	nut	8
21	G58-6-1201-203	small piston rod	1	81	G58-6-3109-104	base clamp	2
22	G58-6-1202-104	small piston rod guide ring	1	82	G10-6-3115-101	rod collar	1
23*	511-7-1280-009	o-ring	2	83	G10-6-3112-105	tie rod	1
24	G58-6-1204-108	piston rod guide ring	1	84	G58-3-3100-108	left chasis	1
25*	522-7-0700-106	u-cup	1	85	G58-3-3200-102	right chassis	1
26*	577-7-0700-202	back-up ring	1	86	651-2-0190-013	nut	2
27	G58-6-1214-101	retaining ring	1	87	605-3-0190-017	spring washer	2
28	G58-6-1206-203	guide ring	1	88	605-3-0095-307	spring washer	2
29*	522-7-0250-101	o-ring	1	89	651-2-0095-019	nut	2
30	G58-6-1200-201	piston rod	1	90	653-1-0095-200	bolt	2
31	601-4-0050-019	spring pin	1	91	500-1-1000-208	rear caster	2
32	G10-6-1812-103	reservoir	1	92	473-3-5000-107	chassis castor assy.	2
33	324-4-1900-208	filler screw assy.	1	93	G10-6-3202-207	stud radius link	2
34	G58-6-1801-106	top nut	1	94	605-3-0180-104	spring washer	2
35*	511-7-0600-107	o-ring	1	95	651-2-0180-010	nut	2
36	421-4-1500-109	hyd. cartridge assy.	1	96	G10-6-4305-202	parallel link	2
37*	581-7-0195-009	packing	1	97	644-1-0060-044	screw	2
38	531-3-0270-021	washer	1	98	601-8-0006-001	grease fitting nipple	6
39	421-6-1401-604	pump cylinder	1	99	521-2-0370-104	return spring	1
40*	522-7-0163-101	u-cup	1	100	G10-6-4304-200	pin-parallel link	1
41*	573-7-0162-019	back-up ring	1	101	677-5-0240-018	retaining ring "E"	2
42*	511-7-0120-406	o-ring	1	102	603-3-0330-013	washer	3
43*	573-7-0160-024	back-up ring	1	103	500-1-1500-309	front wheel	2
44	G57-6-1402-105	pump piston	1	104	G10-6-5102-203	front wheel link	1
45	G58-6-1358-105	pin	2	105	G10-6-4301-103	saddle support	1
46	513-5-0018-012	retaining pin	2	106	G10-6-4306-103	saddle spindle	1
47	521-2-0220-077	extention spring	2	107	G10-6-4201-109	saddle	1
48	G58-3-1309-104	piston link	1	108	677-5-0190-019	retaining ring "E"	2
49	G24-3-1700-100	flex shaft assy.	1	109	G10-6-4303-107	pin-parallel link	1
50	421-6-2106-203	pin	1	110	G10-3-4100-206	lift arm assembly	1
51	602-4-0025-026	cotter pin	1	111	G10-6-2403-101	grip	1
52	G57-6-2401-108	pin	1	112	473-4-5000-103	caster assembly	2
53	421-6-0100-100	grip	1	113	G58-1-1000-304	hyd. power unit	1
54	506-9-0264-106	handle grip	2	114	G57-4-2300-100	handle assembly	1
55	G57-3-2300-104	handle	1	(*)	G58-3-9901-102	repair kit	1
56	605-3-0050-103	spring washer	1	* Repair Kit includes item# 2, 8, 9, 18, 23, 25, 26, 29, 35, 37, 40, 41, 42, 43.			
57	609-1-0050-10911	bolt	1				
58	A07-6-2204-102	washer	1				
59	524-2-0138-019	compression spring	1				
60	511-3-0105-011	washer	1				

10 Ton Magic Lift™ Service Jack