



2000-lb Air/ Manual Telescopic Transmission Jack SPARE PARTS LIST

Model # 42001

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	G37-3-1600-105	Base	1	56*	511-7-0450-306	O-ring	1
2	601-7-0007-007	Steel ball	1	57*	522-7-0450-109	U-cup	1
3	501-9-0085-303	Spring cap	1	58	G37-6-1801-103	Top nut	1
4	512-2-0077-105	Spring	1	59*	511-7-1030-107	O-ring	1
5	426-6-1201-106	Safety valve screw	1	60*	511-7-0620-305	O-ring	1
6	324-4-1900-208	Filler screw	2	61*	573-7-0588-105	Back-up ring	1
7	G36-6-1606-108	Magnet	2	62	G37-3-1803-109	Reservoir assy.	1
8	649-1-0079-114	Bolt	1	63	661-2-0080-023	Nut	29
9	661-2-0079-101	Nut	1	64	653-1-0080-045	Hex. bolt	11
10	512-2-0250-103	Spring	1	65	G37-3-1320-109	Bracket	2
11	G37-6-1401-107	Pump piston	1	66	G37-3-1806-105	Handle assy.	1
12*	522-7-0200-106	U-cup	1	67	G37-3-2903-209	Saddle support bar	4
13*	511-7-0200-202	O-ring	1	68	G52-4-4102-101	Chain & hook	4
14*	573-7-0200-103	Back-up ring	1	69	G36-6-7000-102	Chain	2
15*	511-7-0320-303	O-ring	1	70	653-1-0159-109	Bolt	4
16	G37-6-1402-109	Pump piston guide ring	1	71	G37-3-2901-205	Support seat	1
17	G36-3-1900-100	Foot pedal	1	72	G37-3-2902-207	Adjustable bracket	2
18	G37-6-1603-109	Spindle	1	73	657-1-0095-107	Screw	8
19	667-5-0127-005	Retaining ring "C"	2	74	G37-3-4200-104	Saddle holder	1
20	515-3-0180-206	Copper gasket	1	75	667-5-0160-003	Retaining ring "C"	4
21	666-5-0150-104	Retaining ring "C"	1	76	G37-6-3304-109	Spindle	1
22	G37-6-1708-103	Spring washer	1	77	602-4-0025-017	Snap pin	2
23	G37-6-1706-109	Spring cap	1	78	661-2-0100-014	Nut	2
24	521-2-0062-020	Spring	2	79	G36-6-4205-105	Spindle	2
25	G37-6-1605-103	Spring cap	1	80	G36-3-5100-108	Trust bearing	3
26	601-7-0008-009	Steel ball	2	81	G36-6-4302-103	Saddle seat (upper)	1
27	G37-6-1705-107	Release valve lock nut	1	82	G37-6-3305-101	Spindle	1
28	512-2-0100-012	Spring	1	83	G36-6-4204-103	Support pin	2
29*	511-7-0100-309	O-ring	1	84	667-5-0250-004	Retaining ring "C"	4
30	G37-6-1703-103	Release valve	1	85	G36-3-2301-103	Tilt screw assy.	1
31	G37-6-1707-101	Bolt	1	86	G36-3-2300-101	Tilt screw assy.	1
32	605-3-0080-102	Spring washer	1	87	G37-6-4301-108	Saddle seat (lower)	1
33	649-1-0079-105	Screw	2	88	G37-6-1319-102	Support bar	4
34	A24-6-8101-107	Coupler - male	1	89	G37-4-5200-105	Caster	2
35	566-4-0070-202	Pin	2	90	G37-4-5201-107	Caster - w/ brake	2
36	G36-6-1809-102	Release pedal	2	91	653-1-0080-02511	Bolt	18
37	513-5-0016-018	Retaining pin	2	92	G37-3-3300-103	Base assy.	2
38	G36-4-2200-103	Air inlet control valve	1	93	651-1-0127-100	Allen bolt	4
39	G36-6-2302-103	Pipe connector	2	94	605-3-0127-405	Spring washer	4
40	G36-6-2300-109	Air hose	1	95	101-5-1602-100	Safety valve screw	1
41	524-2-0123-108	Spring	1	96*	577-7-0035-001	Back-up ring	1
42	G36-3-2000-109	Air motor assy.	1	97*	511-7-0031-003	O-ring	1
43	G36-3-1500-104	Hydraulic cartridge	1	98*	561-7-1020-003	Seal	1
44	G36-6-1608-102	Tube	1	99*	511-7-0240-305	O-ring	1
45	G36-6-1607-100	Tube	2	100	G36-5-4207-103	Tube	1
46	532-8-0008-108	Filter	2	101	G36-5-4208-105	Tube	1
47	601-7-0012-000	Steel ball	1	102	G36-5-4209-107	Tube	1
48	666-5-0120-105	Retaining ring "C"	1	103	G36-5-4210-102	Tube	1
49	513-3-0500-020	Washer	1				
50	G37-6-1807-105	Cylinder	1				
51	G37-6-1201-109	Piston rod	1	(*)	G37-3-9901-109	Repair kit	-
52	G37-6-1204-105	Guide ring	1				
53	139-6-1214-107	Retaining ring	1				
54*	542-7-0450-105	Seal	1				
55*	573-7-0448-109	Back-up ring	1				

* Repair kit includes 12, 13, 14, 15, 29, 54, 55, 56, 57, 59, 60, 61, 96, 97, 98 & 99

42001-S0



2000-lb Air/ Manual Telescopic Transmission Jack SPARE PARTS LIST

Model # 42001

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	N/A	Base	1	56	*	O-ring	1
2	N/A	Steel ball	1	57	*	U-cup	1
3	N/A	Spring cap	1	58	N/A	Top nut	1
4	N/A	Spring	1	59	*	O-ring	1
5	N/A	Safety valve screw	1	60	*	O-ring	1
6	324-4-1900-208	Filler screw	2	61	*	Back-up ring	1
7	N/A	Magnet	2	62	N/A	Reservoir assy.	1
8	N/A	Bolt	1	63	N/A	Nut	29
9	N/A	Nut	1	64	N/A	Hex. bolt	11
10	N/A	Spring	1	65	G37-3-1320-109	Bracket	2
11	N/A	Pump piston	1	66	G37-3-1806-105	Handle assy.	1
12	*	U-cup	1	67	G37-3-2903-209	Saddle support bar	4
13	*	O-ring	1	68	G52-4-4102-101	Chain & hook	4
14	*	Back-up ring	1	69	G36-6-7000-102	Chain	2
15	*	O-ring	1	70	653-1-0159-109	Bolt	4
16	N/A	Pump piston guide ring	1	71	G37-3-2901-205	Support seat	1
17	G36-3-1900-100	Foot pedal	1	72	G37-3-2902-207	Adjustable bracket	2
18	G37-6-1603-109	Spindle	1	73	657-1-0095-107	Screw	8
19	N/A	Retaining ring "C"	2	74	G37-3-4200-104	Saddle holder	1
20	N/A	Copper gasket	1	75	N/A	Retaining ring "C"	4
21	N/A	Retaining ring "C"	1	76	G37-6-3304-109	Spindle	1
22	N/A	Spring washer	1	77	N/A	Snap pin	2
23	N/A	Spring cap	1	78	N/A	Nut	2
24	N/A	Spring	2	79	G36-6-4205-105	Spindle	2
25	N/A	Spring cap	1	80	G36-3-5100-108	Trust bearing	3
26	N/A	Steel ball	2	81	G36-6-4302-103	Saddle seat (upper)	1
27	N/A	Release valve lock nut	1	82	G37-6-3305-101	Spindle	1
28	N/A	Spring	1	83	G36-6-4204-103	Support pin	2
29	*	O-ring	1	84	N/A	Retaining ring "C"	4
30	N/A	Release valve	1	85	G36-3-2301-103	Tilt screw assy.	1
31	N/A	Bolt	1	86	G36-3-2300-101	Tilt screw assy.	1
32	N/A	Spring washer	1	87	G37-6-4301-108	Saddle seat (lower)	1
33	N/A	Screw	2	88	G37-6-1319-102	Support bar	4
34	A24-6-8101-107	Coupler - male	1	89	G37-4-5200-105	Caster - w/o brake	2
35	566-4-0070-202	Pin	2	90	G37-4-5201-107	Caster - w/ brake	2
36	G36-6-1809-102	Release pedal	2	91	N/A	Bolt	18
37	N/A	Retaining pin	2	92	G37-3-3300-103	Base assy.	2
38	G36-4-2200-103	Air inlet control valve	1	93	651-1-0127-100	Allen bolt	4
39	G36-6-2302-103	Pipe connector	2	94	605-3-0127-405	Spring washer	4
40	G36-6-2300-109	Air hose	1	95	N/A	Safety valve screw	1
41	524-2-0123-108	Spring	1	96	*	Back-up ring	1
42	G36-3-2000-109	Air motor assy.	1	97	*	O-ring	1
43	G36-3-1500-104	Hydraulic cartridge	1	98	*	Seal	1
44	N/A	Tube	1	99	*	O-ring	1
45	N/A	Tube	2	100	G36-5-4207-103	Tube	1
46	N/A	Filter	2	101	G36-5-4208-105	Tube	1
47	N/A	Steel ball	1	102	G36-5-4209-107	Tube	1
48	N/A	Retaining ring "C"	1	103	G36-5-4210-102	Tube	1
49	N/A	Washer	1				
50	N/A	Cylinder	1	(*)	G37-3-9901-109	Repair kit	-
51	N/A	Piston rod	1				
52	N/A	Guide ring	1				
53	N/A	Retaining ring	1				
54	*	Seal	1				
55	*	Back-up ring	1				

* - Repair kit includes 12, 13, 14, 15, 29, 54, 55, 56, 57, 59, 60, 61, 96, 97, 98 & 99


N/A - Parts not available

42001-S0



1 Ton Air / Manual Telescopic Transmission Jack

Model # 42001

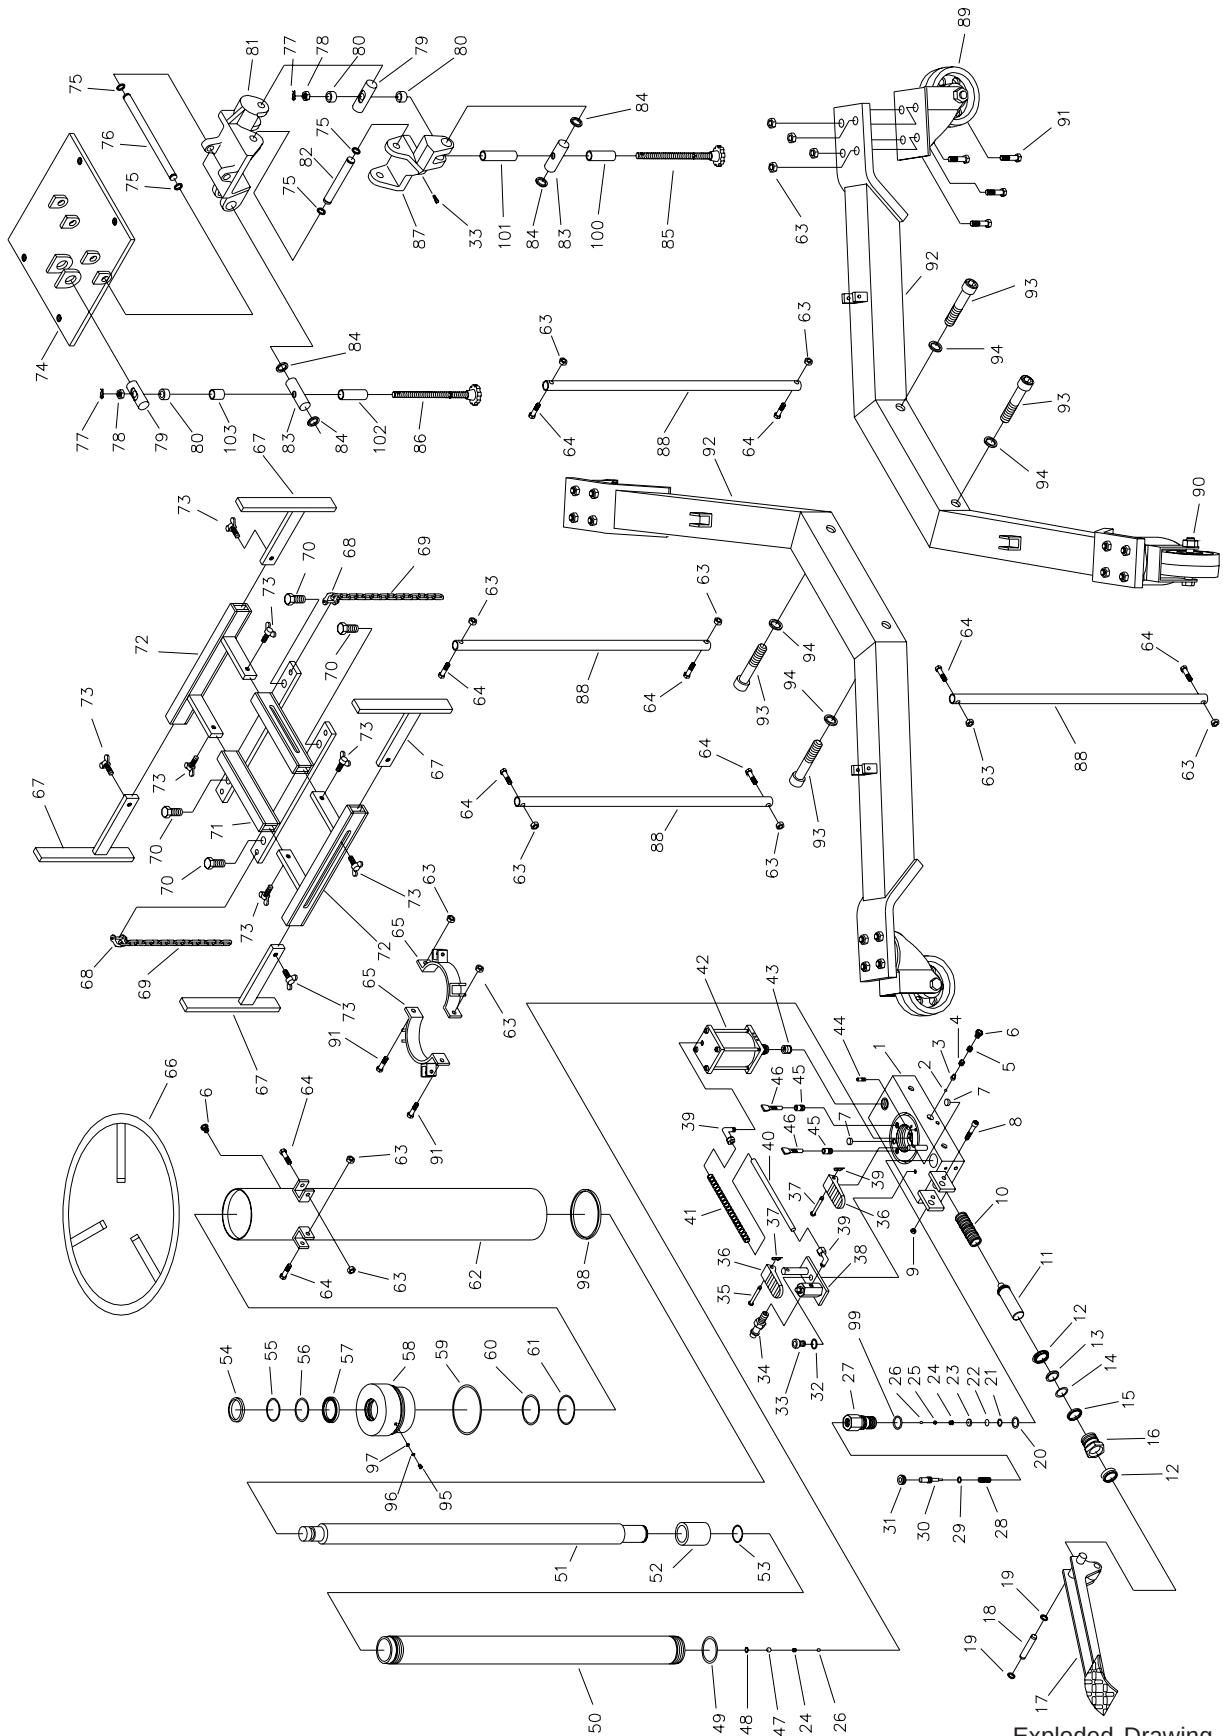

Exploded Drawing
2nd Edition © Oct. 2005