



2000-lb Telescopic Transmission Jack

SPARE PARTS LIST

Model # 42003

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	G37-3-1601-107	Base	1	51*	522-7-0450-109	U-cup	1
2	601-7-0007-007	Steel ball	1	52	G37-6-1801-103	Top nut	1
3	501-9-0085-303	Spring cap	1	53*	511-7-1030-107	O-ring	1
4	512-2-0077-105	Spring	1	54*	511-7-0620-305	O-ring	1
5	426-6-1201-106	Safety valve screw	1	55*	573-7-0588-105	Back-up ring	1
6	324-4-1900-208	Filler screw	2	56*	561-7-1020-003	Seal	1
7	G36-6-1606-108	Magnet	2	57	G37-3-1803-200	Reservoir assy.	1
8	649-1-0079-114	Bolt	1	58	661-2-0080-023	Nut	29
9	661-2-0079-101	Nut	1	59	653-1-0080-045	Hex. bolt	11
10	512-2-0250-103	Spring	1	60	G37-3-1806-105	Handle assy.	1
11	G37-6-1401-107	Pump piston	1	61	G37-3-1320-109	Bracket	2
12*	522-7-0200-106	U-cup	2	62	G37-3-2903-209	Saddle support bar	4
13*	511-7-0200-202	O-ring	1	63	G36-6-7000-102	Chain	2
14*	573-7-0200-103	Back-up ring	1	64	G52-4-4102-101	Chain & hook	4
15*	511-7-0320-303	O-ring	1	65	653-1-0159-109	Bolt	4
16	G37-6-1402-109	Pump piston guide ring	1	66	G37-3-2901-205	Support seat	1
17	G36-3-1900-100	Foot pedal	1	67	G37-3-2902-207	Adjustable bracket	2
18	G37-6-1603-109	Spindle	1	68	657-1-0095-107	Screw	8
19	667-5-0127-005	Retaining ring "C"	2	69	G37-3-4200-104	Saddle holder	1
20	515-3-0180-206	Copper gasket	1	70	667-5-0160-003	Retaining ring "C"	4
21	666-5-0150-104	Retaining ring "C"	1	71	G37-6-3304-109	Spindle	1
22	G37-6-1708-103	Spring washer	1	72	602-4-0025-017	Snap pin	2
23	G37-6-1706-109	Spring cap	1	73	661-2-0100-014	Nut	2
24	521-2-0062-020	Spring	2	74	G36-6-4205-105	Spindle	2
25	G37-6-1605-103	Spring cap	1	75	G36-3-5100-108	Trust bearing	3
26	601-7-0008-009	Steel ball	2	76	G36-6-4302-103	Saddle seat (upper)	1
27	G37-6-1705-107	Release valve lock nut	1	77	G37-6-3305-101	Spindle	1
28	512-2-0100-012	Spring	1	78	G36-6-4204-103	Support pin	2
29*	511-7-0100-309	O-ring	1	79	667-5-0250-004	Retaining ring "C"	4
30	G37-6-1703-103	Release valve	1	80	G37-6-4301-108	Saddle seat (lower)	1
31	G37-6-1707-101	Bolt	1	81	649-1-0079-105	Screw	1
32	G36-6-1809-102	Release pedal	1	82	G36-3-2300-101	Tilt screw assy.	1
33	566-4-0070-202	Pin	1	83	G37-6-1319-102	Support bar	4
34	513-5-0016-018	Retaining pin	1	84	G37-4-5200-105	Caster	2
35	532-8-0008-108	Filter	1	85	G37-4-5201-107	Caster - w/ brake	2
36	G36-6-1607-100	Tube	1	86	653-1-0080-02511	Bolt	18
37	G36-6-1608-102	Tube	1	87	G37-3-3300-103	Base assy.	2
38	601-7-0012-000	Steel ball	1	88	651-1-0127-100	Allen bolt	4
39	666-5-0120-105	Retaining ring "C"	1	89	605-3-0127-405	Spring washer	4
40	513-3-0500-020	Washer	1	90*	511-7-0240-035	O-ring	1
41	G37-6-1807-105	Cylinder	1	91	G36-3-2301-103	Tilt screw assy.	1
42	G37-6-1201-109	Piston rod	1	92	G36-5-4207-103	Tube	1
43	G37-6-1204-105	Guide ring	1	93	G36-5-4208-105	Tube	1
44	139-6-1214-107	Retaining ring	1	94	G36-5-4209-107	Tube	1
45	101-5-1602-100	Safety valve screw	1	95	G36-5-4210-102	Tube	1
46*	577-7-0035-001	Back-up ring	1	(*)	G37-3-9901-109	Repair kit	-
47*	511-7-0031-003	O-ring	1				
48*	542-7-0450-105	Seal	1				
49*	573-7-0448-109	Back-up ring	1				
50*	511-7-0450-306	O-ring	1				

* Repair kit includes item# 12, 13, 14, 15, 29, 46, 47, 48, 49, 50, 51, 53, 54, 55, 56 & 90

42003-S0



2000-lb Telescopic Transmission Jack

SPARE PARTS LIST


Model # 42003

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	N/A	Base	1	51	*	U-cup	1
2	N/A	Steel ball	1	52	N/A	Top nut	1
3	N/A	Spring cap	1	53	*	O-ring	1
4	N/A	Spring	1	54	*	O-ring	1
5	N/A	Safety valve screw	1	55	*	Back-up ring	1
6	324-4-1900-208	Filler screw	2	56	*	Seal	1
7	N/A	Magnet	2	57	N/A	Reservoir assy.	1
8	N/A	Bolt	1	58	N/A	Nut	29
9	N/A	Nut	1	59	N/A	Hex. bolt	11
10	N/A	Spring	1	60	G37-3-1806-105	Handle assy.	1
11	N/A	Pump piston	1	61	G37-3-1320-109	Bracket	2
12	*	U-cup	2	62	G37-3-2903-209	Saddle support bar	4
13	*	O-ring	1	63	G36-6-7000-102	Chain	2
14	*	Back-up ring	1	64	G52-4-4102-101	Chain & hook	4
15	*	O-ring	1	65	653-1-0159-109	Bolt	4
16	N/A	Pump piston guide ring	1	66	G37-3-2901-205	Support seat	1
17	G36-3-1900-100	Foot pedal	1	67	G37-3-2902-207	Adjustable bracket	2
18	N/A	Spindle	1	68	657-1-0095-107	Screw	8
19	N/A	Retaining ring "C"	2	69	G37-3-4200-104	Saddle holder	1
20	N/A	Copper gasket	1	70	N/A	Retaining ring "C"	4
21	N/A	Retaining ring "C"	1	71	G37-6-3304-109	Spindle	1
22	N/A	Spring washer	1	72	N/A	Snap pin	2
23	N/A	Spring cap	1	73	N/A	Nut	2
24	N/A	Spring	2	74	G36-6-4205-105	Spindle	2
25	N/A	Spring cap	1	75	G36-3-5100-108	Trust bearing	3
26	N/A	Steel ball	2	76	G36-6-4302-103	Saddle seat (upper)	1
27	N/A	Release valve lock nut	1	77	G37-6-3305-101	Spindle	1
28	N/A	Spring	1	78	G36-6-4204-103	Support pin	2
29	*	O-ring	1	79	N/A	Retaining ring "C"	4
30	N/A	Release valve	1	80	G37-6-4301-108	Saddle seat (lower)	1
31	N/A	Bolt	1	81	N/A	Screw	1
32	G36-6-1809-102	Release pedal	1	82	G36-3-2300-101	Tilt screw assy.	1
33	566-4-0070-202	Pin	1	83	G37-6-1319-102	Support bar	4
34	N/A	Retaining pin	1	84	G37-4-5200-105	Caster - w/o brake	2
35	N/A	Filter	1	85	G37-4-5201-107	Caster - w/ brake	2
36	N/A	Tube	1	86	N/A	Bolt	18
37	N/A	Tube	1	87	G37-3-3300-103	Base assy.	2
38	N/A	Steel ball	1	88	651-1-0127-100	Allen bolt	4
39	N/A	Retaining ring "C"	1	89	605-3-0127-405	Spring washer	4
40	N/A	Washer	1	90	*	O-ring	1
41	N/A	Cylinder	1	91	G36-3-2301-103	Tilt screw assy.	1
42	N/A	Piston rod	1	92	G36-5-4207-103	Tube	1
43	N/A	Guide ring	1	93	G36-5-4208-105	Tube	1
44	N/A	Retaining ring	1	94	G36-5-4209-107	Tube	1
45	N/A	Safety valve screw	1	95	G36-5-4210-102	Tube	1
46	*	Back-up ring	1	(*)	G37-3-9901-109	Repair kit	-
47	*	O-ring	1	* - Repair kit includes item# 12, 13, 14, 15, 29, 46, 47, 48, 49, 50, 51, 53, 54, 55, 56 & 90 N/A - Parts not available			
48	*	Seal	1				
49	*	Back-up ring	1				
50	*	O-ring	1				



1 Ton Telescopic Transmission Jack

Model # 42003

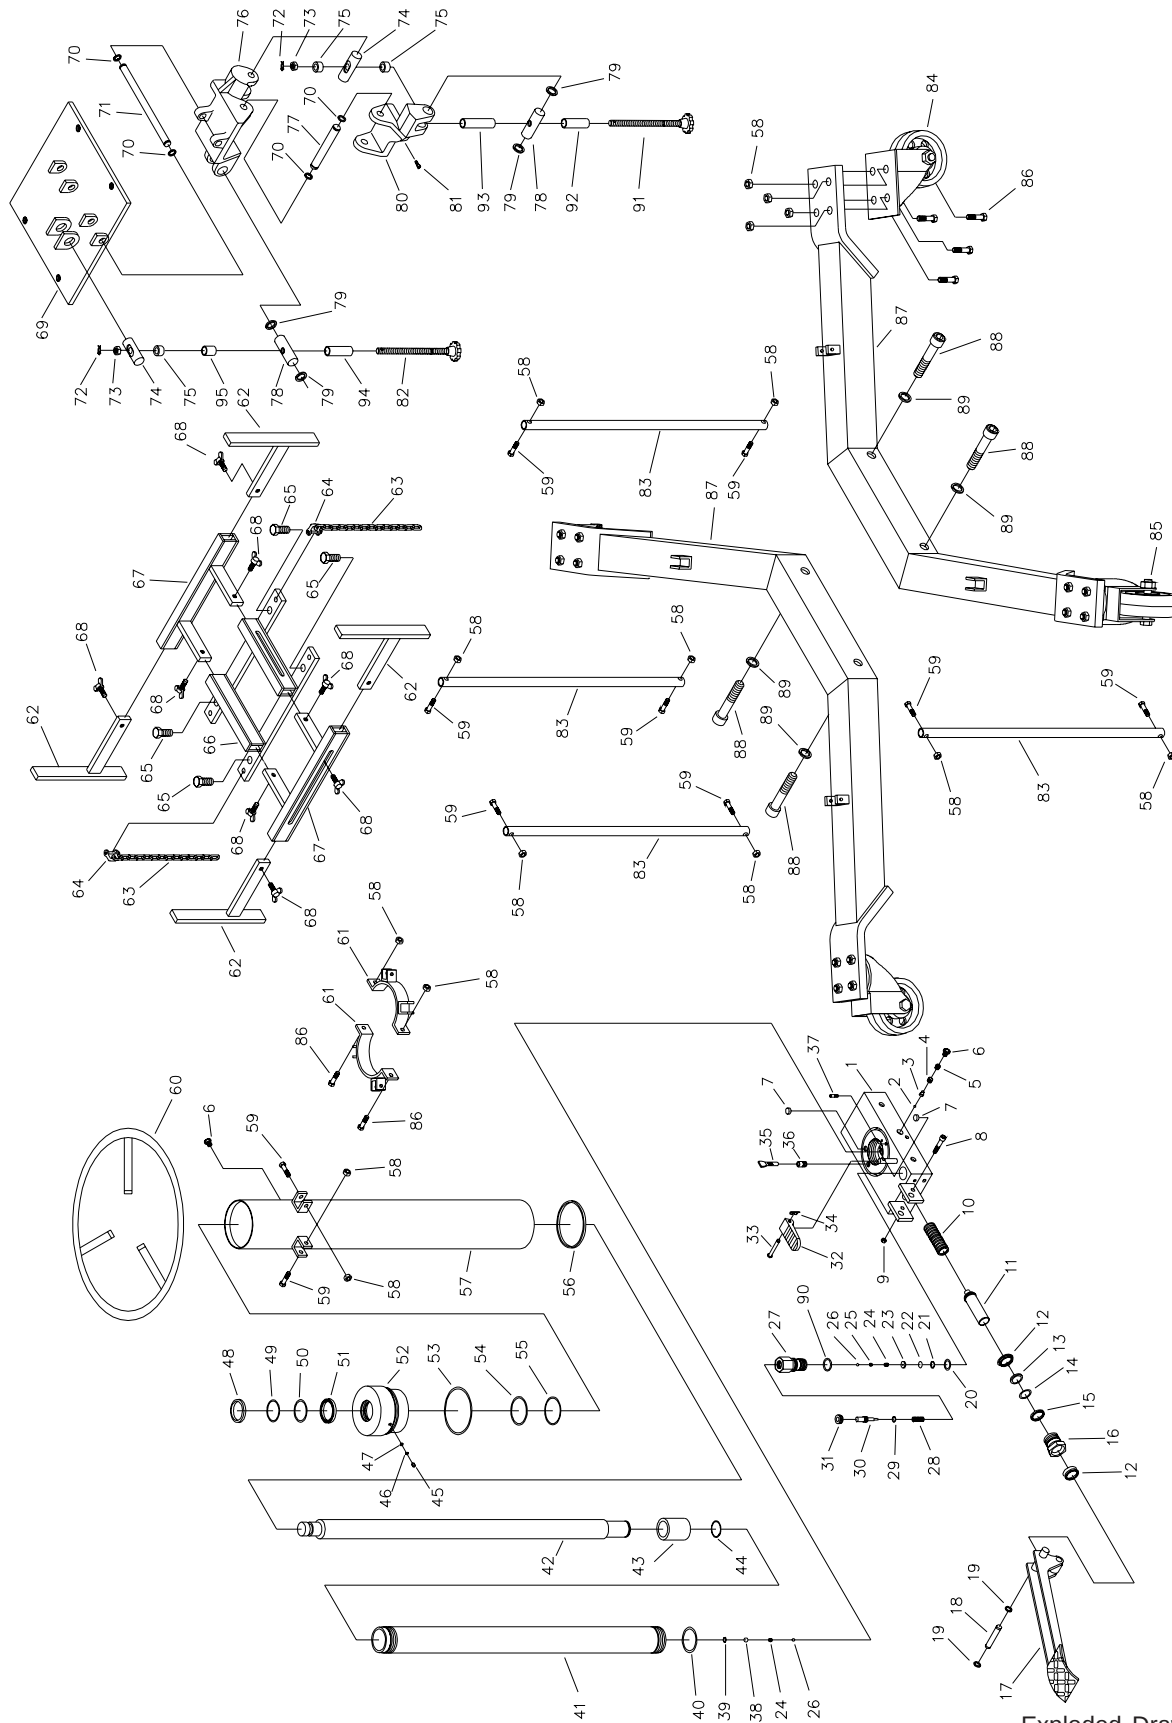

Exploded Drawing
2nd Edition © Oct. 2005