



SPARE PARTS LIST


Model # 45440

ITEM	PARTCODE	DESCRIPTION	QTY	ITEM	PARTCODE	DESCRIPTION	QTY
1	B01-3-4210-106	saddle base	1	47	B01-6-1302-104	link	1
2	610-1-0080-011	philip screw	8	48	566-4-0070-101	pin	1
3	605-3-0080-102	spring washer	8	49	601-4-0030-059	pin	1
4	651-2-0080-034	hex. nut	8	50	601-4-0030-077	pin	1
5	B01-6-4201-103	jaw	1	51	B01-5-1701-102	release valve	1
6	*	o-ring	1	52	601-7-0006-005	steel ball	1
7	N/A	top nut	1	53	101-6-1603-108	screw	1
8	*	o-ring	2	54	*	filler plug	1
9	B01-3-1803-108	reservoir assy.	1	59	410-4-4010-203	bearings	4
10	N/A	cylinder	1	60	B01-3-9905-106	repair kits	1
11	N/A	piston rod	1	* repair kits includes 6, 8, 13, 14, 15, 16, 27, 28, 29, 30, 33, 37, 54.			
12	288-6-1209-106	ram bearing	1				
13	*	back-up ring	1				
14	*	u-cup	1				
15	*	back-up ring	1				
16	*	gasket	1				
17	N/A	base	1				
18	653-1-0080-151	screw	4				
19	605-3-0080-102	lock washer	4				
20	651-2-0080-034	nut	4				
21	B01-3-3200-300	leg assy.	1				
22	B01-6-3201-300	long leg	1				
23	601-4-0040-070	pin	1				
24	B01-6-1306-203	pump piston	1				
25	B01-6-1307-104	washer	1				
26	512-2-0385-014	comp. spring	1				
27	*	back-up ring	1				
28	*	o-ring	1				
29	*	back-up ring	1				
30	*	u-cup	1				
31	238-6-1401-401	plunger housing	1				
32	531-3-0270-021	washer	1				
33	*	packing	1				
34	B01-4-1500-106	hyd. cartridge assy.	1				
35	B01-6-1703-203	knob	1				
36	B01-6-1704-104	extension tube	1				
37	*	o-ring	1				
38	661-2-0120-010	nut	4				
39	410-3-5100-405	rear castor assy.	4				
40	B01-3-1305-102	rear link	1				
41	661-2-0080-014	nut	1				
42	653-1-0080-041	bolt	1				
43	B01-6-1304-108	front link	1				
44	513-5-0016-018	retaining pin	3				
45	566-4-0080-508	pin	2				



440 LB. Hydraulic Pit Jack

Model # 45440

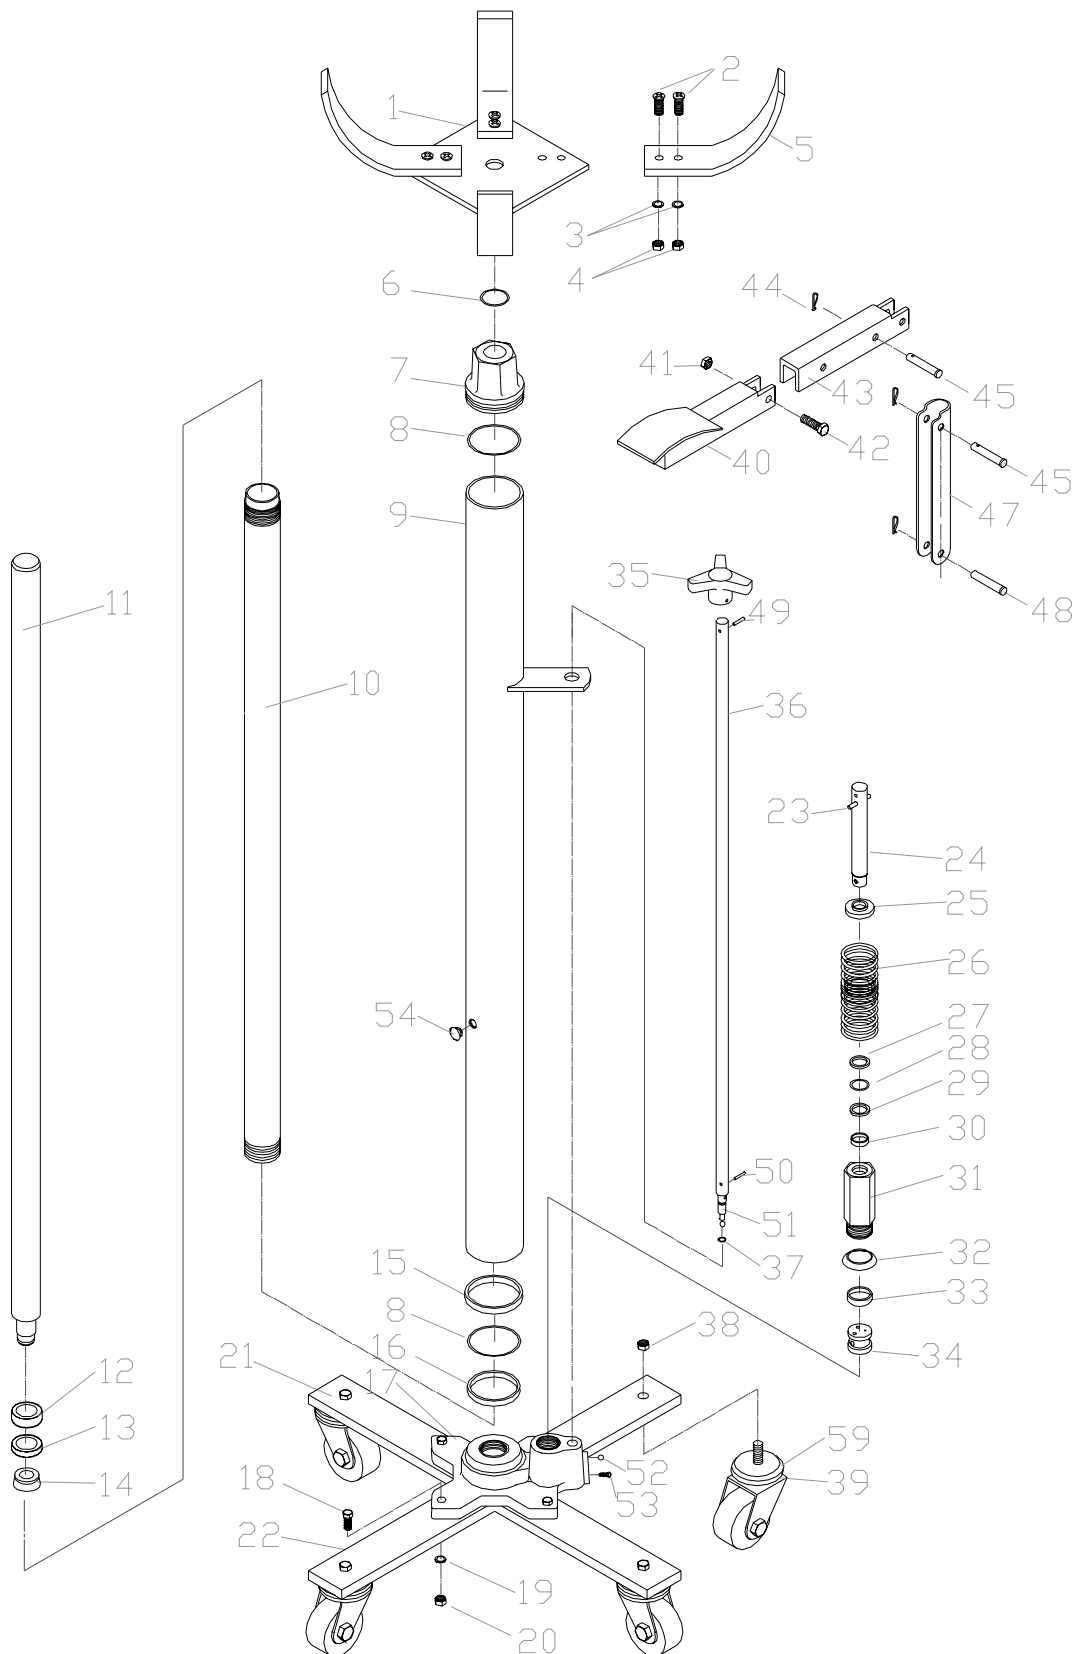

Exploded Drawing
1st Edition ©1997 01