




Hydraulic Bottle Jack

Operating Instructions & Parts Manual

Model Number	Capacity	Min. Ht	Max. Ht
B-002D	2 Ton	7-1/8"	13-5/8"
B-004D	4 Ton	8"	15-3/8"
B-006D	6 Ton	8-1/2"	16-1/4"
B-008D	8 Ton	8-7/8"	17-3/8"
B-012D	12 Ton	9-1/2"	18-7/8"
B-S12D (Shorty)	12 Ton	6"	10-5/8"
B-020D	20 Ton	9-1/2"	18-7/8"
B-S20D (Shorty)	20 Ton	6-1/2"	11"

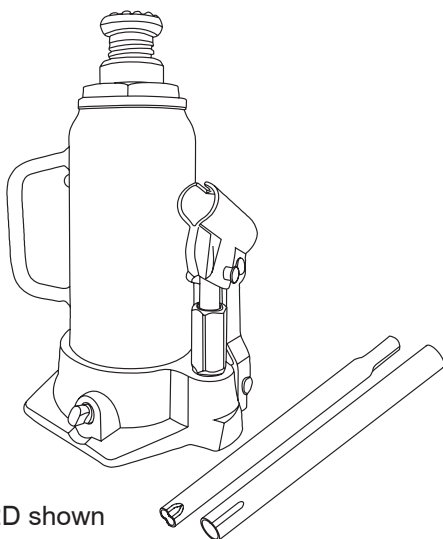

Model B-012D shown

WARNING

To avoid **crushing and related injuries**:

- **NEVER** work on, under or around a load supported only by a hydraulic jack.
- **ALWAYS** use a pair of appropriately rated jack stands.



SFA Companies, Inc.
10939 N. Pomona Ave.
Kansas City, MO 64153
Phone 1-888-332-6419

Printed in China
BOTTLE JACK-M0_102011

Save these instructions. For your safety, read, understand, and follow the information provided with and on this jack. The owner and operator of this equipment shall have an understanding of this jack and safe operating procedures before attempting to use. The owner and operator shall be aware that use and repair of this product may require special skills and knowledge. Instructions and safety information shall be conveyed in the operator's native language before use of this jack is authorized. If any doubt exists as to the safe and proper use of this jack, remove from service immediately. **Inspect before each use.** Do not use if broken, bent, cracked, or damaged parts (including labels) are noted. Any jack that appears damaged in any way, operates abnormally or is missing parts, shall be removed from service immediately. If the jack has been or suspected to have been subjected to a shock load (a load dropped suddenly, unexpectedly upon it), immediately discontinue use until jack has been checked by a factory authorized service center. It is recommended that an annual inspection be done by qualified personnel. Labels and Owner's Manuals are available from manufacturer (see Replacement Parts, page 5).

PRODUCT DESCRIPTION

The Pro-Lift Hydraulic Bottle Jack is designed to lift, but not sustain, loads ranging from 12 tons thru 20 tons depending on the rated capacity of the jack. It is designed to be used vertically. After lifting, loads must be **immediately** supported by appropriate means. This model is suitable for use in an appropriately rated and designed vertical or bench press structure. This jack is **not** recommended for use in lifting or positioning construction trailers, houses and/or other building structures.

BEFORE USE

1. Verify that the product and the application are compatible, if in doubt call **Pro-Lift Customer Support @ (888) 332-6419**.
2. Before using this product, read the owner's manual completely and familiarize yourself thoroughly with the product, its components and recognize the hazards associated with its use.
3. Using the stamped end of the provided handle, engage and turn the release valve counterclockwise no more than 1/2 full turns from a fully closed position.
4. With saddle fully lowered, locate and remove the oil filler plug. Insert the handle into the handle sleeve, then pump 6 to 8 full strokes. This will help release any pressurized air which may be trapped within the reservoir. Oil level should be even with the bottom of the oil filler plug hole. Reinstall the oil filler plug.
5. Check that the pump operates smoothly before putting into service. Replace worn or damaged parts and assemblies with Pro-Lift Authorized Replacement Parts only. (See Replacement Parts Section). Lubricate as instructed in Maintenance Section.

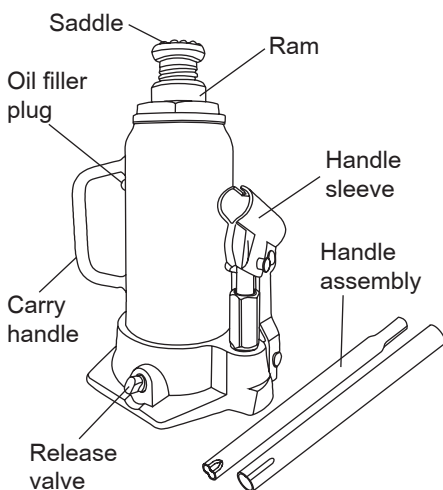


Fig. 1 - Bottle Jack Nomenclature

WARNING

Study, understand, and follow all instructions before operating this device. Do not exceed rated capacity. Use only on hard, level surfaces. Lifting device only. Immediately after lifting, support the vehicle with appropriate means. Lift only on areas of the vehicle as specified by the vehicle manufacturer. No alterations shall be made to this product. Only attachments and/or adapters supplied by the manufacturer shall be used. Failure to heed these markings may result in personal injury and/or property damage.

ADVERTISSEMENT

Assurez-vous de bien lire, de comprendre, et de suivre toutes les instructions avant d'utiliser ce dispositif. Ne dépassez pas la capacité nominale spécifiée. Utilisez sur un sol plat et stable. C'est un dispositif de levage seulement. Après le levage, transférez immédiatement la charge sur une paire de béquilles de cric de véhicule ayant la capacité nominale appropriée. Le levage doit s'effectuer seulement aux endroits du véhicule spécifiés par le fabricant du véhicule. Il est interdit de modifier ce dispositif. N'utilisez que des pièces détachées et/ou des adaptateurs fournis par le fabricant. Respectez les mises en garde et avertissements de ce guide sous peine de provoquer des blessures personnelles ou de causer des dégâts matériels.

ADVERTENCIA

Leer, comprender, y seguir las instrucciones antes de utilizar el aparato. El manual de instrucciones y la información de seguridad deben estar comunicado en el lengua del operador antes del uso. Ascensor sólo en las zonas del vehículo según especificado por el fabricante del vehículo. No se harán cambios a este producto. Sólo componentes adjuntos y / o adaptadores suministrados por el fabricante, deben de ser utilizados. No seguir estas indicaciones puede causar daos personales o materiales.

CAUTION

Be sure all tools and personnel are clear before lowering load.

OPERATION

Lifting (refer to Fig 1, Page 2)

1. Place vehicle in park, with emergency brake on and wheels securely chocked to prevent inadvertent vehicle movement.
2. Locate and close release valve by turning handle clockwise until firm resistance is felt to further thread engagement. Center jack saddle under lift point.
3. Verify lift point, insert handle into handle sleeve and pump to contact lift point. To lift, pump handle until load reaches desired height.
4. Transfer the load immediately to appropriately rated jack stands.

Lowering

1. Raise load high enough to clear the jack stands, then carefully remove jack stands (**always** used in pairs).
2. Slowly turn the handle counterclockwise, but no more than 1/2 turn. If the load fails to lower:
 - a. Use another jack to raise the vehicle high enough to reinstall jack stands.
 - b. Remove the affected jack and then the stands.
 - c. Using the other jack, lower the load by turning the operating handle counter-clockwise, but no more than 1/2 turn.
3. After removing jack from under the load, push saddle down to reduce ram exposure to rust and contamination.

MAINTENANCE

Important: Use only a good grade hydraulic jack oil. Avoid mixing different types of fluid and **Never** use brake fluid, turbine oil, transmission fluid, motor oil or glycerin. Improper fluid can cause failure of the jack and the potential for sudden and immediate loss of load. Pro-Lift recommends Mobil DTE13M or equivalent.

Adding oil

1. With saddle fully lowered and pump piston fully depressed, set jack in its upright, level position. Remove oil filler plug.
2. Fill until oil is level with the filler plug hole, reinstall oil filler plug.

Changing oil

For best performance and longest life, replace the complete fluid supply at least once per year.

1. With saddle fully lowered, remove the oil filler plug.
2. Lay the jack on its side and drain the fluid into a suitable container.
Note: Dispose of hydraulic fluid in accordance with local regulations.
3. Set jack in its upright, level position. Fill until oil is level with the filler plug hole, reinstall oil filler plug.

Lubrication

A periodic coating of light lubricating oil to pivot points, axles and hinges will help to prevent rust and assure that pump assemblies move freely.

Cleaning

Periodically check the pump piston and ram for signs of rust or corrosion. Clean as needed and wipe with an oily cloth.

Note: Never use sandpaper or abrasive material on these surfaces!


TROUBLESHOOTING

Symptom	Possible Causes	Corrective Actions
Jack will not lift load	<ul style="list-style-type: none">• Release valve not tightly closed• Overload condition	<ul style="list-style-type: none">• Ensure release valve tightly closed• Remedy overload condition
Jack bleeds off after lift	<ul style="list-style-type: none">• Release valve not tightly closed• Overload condition• Hydraulic unit malfunction	<ul style="list-style-type: none">• Ensure release valve tightly closed• Remedy overload condition• Contact Pro-Lift Customer Support
Jack will not lower after unloading	<ul style="list-style-type: none">• Reservoir overfilled• Linkages binding	<ul style="list-style-type: none">• Drain Fluid to proper level• Clean and lubricate moving parts
Poor lift performance	<ul style="list-style-type: none">• Fluid level low• Air trapped in system	<ul style="list-style-type: none">• Ensure proper fluid level• With ram fully retracted, remove oil filler plug to let pressurized air escape, then reinstall oil filler plug
Jack will not lift to full extension	<ul style="list-style-type: none">• Fluid level low	<ul style="list-style-type: none">• Ensure proper fluid level

REPLACEMENT PARTS

Not all components of the jack are replacement items, but are illustrated as a convenient reference of location and position in the assembly sequence. When ordering parts, give model number, serial number and description below. Call or write for current pricing: phone (816) 891-6390, fax (816) 891-6599 or contact Pro-Lift Customer Support, 10939 N. Pomona Ave., Kansas City, MO 64153.

Part No.	Description	Qty
1	Oil Filler Plug	1
2	Handle Assembly	1
--	Label	1
--	Owner's Manual	1

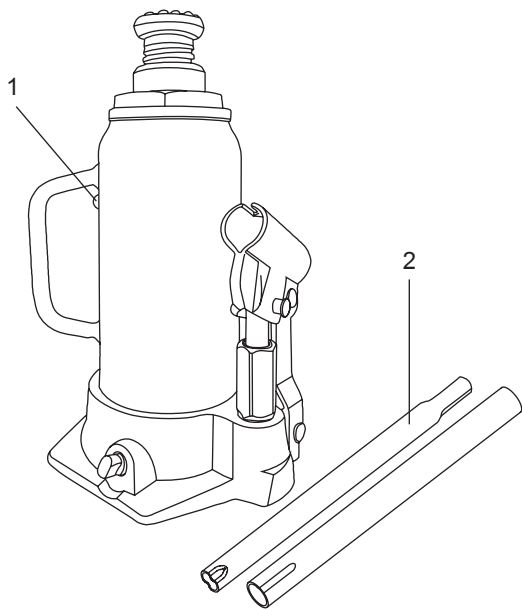

TWO YEARS LIMITED WARRANTY

For a period of two (2) years from date of purchase, **SFA Companies, Inc.** will repair or replace, at its option, without charge, any of its products which fails due to a defect in material or workmanship, or which fails to conform to any implied warranty not excluded hereby.

Performance of any obligation under this warranty may be obtained by returning the warranted product, freight prepaid, to **SFA Companies, Inc.** Warranty Service Department, 10939 N. Pomona Ave., Kansas City, MO 64153.

Except where such limitations and exclusions are specifically prohibited by applicable law, (1) the CONSUMER'S SOLE AND EXCLUSIVE REMEDY SHALL BE THE REPAIR OR REPLACEMENT OF DEFECTIVE PRODUCTS AS DESCRIBED ABOVE, and (2) **SFA Companies, Inc.** SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGE OR LOSS WHATSOEVER, and (3) THE DURATION OF ANY AND ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED TO A PERIOD OF TWO (2) YEARS FROM DATE OF PURCHASE.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

This image shows a single sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There is a vertical margin line on the left side, creating a narrow left margin. The paper appears to be from a notebook or a standard ruled sheet of paper.

SFA Companies, Inc.
10939 N. Pomona Ave.
Kansas City, MO 64153
Phone (816) 891-6390, Fax (816) 891-6599



This image shows a single sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There is no handwriting or other markings on the paper.

© 2006 The Authors
Journal compilation © 2006 Blackwell Publishing Ltd

