ASSEMBLY, OPERATING INSTRUCTIONS AND PARTS LIST FOR SEARS HYDRAULIC JACKS

MODEL NUMBERS

727.124103	Ton	727.12560 1½	Ton
727.12420 5	Ton	727.12751 20	Ton
727.124308	Ton	727.12760 12	Ton

The above numbers are the model numbers of the Sears Hydraulic Jacks. The number is located on a decal attached to the front of the jack and is also stamped on the Link. Always mention this model number in all correspondence regarding the jack or when ordering spare parts.

HOW TO ORDER REPAIR PARTS

All parts listed herein may be ordered through SEARS, ROEBUCK AND CO. When ordering parts by mail from the mail order house which serves the territory in which you live, selling prices will be furnished on request or parts will be shipped at prevailing prices and you will be billed accordingly.


WHEN ORDERING REPAIR PARTS ALWAYS GIVE THE FOLLOWING INFORMATION AS SHOWN IN THIS LIST.

- 1. The PART NUMBER.
- 2. The PART NAME.
- 3. The MODEL NUMBER.

This list is valuable. It will assure you of being able to obtain proper parts service at all times. We suggest that you keep it with your other valuable papers.

SEARS, ROEBUCK AND CO., MADE IN U.S.A.

SEARS HYDRAULIC JACKS

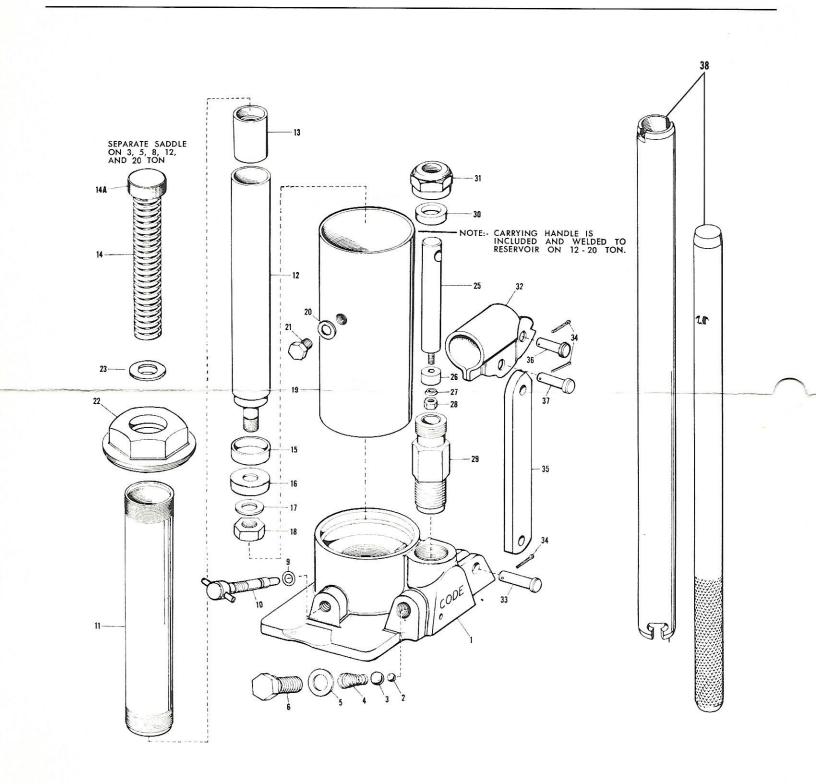

PART NUMBERS FOR MODEL NUMBERS

		727.12560	727,12410	727.12420	727.12430	727.12760	727.12751
tem No.	Description	1½ Ton	3 Ton	5 Ton	8 Ton	12 Ton	20 Ton
1.	Base	TC7.05-1	BA85.05-4	AA85.05-5	CB9.05-4	D87.05-1	EA11.05-2
2.	7/32" Ball	1.16	1.16	1.16	1.16	1.16	1.16
3.	5/16" Ball	\$1.16	\$1.16	\$1.16	\$1.16	\$1.16	\$1.16
4.	Outlet Valve Spring	BA85.183	BA85.183	BA85.183	BA85.183	BA85.183	BA85.183
5.	Valve Plug Gasket	B159.167	B159.167	B159.167	B159.167	B159.167	B159.167
6.	Valve Plug	CB9.185-2	CB9.185-2	CB9.185-2	CB9.185-2	CB9.185-2	CB9.185-2
9.	Release Valve "O" Ring	AJ100.312	AJ100.312	AJ100.312	AJ100.312	AJ100.312	AJ100.312
10.	Release Valve Spindle	AJ10.059	AJ10.059	AJ10.059	AJ10.059	AJ10.059	AJ10.059
11.	Cylinder	TC7.30	BA85.30-3	CB9.30-2	CB9.30-2	D87.30-2	EA11.30-1
12.	Plunger	TC7.40	BA85.40-4	AA85.40-3	AA85.40-3	D87.40-2	EA11.40-2
13.	Plunger Sleeve	TC7.39	BA85.39	AA85.39	AA85.39	D87.39	None
14.	Adjusting Screw	AJ100.016	BA85.28-1	AA85.28-1	AA85.28-1	D87.28-2	None
14A.	Saddle	See Item 14	CJ100.028	EJ100.027	EJ100.027	KJ100.021	NJ100.017
15.	Plunger Ring	TC7.29	BA85.29-3	AA85.29-2	AA85.29-2	D87.29-2	EA11.29-1
16.	Plunger Cup	TC7.41-1	1.41-1	M73-41-1	M73-41-1	D11.41-1	EA11.41-1
17.	Washer	TC7.43	BA85.43	AA85.43	AA85.43	D87.43	EA11.43-1
18.	Jam Nut	MJ35	MJ35	AA85.120	AA85.120	D87.120	EA11.120
19.	Reservoir	TC7.25	BA85.25-2	AA85.25-2	CB9.25-2	D87.25B	EA11.25A-
20.	Filler Gasket	C9.37	C9.37	C9.37	C9.37	C9.37	C9.37
21.	Filler Plug	C9.22-2	C9.22-2	C9.22-2	C9.22-2	C9.22-2	C9.22-2
22.	Тор Сар	AJ100.166	CJ100.100	EJ100.100	HJ100.055	D87.20-2	EA11.20-2
23.	Quad Ring	AJ100.214	CJ100.104	EJ100.102	EJ100.102	KJ100.090	NJ100.046
25.	Pump Plunger	CB9.51-1	CB9.51-1	CB9.51-1	CB9.51-1	CB9.51-1	CB9.51-1
26.	Pump Cup	E221.041	E221.041	E221.041	E221.041	E221.041	E221.041
27.	Pump Cup Spreader	SJ100.169	SJ100.169	SJ100.169	\$J100.169	SJ100.169	SJ100.169
28.	Retaining Nut	CB9.55	CB9.55	CB9.55	CB9.55	CB9.55	CB9.55
29.	Pump Cylinder	CB9.50-1	CB9.50-1	CB9.50-1	CB9.50-1	CB9.50-1	CB9.50-1
30.	Pump Packing	5.75	5.75	5.75	5.75	5.75	5.75
31.	Pump Gland Nut	CB9.54-1	CB9.54-1	CB9.54-1	CB9.54-1	CB9.54-1	CB9.54-1
32.	Beam	J19.60	J19.60	J19.60	J19.60	J19.60	J19.60
33.	Base Link Pin	BA85.57-1	BA85.57-1	BA85.57-1	BA85.57-1	BA85.57-1	BA85.57-1
34.	Cotter Pin	1.58	1.58	1.58	1.58	1.58	1.58
35.	Link	BA85.62-2	BA85.62-2	BA85.62-2	BA85.62-2	BA85.62-2	BA85.62-2
36.	Beam Link Pin	TC7.57	TC7.57	TC7.57	TC7.57	TC7.57	TC7.57
37.	Beam Pin	J19.57	J19.57	J19.57	J19.57	J19.57	J19.57
38.	Handle Assem. 2 Piece	H-12	H-12	H-12	H-12	H-12	H-12
	Decal (Not Illustrated)	H50.026	H52.026	H53.026	H54.026	H55.026	H56.026