



Repair Parts List - Models HJ2B through HJ11BLP							
Item	Model Number						Description
	HJ2B	HJ3B	HJ5B	HJ8B	HJ11B	HJ11BLP	
★	HJBK2	HJBK3	HJBK5	HJBK8	HJBK11	HJBK11	Seal Kit
●	HJBK1	HJBK1	HJBK1	HJBK1	HJBK1	HJBK1	Pump/Release Valve Kit
◆	HJBRH555	HJBRH555	HJBRH555	HJBRH555	HJBRH555	HJBRH555	Pump Handle Kit
■	N/A	N/A	N/A	N/A	N/A	N/A	Carry Handle Kit

Repair Parts List - Models HJ22B through HJ100A						
Item	Model Number					Descriptions
	HJ22B	HJ22BLP	HJ35B	HJ55B	HJ100A	
★	HJBK22	HJBK22	HJBK35	HJBK55	HJAK100S	Seal Kit
●	HJBK1	HJBK1	HJBK1	HJBK1	HJAK100	Pump/Release Valve Kit
◆	HJBRH555	HJBRH555	HJBRH555	HJBRH555	HJARH100	Pump Handle Kit
■	HJBRH220	HJBRH220	HJBRH355	HJBRH550	N/A	Carry Handle Kit

Note: See graphic on page 1 for service item locations.																									
Service Item	Action / Comment																								
①	<p>All models: Replace decal if worn or unreadable.</p> <p>Models HJ11B and HJ22B: The seal kit contains two sets of decals. Be sure to use the correct decals for your jack model.</p>																								
②	<p><b>Important:</b></p> <ul style="list-style-type: none"> <li>• Be sure ram is fully retracted before checking oil level or adding additional oil.</li> <li>• Use only Simplex hydraulic oil.</li> <li>• Jack hydraulic reservoir is full when oil level is up to - but not above - the oil fill hole.</li> </ul> <p><b>Do not overfill!</b></p> <table border="0"> <thead> <tr> <th>MODEL</th> <th>APPROXIMATE OIL CAPACITY*</th> </tr> </thead> <tbody> <tr> <td>HJ2B .....</td> <td>3.04 oz [90 cc]</td> </tr> <tr> <td>HJ3B .....</td> <td>3.04 oz [90 cc]</td> </tr> <tr> <td>HJ5B .....</td> <td>5.41 oz [160 cc]</td> </tr> <tr> <td>HJ8B .....</td> <td>9.29 oz [275 cc]</td> </tr> <tr> <td>HJ11B .....</td> <td>9.29 oz [275 cc]</td> </tr> <tr> <td>HJ11BLP .....</td> <td>8.79 oz [260 cc]</td> </tr> <tr> <td>HJ22B .....</td> <td>17.75 oz [525 cc]</td> </tr> <tr> <td>HJ22BLP .....</td> <td>13.52 oz [400 cc]</td> </tr> <tr> <td>HJ35B .....</td> <td>37.19 oz [1100 cc]</td> </tr> <tr> <td>HJ55B .....</td> <td>39.9 oz [1180 cc]</td> </tr> <tr> <td>HJ100A .....</td> <td>27.05 oz [800 cc]</td> </tr> </tbody> </table> <p>*With reservoir completely drained and ram fully retracted.</p>	MODEL	APPROXIMATE OIL CAPACITY*	HJ2B .....	3.04 oz [90 cc]	HJ3B .....	3.04 oz [90 cc]	HJ5B .....	5.41 oz [160 cc]	HJ8B .....	9.29 oz [275 cc]	HJ11B .....	9.29 oz [275 cc]	HJ11BLP .....	8.79 oz [260 cc]	HJ22B .....	17.75 oz [525 cc]	HJ22BLP .....	13.52 oz [400 cc]	HJ35B .....	37.19 oz [1100 cc]	HJ55B .....	39.9 oz [1180 cc]	HJ100A .....	27.05 oz [800 cc]
MODEL	APPROXIMATE OIL CAPACITY*																								
HJ2B .....	3.04 oz [90 cc]																								
HJ3B .....	3.04 oz [90 cc]																								
HJ5B .....	5.41 oz [160 cc]																								
HJ8B .....	9.29 oz [275 cc]																								
HJ11B .....	9.29 oz [275 cc]																								
HJ11BLP .....	8.79 oz [260 cc]																								
HJ22B .....	17.75 oz [525 cc]																								
HJ22BLP .....	13.52 oz [400 cc]																								
HJ35B .....	37.19 oz [1100 cc]																								
HJ55B .....	39.9 oz [1180 cc]																								
HJ100A .....	27.05 oz [800 cc]																								
③	Apply lubricating oil to pins and linkage.																								



**Service Information  
Repair Parts Sheet TD204**

