




TEMPLETON, KENLY & CO. INC.  
2525 Gardner rd. Broadview, Il. 60153 (312) 865-1500

# HYDRAULIC HAND JACK

Repair Part Sheet for  
HJ2, HJ3, HJ5, HJ8, HJ12, HJ17, HJ22, HJ33, HJ55

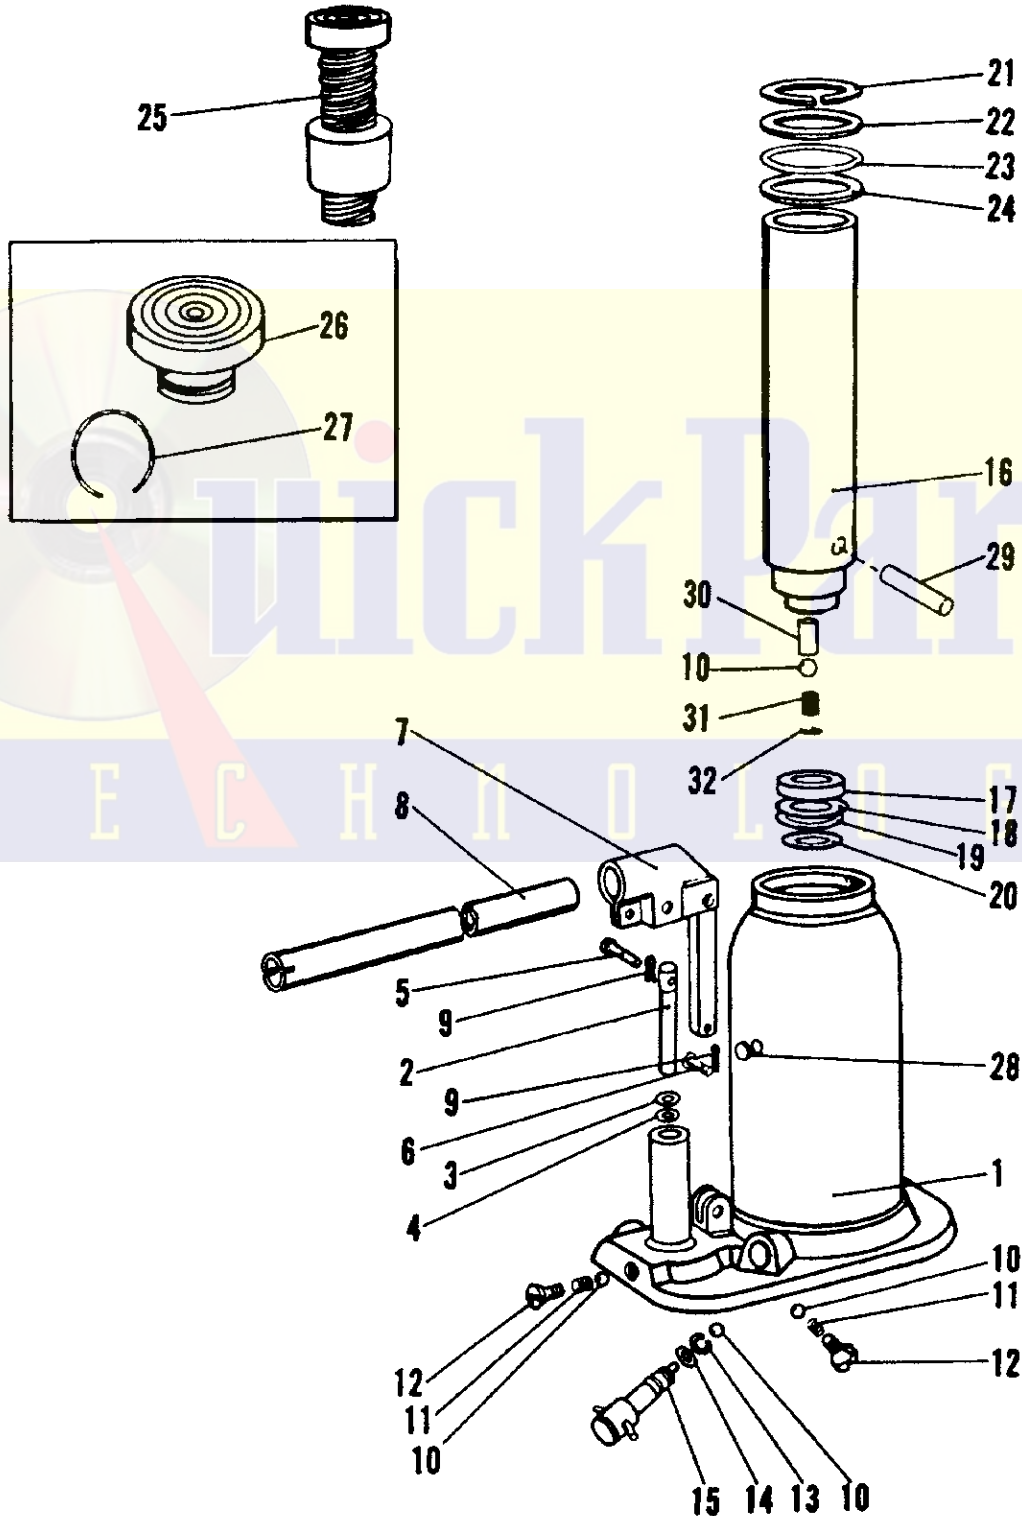

# HYDRAULIC HAND JACK



No.	Parts Description	HJ2 2 TON	HJ3 3 TON	HJ5 5 TON	HJ 8 8 TON	HJ12 LONG 12 TON	HJ12/LP 12 TON	HJ 17 LONG 17 TON	HJ17/LP 17 TON	HJ22 LONG 22 TON	HJ22LP 22 TON	HJ35 35 TON	HJ35/LP 35 TON	HJ55 55 TON
1	Oil 1 qt.	6018131	6018131	6018131	6018131	6018131	6018131	6018131	6018131	6018131	6018131	6018131	6018131	6018131
2	Pump Piston	6069001	6069183	6069170	6069173	6069173	6069173	6069173	6069173	6069176	6069176	6069179	6069179	6069148
3	B.U.Ring*	---	---	---	---	---	---	---	---	---	---	---	---	---
4	Piston Seal*	---	---	---	---	---	---	---	---	---	---	---	---	---
5	Pump Piston Pin	6069004	6069004	6069042	6069060	6069060	6069060	6069060	6069060	6069110	6069110	6069131	6069131	6069151
6	Pump Link Pin	6069005	6069005	6069043	6069061	6069061	6069061	6069092	6069092	6069092	6069092	6069092	6069092	6069152
7	Handle Socket	6069006	6069027	6069044	6069062	6069062	6069062	6069062	6069062	6069111	6069111	6069132	6069132	6069153
8	Handle	6069007	6069028	6069028	6069063	6069063	6069063	6069093	6069093	6069112	6069112	6069112	6069112	6069154
9	Pin Ring	6069008	6069029	6069045	6069064	6069064	6069064	6069064	6069064	6069113	6069113	6069133	6069133	6069155
10	Valve Ball	6069009	6069009	6069009	6069009	6069009	6069009	6069009	6069009	6069009	6069009	6069009	6069009	6069009
11	Valve Spring	---	---	6069046	6069046	6069046	6069046	6069046	6069046	6069046	6069046	6069046	6069046	6069046
12	Valve Plug	---	---	6069047	6069047	6069047	6069047	6069047	6069047	6069047	6069047	6069047	6069047	6069047
13	Stop Ring	6069010	6069010	6069010	6069010	6069010	6069010	6069010	6069010	6069010	6069010	6069010	6069010	6069010
14	Release Packing*	---	---	---	---	---	---	---	---	---	---	---	---	---
15	Release Assm.	6069012	6069012	6069012	6069012	6069012	6069012	6069012	6069012	6069012	6069012	6069012	6069012	6069012
16	Ram	6069013	6069030	6069048	6069065	6069077	6069089	6069094	6069200	6069114	6069128	6069134	6069264	6069156
17	Bearing - Ram	6069014	6069031	6069049	6069066	6069078	6069078	6069095	6069095	6069115	6069115	6069135	6069135	6069157
18	Seal Backup Ring*	---	---	---	---	---	---	---	---	---	---	---	---	---
19	Ram Seal*	---	---	---	---	---	---	---	---	---	---	---	---	---
20	Ram Seal Retainer	6069017	6069034	6069052	6069069	6069081	6069081	6069098	6069098	6069118	6069118	6069138	6069138	6069160
21	Snap Ring	6069018	6069035	6069053	6069070	6069082	6069082	6069099	6069099	6069119	6069119	6069139	6069139	6069161
22	Bearing - Guide	6069019	6069036	6069054	6069071	6069083	6069083	6069100	6069100	6069120	6069120	6069140	6069140	6069162
23	Cylinder Packing*	---	---	---	---	---	---	---	---	---	---	---	---	---
24	Stopper Ring	6069021	6069038	6069056	6069073	6069085	6069085	6069102	6069102	6069122	6069122	6069142	6069142	6069164
25	Screw Assm.	6069022	6069039	6069057	6069074	6069086	6069182	6069103	6069203	---	6069169	---	---	---
26	Saddle	---	---	---	---	---	---	---	---	6069123	---	6069143	6069143	6069165
27	Snap Ring	---	---	---	---	---	---	---	---	6069124	---	6069144	6069144	6069166
28	Oil Plug	6069023	6069023	6069023	6069023	6069023	6069023	6069023	6069023	6069023	6069023	6069023	6069023	6069023
29	Horizontal Pin	---	---	---	---	---	---	6069104	6069104	6069125	6069125	6069145	6069145	6069167
30	Vertical Pin	---	---	---	---	---	---	6069105	6069105	6069105	6069105	6069105	6069105	6069105
31	Valve Spring	---	---	---	---	---	---	6069106	6069106	6069106	6069106	6069106	6069106	6069106
32	Spring Retainer	---	---	---	---	---	---	6069107	6069107	6069107	6069107	6069107	6069107	6069107
33	Packing Kit	6068902	6068903	6068905	6068908	6068912	6068912	6068917	6068917	6068922	6068922	6068933	6068933	6068955

\* Items are included in Packing Kit.

## Operating Instructions for Simplex Hand Jacks

**To Raise:** Using the slotted handle, turn the release screw firmly to right, insert the handle into the socket and move the handle up and down.

**To Lower:** Stand clear of the load and using the same slotted handle, turn the release screw to left.

**To Add Oil:** Fully retract ram to collapse position. Remove the oil plug located on the side. Fill with Simplex® Hydraulic Oil until oil is level with bottom of filler hole.

**DO NOT OPERATE BEYOND RATED PRESSURE OR TRAVEL**

**TEMPLETON, KENLY & CO. INC.**  
2525 Gardner rd. Broadview, Il. 60153 (708) 865-1500