



INSTRUCTIONS FOR RAM REPAIR KITS:

OLDER MODEL RAMS HAVE TWO BACK-UP RINGS INSIDE AND OUT. NEW SPECIFICATIONS FOR BACK-UP RINGS REQUIRE ONLY ONE. BACK-UP RINGS SHOULD BE PUT ON FIRST AND GO ON WORKHEAD SIDE OF PISTON. INSTALL "O" RING SECOND BEHIND BACK-UP RING.