





PARTS LIST

Item No.	Description	Item No.	Description	Item No.	Description
1.1	end cover	3.24	connecting rod	3.61	screw
1.2	compression spring	3.25	drying brush	3.62	screw tube
1.3	deflector rod	3.26	wire	3.63	elbow joint
1.4	screw rod	3.27	pin	3.64	union
1.5	control rod	3.28	piston rod	3.65	spiral clamp ring
1.6	washer	3.29	locking nut	3.66	rubber hose
1.7	fastening screw	3.30	ring	3.67	spring
2.1	foot pedal	3.31	dust -proof ring	3.69	
2.2	circlo	3.32	seal ring	3.70	filter nozzle
2.3	pin	3.33	dust -proof ring	3.71	case
2.4	fork member	3.34	dust -proof ring	3.72	spring
2.5	bush	3.35	outside tube	3.73	
2.6	base	3.36A	washer	3.74	piston rod
2.7	spring	3.36	ring	3.75	seal ring
2.8	pin	3.37	fastening nut	3.76	rubber ring
2.9	cap	3.38	nut	3.77	rubber ring
2.10	shaft	3.39	cylinder base	3.78	throttle
2.11	screw	3.40	pump body	3.79	handle cover
2.12	washer	3.40A	o-ring	3.80	locking spring
2.13	washer	3.41	rubber ring	3.81	pin
2.14	clamp ring	3.42	seal ring	3.90	union
3.1	filter	3.43	plug bush	3.91	
3.2	washer	3.44	plug	4.1	cover
3.3	outside tube	3.45	cap	4.2	wheel cover
3.4	washer			4.3	injecting oil nozzle
3.5	valve seat			4.4	washer
3.6	needle	3.46	copped spring	4.5	screw
3.7	wire	3.47	spring holder	4.6	bearing cover
3.8	nut	3.48	piston	4.7	steel ball
3.9	spring	3.49	rubber o-ring	4.8	bearing holder
3.10	screw rod			4.9	wheel fork
3.11	robber ring	3.50	seal ring	4.10	wheel
3.12	robber ring	3.51	seal throattle	4.11	rivet
3.13	cylinder body	3.52	washer	5.1	axle
3.14	cover plate	3.53	throattle rod	5.2	nut
3.15	cover	3.54	rudder o-ring	5.3	stop ring
3.16	bole	3.55	rudder o-ring	5.4	wheel
3.17	bole	3.56	air pump body	5.5	pressure filter port
3.18	washer	3.57	washer	5.6	roller
3.21	nut	3.58	bolt	5.7	stop ring
3.22	connecting brush	3.59	rudder o-ring	5.8	split ring
3.23	wire	3.60	end cover	6.1	joint

PARTS LIST CONTINUED

6.2	screw	6.24	steel ball	7.3	stop ring
6.3	seal ring	6.25	large ball rod	7.4	level supporting rod
6.4	large nut	6.26	washer	7.5	axle
6.4A	dust-proof ring	6.27	bolt	7.6	rocker
6.5	ring	6.28	steel ball	7.7	bolt
6.6	washer	6.29	valve	7.8	axle
6.7	bush	6.30	spring	7.9	axle
6.8	seal ring	6.32	screw	7.10	injecting oil nozzle
6.9	piston rod	6.33	seal ring	7.11	split ring
6.10	rubber cup	6.34	screw	8.1	cover plate
6.11	stop ring	6.35	washer	8.2	side plate
6.12	spring	6.35B	shaft	8.3	
6.13	piston rod	6.36	steel ball	8.4	
6.14	steel ball	6.37	spring	8.5	screw
6.15	push needle	6.38	valve seat	8.6	washer
6.16	valve seat	6.39	steel ball	8.7	nut
6.17	screw	6.40	spring	8.8	nut
6.18	spring	6.41	washer	8.9	washer
6.20	outer body	6.42	scrw	8.10	limiter axle
6.22	steel ball	7.1	tray		
6.23	small push rod	7.2	joint		