



# Air Motor Assembly 64

## AIR MOTOR

Index No.	Part No.	Description	Qty.
32	**	Copper Washer	2
33		Oil Valve Assembly	1
34	**	Nylon Gasket	1
35		Pump Cylinder	1
36	**	Oil Seat	1
37	**	Nylon Gasket	1
38	**	Copper Washer	1
39		Nut	1
40		Bolt	8
41		Front Cover	1
42	**	Steel Ball 3	4
43		Air Pump Housing	1
44		Nut	1
45		Spring	1
46		Washer	1
47		Cylinder Pump Plunger	1
48		Piston Body "A"	1
49		O-Ring	1
50		Air Release Rod	1
51	**	O-Ring	2
52		Piston Body "B"	1
53		Bolt	3
54		Air Steel	1
55	**	O-Ring	2
56	**	O-Ring	1
57		Rear Cover	1
58		Pin	1
59	**	O-Ring	2
60		Screw	1
61		Air Valve	1
62		O-Ring	3
63	**	Nylon Washer	2
64		Air motor assembly	1
65		Hose	1
		Product Label Kit (Not shown)	1