


WATCO SERVICE MASTER SAFETY LIFT

Model 100

PARTS LIST

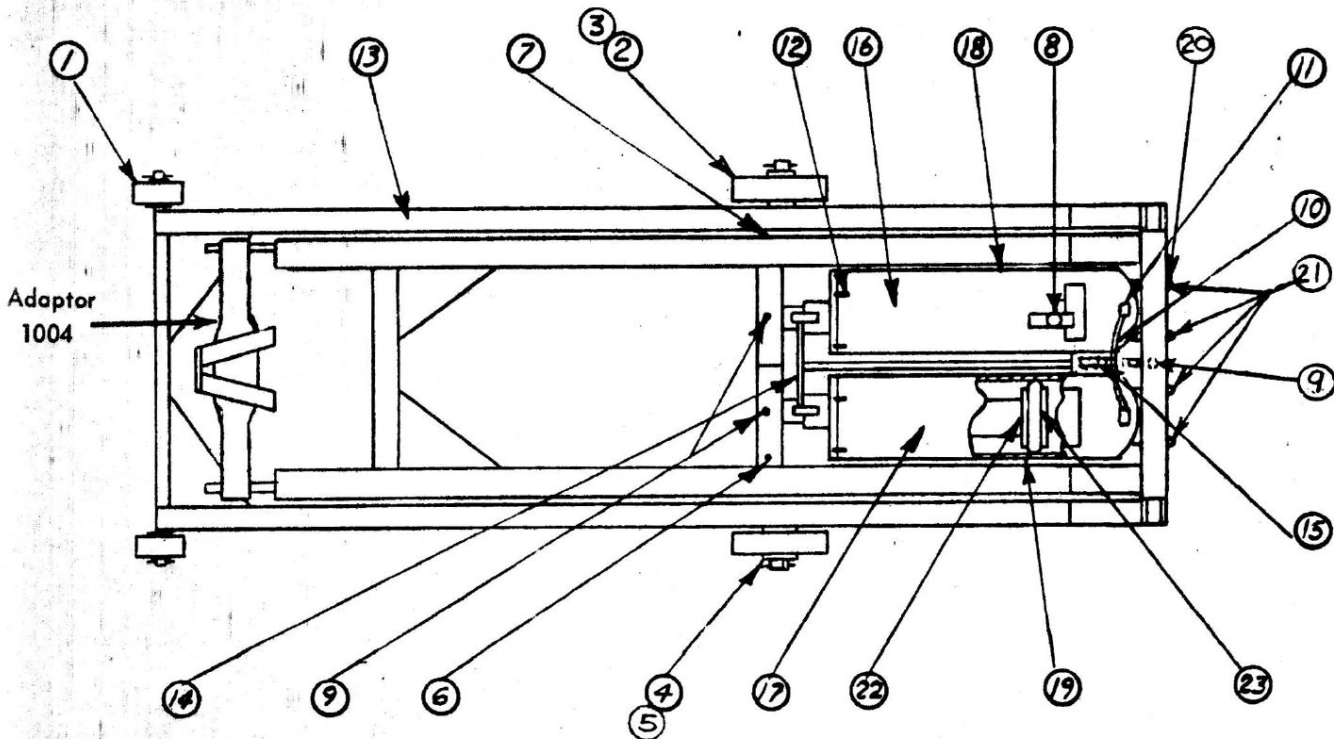

Item No.	Part No.	Part Name	No. Per Lift	Item No.	Part No.	Part Name	No. Per Lift
1	1034	Front Wheel	2	9	1089	Grease Fitting	3
			Special	10	1087	Equalizing Hose	1
			Order	11	1088	Fitting for Equalizing Hose	2
2	1035	Rear Wheel (Rubber Tired)	Only	12	1508	1/2" Screw & Washer for Cover	8
3	1037	Rear Wheel	2	13	1510	Carriage & Lift Arm Assembly	1
4	1038	Rear Wheel Washer	2	14	1555	Lock Lever Assembly	1
5	1039	Retaining Ring for Front & Rear Wheels	4	15	1046	Lock Lever Spring	1
6	1041	Ram Bearing Cotter Pin	1	16	1560	R.H. Power Unit	1
7	1064	Ram Bearing Shaft	1	17	1565	L.H. Power Unit	1
8	1085	Air Control Valve	1	18	1570	R.H. Tank Assembly	1
	1085-4*	Lever Rod	1	19	1575	L.H. Tank Assembly	1
	1085-15*	Leyer Cam	1	20	1506	Tank Bearing Strap	4
	1085-16*	Lever Knob	1	21	1507	3/8" Screw & Washer for Tank Bearing Strap	8
	1085-17*	Rocker Arm	1	22	1580	Piston Assembly	2
		* Above not illustrated		23	1092	"O" Ring for Piston Assembly	2

IMPORTANT

USE JACK FOR LIFTING ONLY.
TO INSURE SAFETY ALWAYS
SUPPORT VEHICLE WITH STANDS

IMPORTANT

Order by Part Number and Name.
State Model No. and Serial No.
All prices FOB Albany, N. Y., and
subject to change without notice.