

INSTRUCTION MANUAL REPAIR PARTS LIST

HYDRAULIC SERVICE JACK

2 TON (1815 Kg) CAPACITY

PART CODE 68041



WARNING



1. This is a lifting device only. Do not move or dolly the vehicle while on the jack. The load must be supported immediately by other appropriate means.
2. Do not overload. Overloading can cause damage to or failure of the jack.
3. Lift only on areas of the vehicle as specified by the vehicle manufacturer.
4. This jack is designed for use only on hard level surfaces capable of sustaining the load. Use on other than hard level surfaces can result in jack instability and possible loss of load.
5. Center load on saddle prior to lifting vehicle. Off-center loads and loads lifted while jack is not level may damage the jack or cause loss of load, personal injury, or property damage.
6. It is the owners responsibility to keep warning decals legible and intact. Replacement decals may be obtained from authorized service centers or the factory.
7. Study, understand, and follow all instructions provided with this jack prior to operation.
8. Failure to heed these warnings may result in loss of load, damage to jack, and/or failure resulting in personal injury or property damage.

OWNER'S RESPONSIBILITY

Operation. The owner and/or operator shall have an understanding of these operating instructions and warnings before operating the jack. Warning information shall be emphasized and understood. If the user is not fluent in English, the instructions and warnings shall be read to and discussed with the operator in the operator's native language by the purchaser/owner, making sure that the operator comprehends its contents.

Maintenance. The jack shall be maintained in accordance with instructions listed under "Maintenance."

Inspection

1. Visual inspection shall be made before each use of the jack, checking for leaking hydraulic fluid, and damaged, loose or missing parts.
2. Each jack, if subjected to an abnormal load shock, shall be inspected immediately by an authorized Hein-Werner service center.
3. Owners and/or users should be aware that repair of this equipment may require specialized knowledge and facilities. It is recommended that an annual inspection of the jack be made by an authorized service center and that any defective parts, decals or warning labels be replaced with genuine Hein-Werner parts. A list of authorized service centers is available upon request.

Damaged Jacks. Any jack which appears to be damaged in any way, is found to be badly worn, or operates abnormally SHALL BE REMOVED FROM SERVICE until necessary repairs are made by an authorized service center.

INSTRUCTIONS BEFORE USE

1. Open release valve by turning handle counterclockwise. Pump handle six full strokes to assure proper internal lubrication, and to bleed any air from the hydraulic system.
2. Squirt a small amount of hydraulic jack oil or light-weight motor oil on the pump pistons. Pump handle several times to distribute oil.
3. Thoroughly lubricate all moving parts of the jack. Raise the saddle to full height by closing release valve and pumping handle. Oil the surface of the ram as well as all moving parts in the handle and lifting mechanism. Grease all grease fittings.

OPERATION

1. **Lifting** - Secure vehicle by blocking wheels. Close release valve by turning handle clockwise. Dolly jack until lift saddle is centered under load and pump handle.



WARNING



**USE JACK FOR LIFTING ONLY.
ALWAYS SUPPORT VEHICLE WITH
VEHICLE SUPPORT STANDS.**

Always center the load on the saddle of your jack. Off-center loads and loads lifted while jack is not level may damage the jack or cause personal injury.


2. **Lowering** — Slowly turn release handle counterclockwise. **Avoid "shock loads" created by quickly opening and closing the release as the load is being lowered. This may result in overloading of the hydraulic circuit and possible damage to the jack.**

MAINTENANCE

1. Regularly check oil level. Use only genuine Hein-Werner hydraulic jack oil in the unit of your jack. Never use alcohol or hydraulic brake fluid.
To check oil level, jack must be at rest, saddle down. Remove filler plug and inspect oil level. Level should be just over cylinder.
2. Keep the jack clean and well lubricated. Raise the saddle to full height and oil the surface of the ram often, as well as all moving parts in the handle, the pump pistons and the lifting mechanism. Frequently add grease to all fittings.

2 TON HYDRAULIC SERVICE JACK

PART CODE 68041

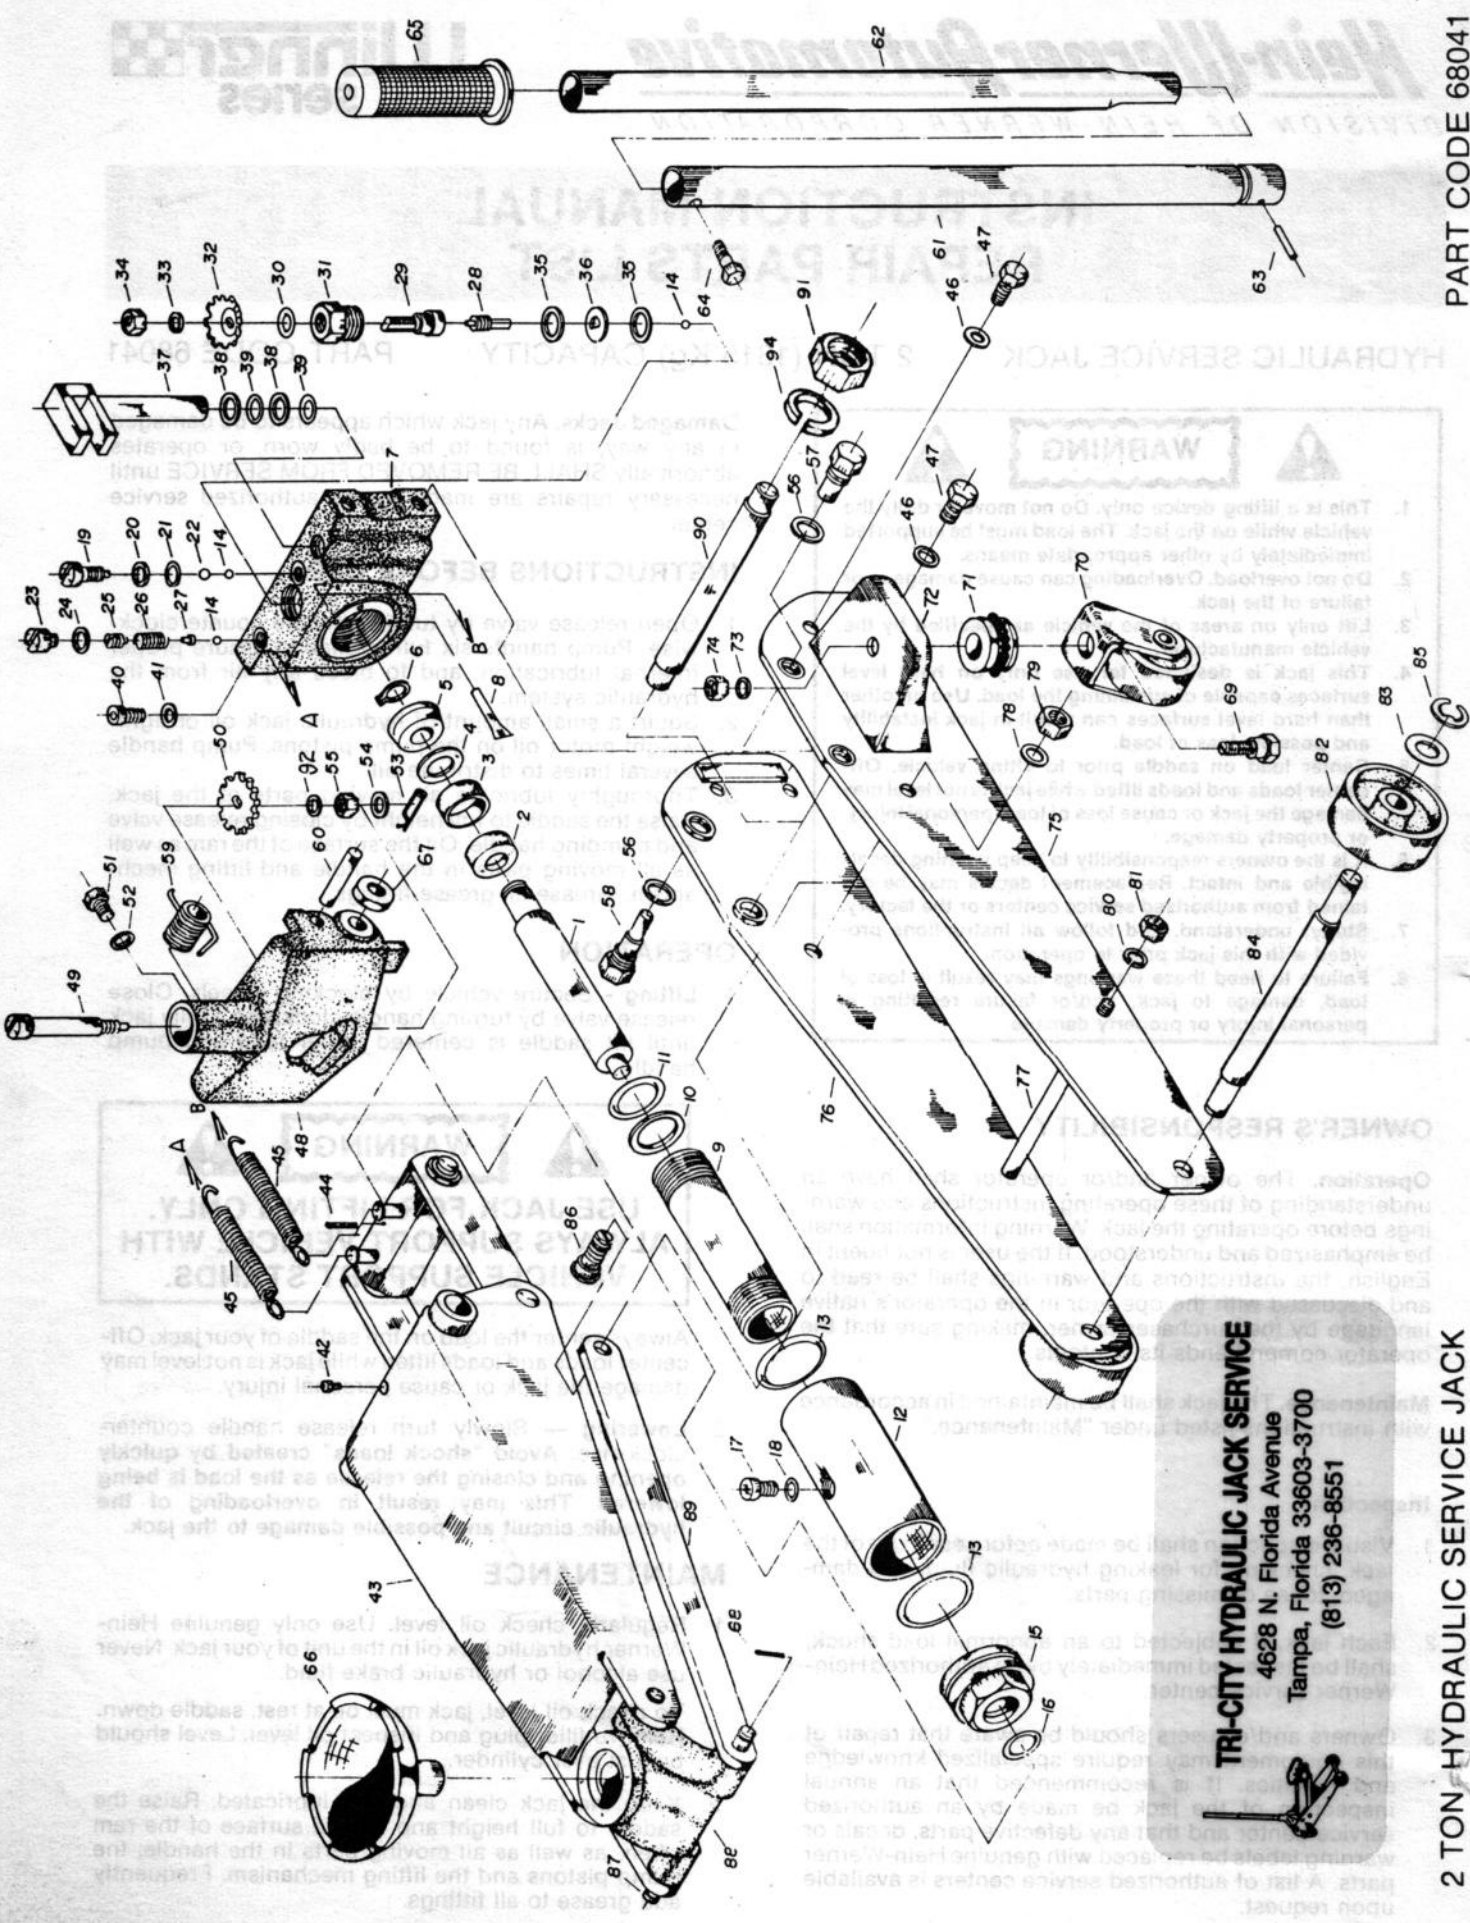

TRI-CITY HYDRAULIC JACK SERVICE
 4628 N. Florida Avenue
 Tampa, Florida 33603-3700
 (813) 236-8551

2 TON HYDRAULIC SERVICE JACK PART CODE 68041

Item No.	Parts Code	Description	Qty. Required
1	68212	Ram Plunger	1
2	68126	Ram-Spacer	1
3	68127	Bushing Cover	1
4	68128	Back-Up Washer	1
5	68129	"U" Cup-Ram	1
6	69452	Retaining Ring	1
7	68130	Base	1
8	69417	Filter	1
9	68213	Cylinder	1
10	68132	Back-Up Washer	1
11	68133	"O" Ring	1
12	68214	Reservoir	1
13	68135	"O" Ring	2
14	69415	Ball 1/4"	3
15	68136	Top Nut	1
16	68137	"O" Ring Top Nut	1
17	68138	Filler Screw	1
18	69437	"O" Ring Filler Screw	1
19	68139	Bolt	1
20	68140	Washer	1
21	68141	"O" Ring Bolt	1
22	68142	Ball 3/8"	1
23	68143	Guard Screw	1
24	68144	Oil Seal	1
25	68145	Screw Safety Valve	1
26	68146	Spring	1
27	68147	Spring Cap	1
28	68148	Release Valve	1
29	68149	Release Valve Connecting Rod	1
30	68150	"O" Ring	1
31	68151	Release Valve Lock Nut	1
32	68152	Release Valve Gear	1
33	68153	Lock Washer	1
34	68154	Nut	1
35	68155	Nylon Packing	2
36	68156	Collar	1
37	68157	Pump Piston	1
38	68158	Back-Up Washer	2
39	68159	"O" Ring Piston	2
40	68160	Screw	1
41	68161	Washer	1
42	68215	Grease Fitting Nipple	1
43	68216	Lift Arm Assy.	1
44	68164	Cotter Pin	1
45	68165	Return Spring	2
46	68166	Lock Washer	4
47	68167	Screw	4
48	68168	Handle Fork	1
49	68169	Release Valve Connecting Bar	1
50	68170	Release Valve Gear	1

Item No.	Parts Code	Description	Qty. Required
51	68171	Screw	1
52	68172	Lock Washer	1
53	68173	Retainer	1
54	68174	Washer	1
55	68175	Nut	1
56	68176	LockWasher	2
57	68177	Handle Bolt (A)	1
58	68178	Handle Bolt (B)	1
59	68179	Return Spring	1
60	68180	Pin	1
61	68181	Handle (I)	1
62	68182	Handle (II)	1
63	68183	Spring Pin	1
64	68184	Screw	1
65	68217	Grip-Handle	1
66	68218	Saddle	1
67	68219	Bushing	1
68	68188	Cotter Pin	1
69	68189	Screw	2
70	68190	Rear Caster Assy.	2
71	68191	Bearings	2
72	68192	Castor Bracket	2
73	68193	Lock Washer	2
74	68194	Nut	2
75	68220	R.H. Side Plate	1
76	68221	L.H. Side Plate	1
77	68197	Frame Tie Rod	1
78	68198	Lock Washer	2
79	68199	Nut	2
80	68200	Lock Washer	4
81	68201	Nut	2
82	68202	Front Wheel	2
83	68203	Washer	2
84	68222	Front Axle	1
85	68205	Snap Ring "E"	2
86	68223	Stud Radius Link	2
87	68224	Pin-Parallel Link	1
88	68225	Saddle Holder	1
89	68226	Parallel Link	2
90	68227	Main Pivot Pin	1
91	68229	Nut	2
92	68162	Washer	1
93	68230	Hyd. Unit (not shown)	1
94	68228	Lock Washer	2
95	68237	Repair Kit (not shown)	1
96	68512	Product/Warning Decal- English (not shown)	1
	68511	Product/Warning Decal- French (not shown)	1



TRI-CITY HYDRAULIC JACK SERVICE

4628 N. Florida Avenue
Tampa, Florida 33603-3700
(813) 236-8551

Jack won't lift load or full rated capacity	Jack lowers under load	Pump feels spongy	Handle raises or flies back under load	Jack will not lift full height	Jack will not lower completely	
✓	✓					Release valve may not be tightly closed.
✓		✓		✓		Jack may be low on oil. Remove filler screw and fill reservoir with clean Hein-Werner jack oil.
					✓	Moving parts in the lifting arm mechanism may need lubrication. Reservoir may be over filled.
✓	✓	✓	✓	✓		Jack may be airbound. Open the release valve and pump the handle several times. Close the release and operate. Repeat if necessary.

TROUBLESHOOTING CAUSE — Solution

If the above procedures do not remedy the problem — the jack will require service and should be taken to an Authorized Hein-Werner Service Center for repair.

HEIN-WERNER WINNER SERIES 90-DAY LIMITED WARRANTY

Coverage

Hein-Werner Corporation warrants to the consumer that this jack will be free from defects in material and workmanship for a period of ninety (90) days from the date of purchase. Hein-Werner does not authorize any party, including its authorized distributors, to offer any other warranty on behalf of Hein-Werner. Upon expiration of the warranty period, Hein-Werner shall have no further liability related to the jack, except on warranty claims made during the warranty period.

THIS WARRANTY IS OFFERED IN LIEU OF ANY OTHER EXPRESS WARRANTY; AND, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, THE DURATION OF ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED TO THE DURATION OF THIS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

What is Not Covered

This warranty does not extend to any jack subjected to misuse, neglect, accident, or in-warranty repair by anyone except Hein-Werner.

Remedy for Defective Jack

Upon receipt of any defective jack, Hein-Werner will, at its option, repair or replace the defective jack at its expense, provided that the purchaser of that jack has followed the procedure for obtaining warranty performance set forth below. The jack so repaired or used as a replacement will be shipped to the purchaser of the defective jack, with transportation charges prepaid to any destination in the continental United States (transportation charges on shipments to Alaska or Hawaii will be paid only to the nearest port of export).

THE PURCHASER'S REMEDIES FOR A DEFECTIVE JACK, TO THE EXTENT PERMITTED BY APPLICABLE LAW, ARE LIMITED TO THE REMEDY PROVIDED BY THIS WARRANTY; AND, TO THE EXTENT ENFORCEABLE UNDER APPLICABLE LAW, HEIN-WERNER SHALL IN NO EVENT BE LIABLE FOR CONSEQUENTIAL, INCIDENTAL OR SPECIAL DAMAGES ARISING OUT OF THE USE OF, OR INABILITY TO USE, THE JACK, WHETHER BASED ON BREACH OF THIS WARRANTY, HEIN-WERNER'S NEGLIGENCE OR OTHER TORT, OR ON ANY THEORY OF STRICT LIABILITY.

Some states do not allow the exclusion or limitation of consequential or incidental damages, so the above limitations may not apply to you.

Procedure for Obtaining Warranty Performance

As soon as any defect in a jack becomes known, the purchaser of such a jack must, within the 90-day warranty period, return the defective component part, or if required, complete jack to Hein-Werner with a copy of original invoice, transportation charges prepaid to the following address:

Hein-Werner Corporation
Warranty Service Department
1005 Perkins Avenue
Waukesha, Wisconsin 53186