


REPAIR PARTS LIST


1/2 TON CAPACITY HIGH LIFT TRANSMISSION JACK

MODEL YHMJ-500TW

Hydraulic power unit ass'y

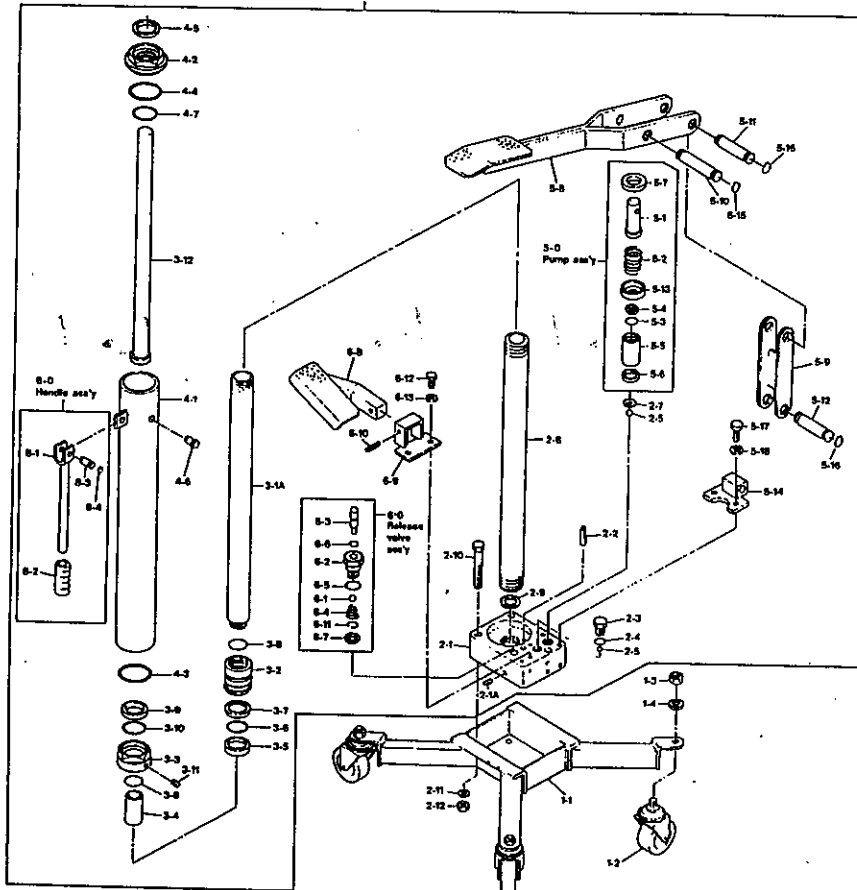

Saddle head attachment ass'y

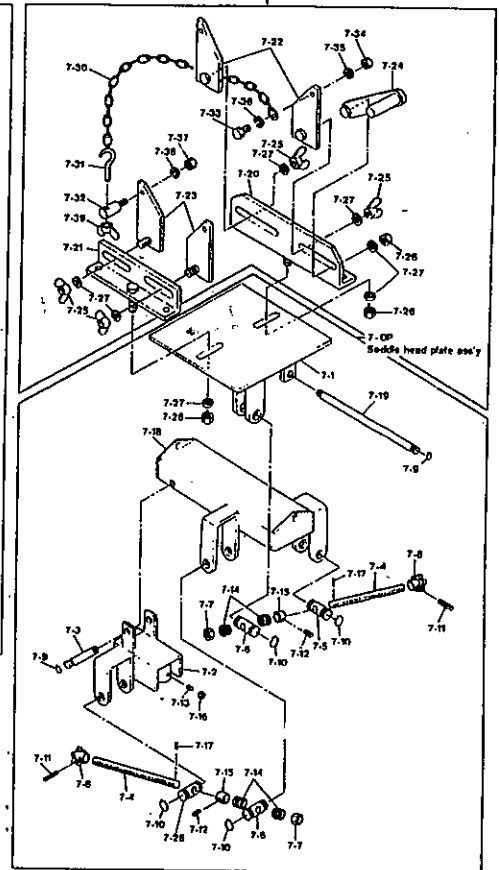

Part No.	Part Description	Q'ty/set
1-1	Chassis	1
1-2	Swivel caster	4
1-3	Hex head nut	4
1-4	Spring washer	4
2-1	Oil box	1
2-1A	Plug with hex head hole	7
2-2	Oil strainer	1
2-3	Blind bolt	1
2-4	Copper packing	1
2-5	Steel ball	2
2-6	Cylinder	1
2-7	Lock washer	1
2-9	Copper packing	1
2-10	Bolt	3
2-11	Spring washer	3
2-12	Hex head nut	3
3-1A	Piston rod (Big)	1
3-2	Packing step	1
3-3	Grand nut	1
3-4	Sleeve	1
3-5	Extra wearing	1
3-6	O-ring	2
3-7	Back-up ring	1
3-8	O-ring	2
3-9	Oil seal	1
3-10	O-ring	1
3-11	Plug with hex head hole	1
3-12	Piston rod (Small)	1
4-1	Oil tank	1
4-2	Tank nut	1
4-3	O-ring	1
4-4	O-ring	1
4-5	Oil seal	1
4-6	Oil fill cap	1
5-0	Pump ass'y	
•5-1	Plunger	1
•5-2	Spring	1

Part No.	Part Description	Q'ty/set
•5-3	O-ring	1
•5-4	Oil seal	1
•5-5	Pump cylinder	1
•5-6	Copper packing	1
5-7	Spring retainer	1
5-8	Foot pedal for lifting	1
5-9	Link	1
5-10	Plunger pin	1
5-11	Pin A	1
5-12	Pin B	1
5-13	Spring retainer B	1
5-14	Link bracket	1
5-15	Cotter pin	2
5-16	Cotter pin	4
5-17	Hex head bolt	2
5-18	Spring washer	1
6-0	Release valve ass'y	1
•6-1	Steel ball	1
•6-2	Release valve lock nut	1
•6-3	Throttle	1
•6-4	Spring	1
•6-5	O-ring	1
•6-6	O-ring	1
•6-7	Copper packing	1
•6-11	Snap ring	1
6-8	Foot pedal for lowering (release valve)	1
6-9	Pedal bracket	1
6-10	Spring pin	1
6-12	Hex head bolt	2
6-13	Spring washer	2
7-0P	Saddle head plate ass'y	
•7-1	Saddle head	1
•7-2	Saddle head plate	1
•7-3	Connecting pin A	1
•7-4	Screw	2
•7-5	Female screw A	1
•7-6	Pin A	1
•7-7	Hex head fluted nut	1

Part No.	Part Description	Q'ty/set
•7-8	Grip	2
•7-9	Snap ring	4
•7-10	Snap ring	8
•7-11	Spring pin	2
•7-12	Screw	2
•7-13	Screw	1
•7-14	Thrust bearing	4
•7-15	Handle collar	2
•7-16	Hex head nut	1
•7-17	Cotter pin	1
•7-18	Tilting base	1
•7-19	Connecting pin B	1
•7-28	Female screw A	1
7-0A	Saddle head attachment ass'y	
•7-20	Saddle head bracket A	1
•7-21	Saddle head bracket B	1
•7-22	Saddle head attachment A	4
•7-23	Saddle head attachment B	2
•7-24	Saddle head attachment C	1
•7-25	Wing nut	4
•7-26	Hex head nut	3
•7-27	Washer	7
•7-30	Ring chain	1
•7-31	Hook with screw	1
•7-32	Hook pin	1
•7-33	Hex head bolt	1
•7-34	Hex head nut	1
•7-35	Spring washer	1
•7-36	Washer	1
•7-37	Hex head nut	1
•7-38	Spring washer	1
•7-39	Wing nut	1
8-0	Handle ass'y	
8-1	handle	1
8-2	Handle grip	1
8-3	Handle pin	1
8-4	Snap ring	2
50-0	Hydraulic power unit ass'y	