



REPAIR PARTS LIST FOR TOE JACK

NO.	PARTS DESCRIPTION	MHC-5V	5 Ton	MHC-10V	10 Ton
		Part No.		Part No.	
1	BODY ASSY	_____		_____	
2	PUMP PLUNGER	(MH-10)		(MH-20)	
3	PUMP BACKUP RING	(MH-10)		(MH-10)	
4	PUMP PACKING	DITTO		DITTO	
5	PUMP PLUNGER PIN	DITTO		(MH-20)	
6	PUMP STAY PIN	H9200013		H9350013	
7	HANDLE SOCKET ASSY	(MH-10)		J4210007	
8	HANDLE	DITTO		(MH-20)	
9	SNAP RING	DITTO		DITTO	
10	VALVA BALL	(MH-4)		(MH-4)	
11	VALVE SPRING	DITTO		DITTO	
12	VALVE SPRING	DITTO		DITTO	
14	RELEASE PACKING	DITTO		DITTO	
15	RELEASE ASSY	DITTO		DITTO	
16	RAM	H9200021		H9350021	
17	RAM PACKING SHEET	H9200028		H9350031	
18	RAM BACKUP RING	(MH-10)		(MH-20)	
19	RAM PACKING	DITTO		DITTO	
20	RAM GUIDE RING	H9200031		H9350034	
21	SNAP RING	(MH-10)		(MH-20)	
22	STUFFING RING	H9200026		S2800525	
23	CYLINDER PACKING	(MH-10)		(MH-20)	
24	STOPPER RING	DITTO		DITTO	
28	OIL PLUG	(MH-4)		(MH-4)	
29	HORIZONTAL PIN	_____		(MH-20)	
30	VERTICAL PIN	_____		H9350029	
31	RAM SPRING	_____		(MH-20)	
32	RAM SPRING STOPPER RING	_____		DITTO	
34	SAFETY VALVE BALL	JIS W5/32		JIS W5/32	
35	SAFETY VALVE BALL SHEET	S2460536		S2460536	
36	SAFETY VALVE SPRING	S2460535		S2460535	
37	SAFETY VALVE ADJUSTING SCREW	S2460532		S2460532	
38	SAFETY VALVE PLUG	J2580054		J2580054	
71	HANGER	J3640051		J4210051	
72	PUMP BASE	H9200010		H9350010	
73	PUMP BASE STOPPER A	H9200054		H9200054	
74	PUMP BASE STOPPER B	JIS 24 ϕ		JIS 24 ϕ	
75	RETURN SPRING	S3930142		S3930142	