

# PORTABLE HYDRAULIC JACK

8 TON CAPACITY







## Model 91-228, 93228, 95228, YA-228

### Series "T"

#### SPECIFICATIONS:

Height (Closed): 9"  
 Extension Screw: 4-1/4"  
 Maximum Height: 19-1/2"  
 Power Raise: 6-1/4"

MODEL	LABEL KIT NO.	REPAIR KIT NO.
91-228	240037	91-413
93228	240038	240508
95228	240039	240506
YA-228	240040	240508

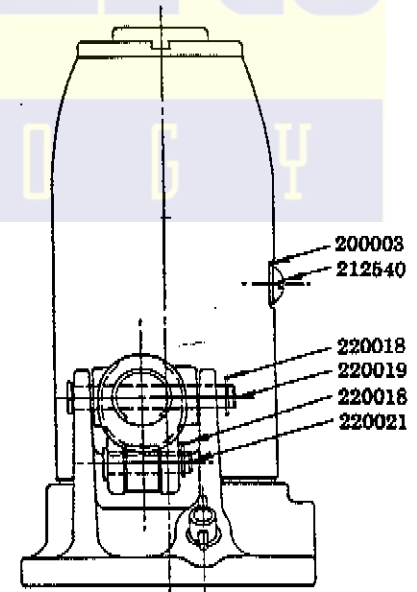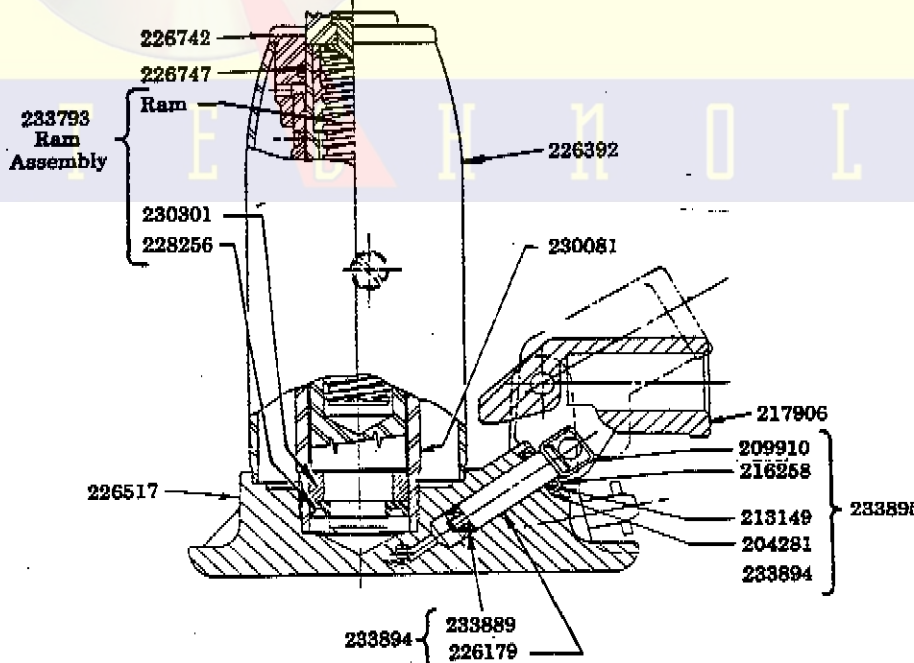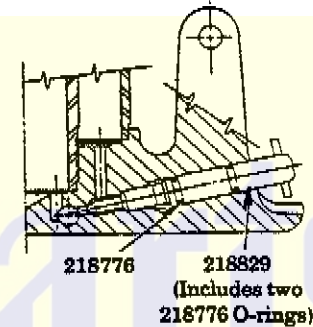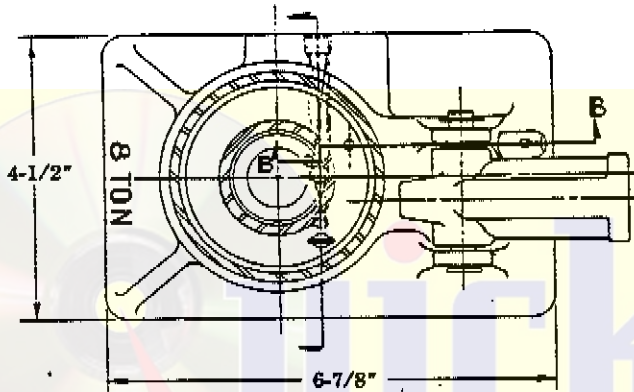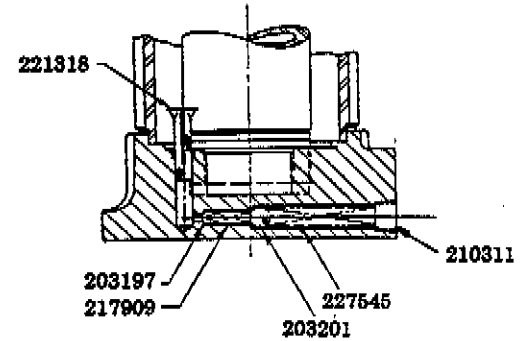

**LINCOLN ST. LOUIS**  
 4010 GOODFELLOW BLVD. • ST. LOUIS, MO. 63120 • (314) 679-4200

A DIVISION OF  
**McNEIL**  
 CORPORATION

SECTION - **W2**  
 PAGE - **9**

### SERVICE PARTS

PART	QUAN.	DESCRIPTION	PART	QUAN.	DESCRIPTION
10667	1	Handle assembly	220021	1	Pump pin
*200003	1	Gasket	*221318	1	Suction screen
*203197	1	Ball	226179	1	Piston
*203201	1	Ball	226392	1	Oil tank
*204281	1	Pump gland washer	226517	1	Base
209910	1	Pump clip	226742	1	Tank nut
*210311	1	Pipe plug	*226747	1	Quad ring
212540	1	Filler screw	*227545	1	Spring
*213149	1	Packing ring	*228256	1	U-cup packing
*216258	1	Pump gland cover	230081	1	Cylinder
217906	1	Handle socket	*230301	1	Heel plate
*217909	1	Spring	233793	1	Complete ram assembly
*218776	2	O-ring	*233889	1	U-cup packing
218829	1	Release stem & o-ring ass'y.	233894	1	Pump assembly
220018	2	Retaining ring	233895	1	Complete ram assembly
220019	1	Fulcrum pin			

\*Included in 240506 Repair Kit.

### TROUBLE SHOOTING

PROBLEM	SOLUTION
1) Will not lift full height. 2) Will not lower completely.	Reservoir could be overfilled — with jack upright; remove filler screw or filler plug, open release and SLOWLY push jack ram into lowered position. Any excess oil will run out fill hole. Replace filler screw or filler plug when oil has stopped flowing.
1) Will not lift load. 2) Will not lift full height. 3) Pump feels "Spongy" under load.	The Jack could be low on oil — with jack in upright position and ram fully lowered, remove filler screw or filler plug and fill reservoir with clean HYDRAULIC JACK OIL — correct oil level is reached when oil level is at bottom edge of fill hole.  The Jack could be air-bound — open the release valve one full turn and pump the handle vigorously. Close the release valve and pump to full height. Continue pumping several times at full height. Open release valve and push ram down into lowered position. Close release and operate normally.
1) Will not lift load. 2) Handle raises under load. 3) Handle lowers under load.	Valve might not be closing — make certain release valve is closed. Starting with ram in fully lowered position, SLOWLY raise ram out to full height. Open release valve and push ram down into lowered position. Jack should now operate properly.
1) Will not work in horizontal position.	Jack in wrong position for horizontal operation — valving plug on side of jack base must face upward.  The Jack could be low on oil — with jack in upright position and ram fully lowered, remove filler screw or filler plug and fill reservoir with clean HYDRAULIC JACK OIL — correct oil level is reached when oil level is at bottom edge of fill hole.

If the above procedures do not correct the problem, contact your nearest service depot. When submitting any jack or equipment to be repaired, be sure to state the nature of the problem and indicate whether an estimate of the repair cost is needed.

**IMPORTANT:** As with any hydraulic unit, this unit may occasionally become "air-bound" due to being tipped over during shipment. To purge the air from the lines, open the release and pump rapidly a few strokes. Close release and pump to full height, then open the release to allow the ram to descend rapidly. If the pump still seems "spongy", repeat the procedure.

#### RETAIN THIS INFORMATION FOR FUTURE REFERENCE

When ordering replacement parts, list: Part Number, Description, Model Number, and Series Letter.  
 LINCOLN ST. LOUIS provides a Distributor Network that stocks equipment and replacement parts.  
 A list of Authorized Service Departments will be furnished upon request.