REPAIR PARTS Sears 2 Ton Floor Service Jack Model Number 328.12031

* Special adjustment required before re-installing these parts. Jack must be placed on a load test gage and valve adjusted to operate at a maximum load of 2 tons.

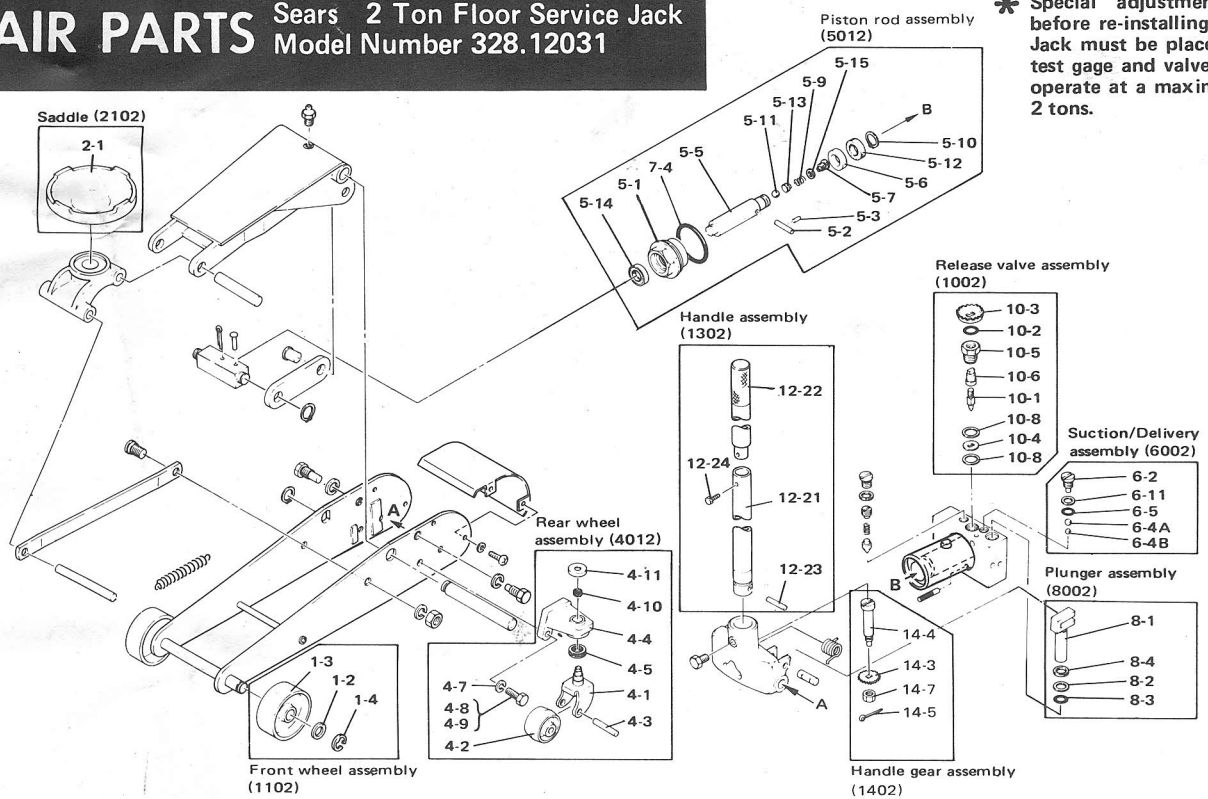

Parts No.	Description
1102	Front wheel assembly
1-2	Washer
1-3	Wheel, front
1-4	Ring, snap

Parts No.	Description
2102	Saddle

Parts No.	Description
4012	Rear wheel assembly
4-1	Fork, castor
4-2	Wheel, rear
4-3	Shaft, rear wheel
4-4	Bracket, caster
4-5	Ring, race
4-7	Washer, spring
4-8	Bolt
4-9	Bolt
4-10	Bearing, needle
4-11	Cap

Parts No.	Description
5012	Piston rod assembly
5-1	Nut, tank
5-2	Bar, by-pass
5-3	Rod, by-pass
5-5	Rod, piston
5-6	Retainer, piston packing
5-7	Screw, by-pass
5-9	Spring
5-10	Ring, snap
5-11	Ball, steel
5-12	Packing, U-type
5-13	Retainer, spring
5-14	Seal, oil
5-15	Washer
7-4	O-ring

Parts No.	Description
6002	Suction/Delivery assembly
6-2	Bolt
6-4A	Ball, steel
6-4B	Ball, steel
6-5	O-ring
6-11	Ring, back-up

Parts No.	Description
8002	Plunger assembly
8-1	Plunger, pump
8-2	Ring, back-up
8-3	O-ring
8-4	Seal, oil

Parts No.	Description
1002	Release valve assembly
10-1	Valve, release
10-2	O-ring
10-3	Gear (B), release valve
10-4	Collar
10-5	Lock nut, release valve
10-6	Connecting rod, release valve
10-8	Packing, copper

Parts No.	Description
1402	Handle gear assembly
14-3	Gear (small), release valve
14-4	Connecting bar (B), release valve
14-5	Pin, cotter
14-7	Nut

Parts No.	Description
1302	Handle assembly
12-21	Handle, lower
12-22	Handle, upper
12-23	Pin, spring
12-24	Bolt

Model Number 328. 12031