



# SPR311

## Bar Stool

### Assembly Instructions

#### Replacement Parts:

RSBSCWL	Seat (quantities are limited)
RSBS2	Swivel
RSBSBK	Bolt Kit
RSBSFT	Feet/4pc. set

#### Tools Needed:

#2 Phillips Screwdriver  
10mm W rench

#### Parts Included:

4 - M6x12mm Bolt  
8 - M6 Nylon Nut  
4 - M6 x 45mm Bolt  
4 - M6 x 32mm Screw

#### Assembly Instructions:

1. Place leg #3 on top of leg #4.
2. Place the swivel #2 on top of the legs, turning top part of the swivel at a 45° angle to the bottom part. See Figure A for proper alignment. Align the bolt holes on the bottom swivel with the bolt holes on the legs.
3. Use the (4) M6 x 12mm bolts to assemble the swivel to the legs. Tighten using the (4) M6 nylon nuts.
4. Slide the support ring #5 over both legs, aligning the bolt holes on the ring with the bolt holes on the legs. Use the (4) M6 x 45mm bolts to assemble the ring to the legs. Tighten using the (4) M6 nylon nuts.
5. Place the seat #1 on a protected surface on the ground. Turn the assembled legs upside down and align the swivel holes with the seat screw holes. See Figure B. Use the (4) M6 x 32mm screws to secure the seat to the legs.
6. Once the legs are secured to the seat, turn the bar stool back onto its legs.



Figure A




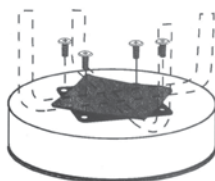



Figure B

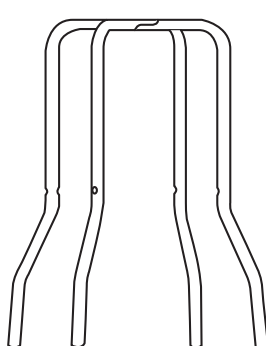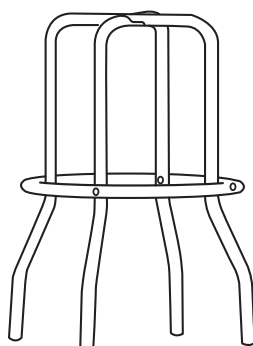


1

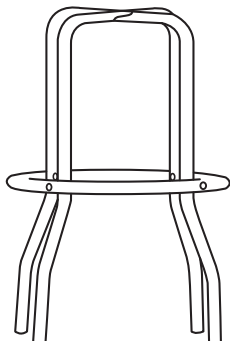


2

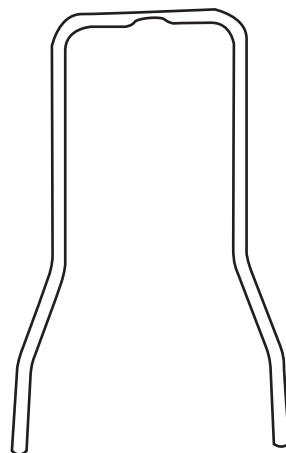

3

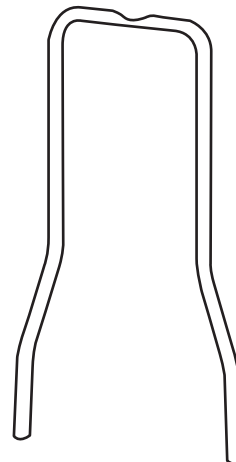

4



5