


MM-2000 & TJ-1000 Knob Guard Installation

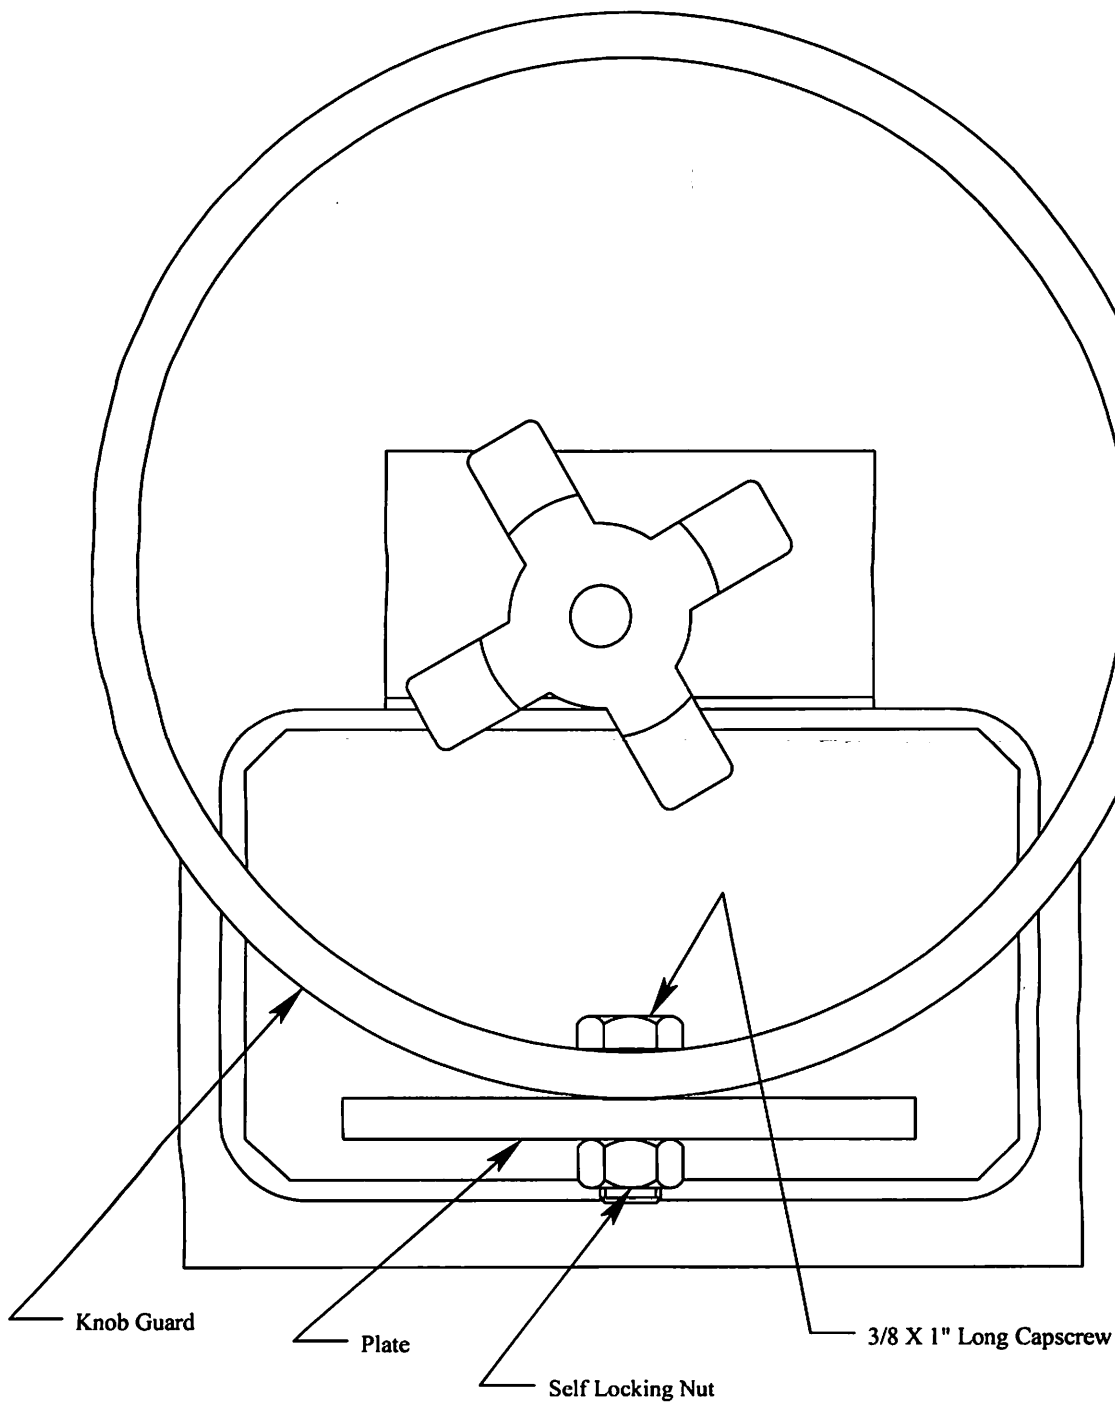

Install the Knob Guard on top of the plate welded to the back of the power unit reservoir. If there is not a hole in the plate you will need to drill a 7/16" diameter hole in the center of the plate. Secure the guard in place with the 3/8" cap screw and self locking nut provided. Tighten the nut to remove all play between the guard and the plate.