


## MB155UC-SUZUKI Suzuki Deluxe Utility Cart

## **ASSEMBLY INSTRUCTIONS**


- Step 1 Place the Locking Top and Drawer Unit (#1) on its back. Carefully open the Locking Top and lay it back against the ground.
- Step 2 Slide chrome legs (#2) into square holes in corners of Locking Top (#1) until bolt holes are aligned at top of legs.
- Step 3 Determine on which side of the cart the side push handle (#13) will be mounted. Then, insert two long bolts (#7) with two flat washers (#10) into the aligned holes in handle, locking top and legs. Fasten nuts (#9) using flat washers (#10) and lock washers (#11). Repeat this procedure for other corners using short bolts (#8).
- **Step 4** Slide bottom tray (#12) onto legs and fasten as in Step 3.
- Step 5 Insert casters (#3, #4) into the hole of plastic inserts (#5).

  NOTE: Insert the two locking wheels (#3) at the same end of the cart. It is recommended that these go on the same side as the side push handle.
- **Step 6** Return cart to upright position.
- Step 7 Using the screws (#16) provided, install drawer handles by aligning pre-drilled holes in drawers with slots in handle. Tighten all screws securely.

## Tools Needed for Assembly:



Bolt Kit (#6) included for attaching legs and tray to MB155UC-SUZUKI cart:

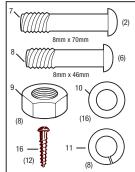

## **PARTS LIST**

Item	Part	No.		16 — 11 — (())
No.	No.	Req'd	Description	(12)
2	RSSC7LA	2	Extra Long Chrome Leg/ea.	(0)
3	RS5LCA	2	Locking Casters/ea.	
4	RS5NLCA	2	Non-Locking Casters/ea.	
5	RSINS	1	Set of 4 Plastic Inserts	л
6	RS150UCBK	1	Bolt Kit (Incl. #7, 8, 9, 10, 11, 1	
13	RS150UCSHD	L 1	Side Push Handle	
			_	
Also	Available:			
8006HDI	_	Chrome Drawer	Handle	
8006HDI		Black Drawer H		Winning of the state of the sta
RS8008L		Lock with Two I		13
RBSLIDE RS155GI		Gas Shock	Bearing Slides (One Pair)	0
RSDET8			de Detents (Package of 8)	
				1
			]	
			T	
				4
				$\bigcirc$
				4
				3
				V 171, 2

1 Rev. 06/17/05

MB155UC-SUZUKI\_060705.indd 1 6/17/05 11:40:05 AM