

MBETUC Utility Cart

ASSEMBLY INSTRUCTIONS

Step 1 Place the Locking Top and Drawer Unit (#1) on its back. Carefully open the Locking Top and lay it back against the ground.

Step 2 Slide chrome legs (#2) into square holes in corners of Locking Top (#1) until bolt holes are aligned at top of legs. Fasten using bolts, flat washers, lock washers and nuts provided.

Step 3 Slide bottom tray (#7) onto legs and fasten as in Step 2.


Step 4 Insert casters (#8, #9) into the hole of plastic inserts (#12).

NOTE: Insert the two locking wheels (#8) at the same end of the cart.


Step 5 Return cart to upright position.

Step 6 Using the screws provided, install drawer handles by aligning pre-drilled holes in drawers with slots in handle. Tighten all screws securely.

Tools Needed for Assembly:



Bolt Kit (#10) included for attaching legs and tray to MBETUC cart:

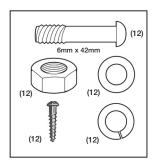


PARTS LIST

Item	Part	No.	
No.	No.	Req'd	Description
2	RSETUC02	2	Legs/each
3	RS8008LK	1	Lock w/Keys
4	RSBSLIDEC-2	3	Clip-On Roller Ball Bearing Slides (Pair)
5	MBDETUC1	1	3" Drawer
6	MBDETUC2	2	4-1/2" Drawer
7	MBSETUC	1	Bottom Tray
8	RS5LCA	2	5" x 1-1/2" Locking Caster/each
9	RS5NLCA	2	5" x 1-1/2" Non-locking Caster/each
10	RSETUCBK	1	Bolt Kit
11	RS8002BR	2	Bracket (with screws, nuts & washers)
12	RSINS	1	Set of 4 plastic inserts

Also Available:

8006HDL Chrome Drawer Handle 8006HDLB Black Drawer Handle RSETUC5LK 5 Piece Drawer Liner Kit

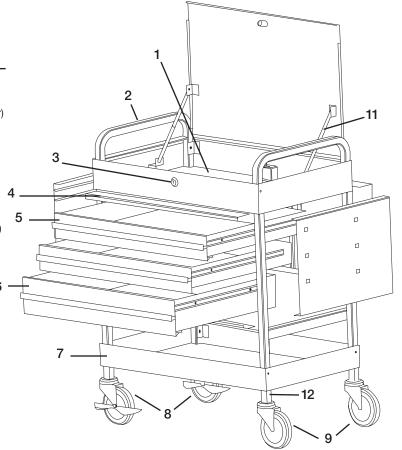

1