

MBS2 Bar Stool



Tools Needed:

#2 Phillips Screwdriver
10mm Wrench

Parts Included:

4 - M6x12mm Bolt
8 - M6 Nylon Nut
4 - M6 x 40mm Bolt
4 - M6 x 30mm Screw

Assembly Instructions:

1. Place leg #3 on top of leg #4.
2. Place the swivel #2 on top of the legs, turning top part of the swivel at a 45° angle to the bottom part. See Figure A for proper alignment. Align the bolt holes on the bottom swivel with the bolt holes on the legs.
3. Use the (4) M6 x 12mm bolts to assemble the swivel to the legs. Tighten using the (4) M6 nylon nuts.
4. Slide the support ring #5 over both legs aligning the bolt holes on the ring with the bolt holes on the legs. Use the (4) M6 x 40mm bolts to assemble the ring to the legs. Tighten using the (4) M6 nylon nuts.
5. Place the seat #1 on a protected surface on the ground. Turn the assembled legs upside down and align the swivel holes with the seat screw holes. See Figure B. Use the (4) M6 x 30mm screws to secure the seat to the legs.
6. Once the legs are secured to the seat, turn the bar stool back onto its legs.

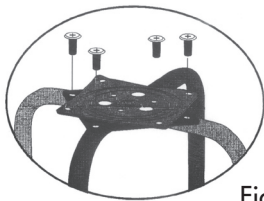


Figure A

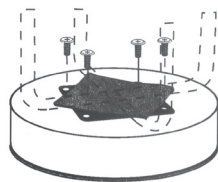


Figure B

