


MasterCopy


REPAIR PARTS SHEET
HAND JACK
MODEL GB-11C
RATED CAPACITY
50-TON
Sheet No. S-147
Issued Dec. 1957

AWK®

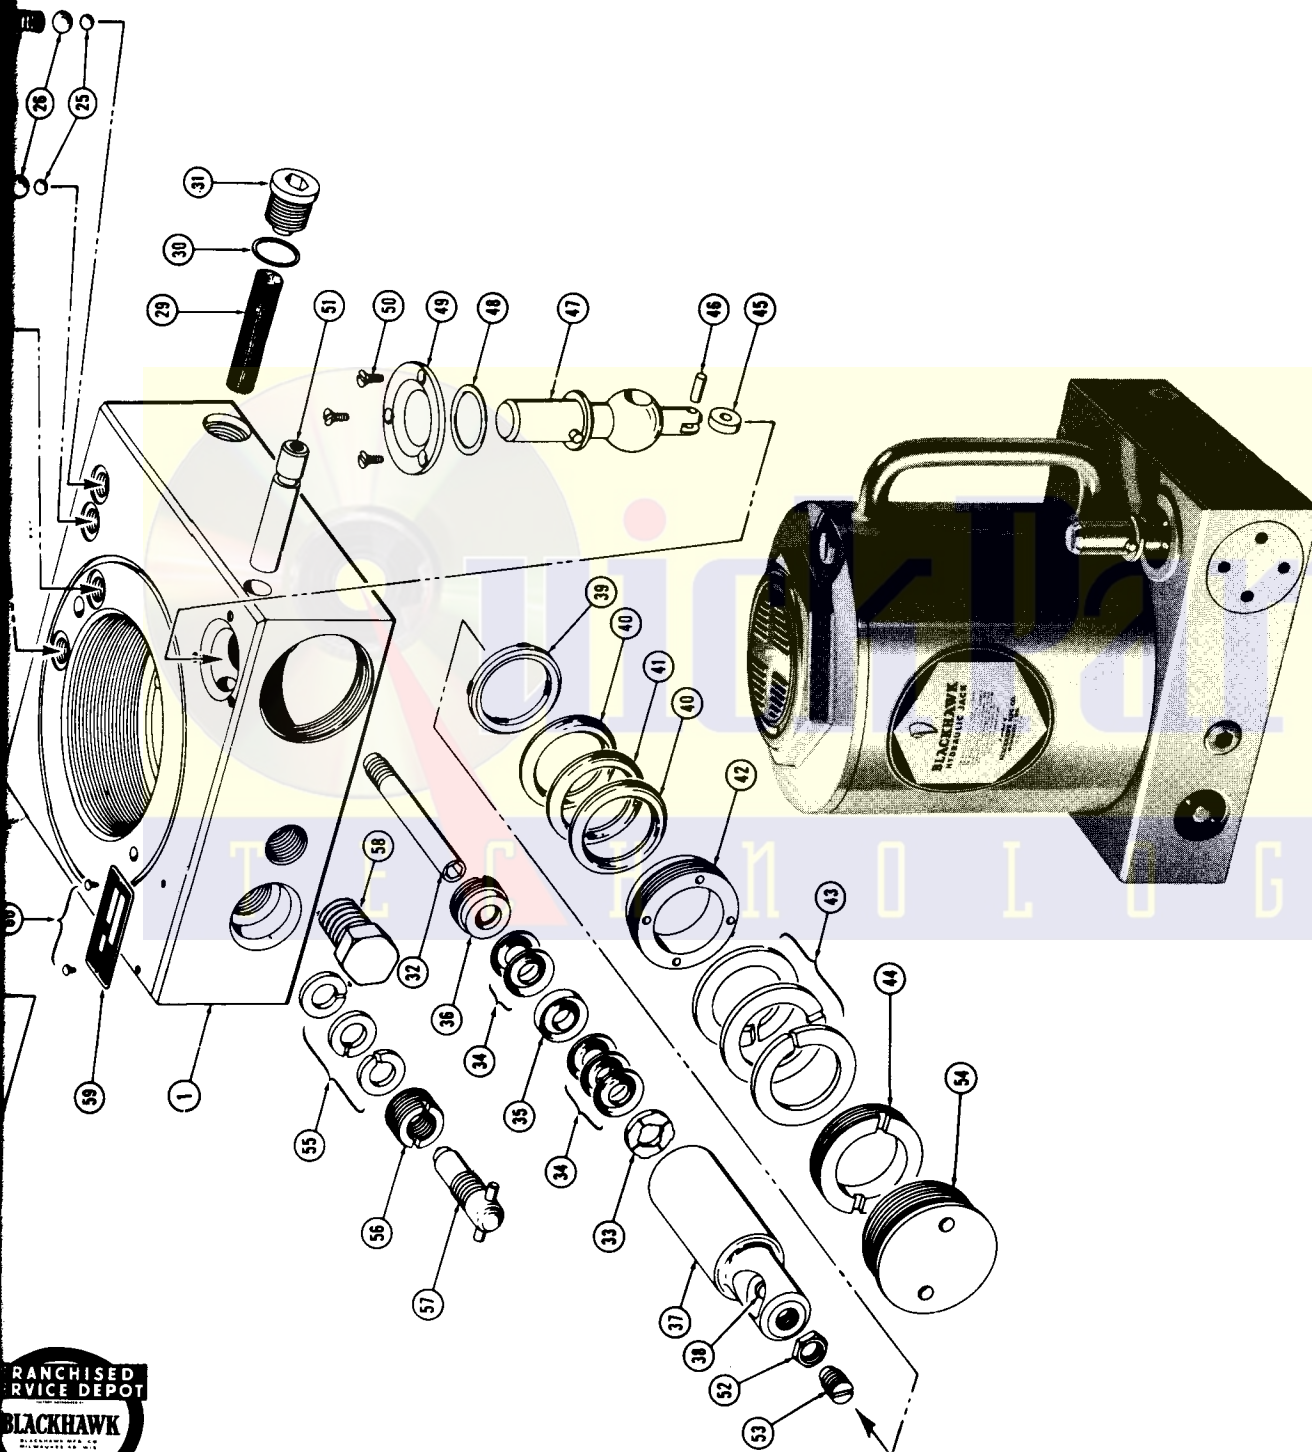

Parts List on Reverse Side

BLACKH

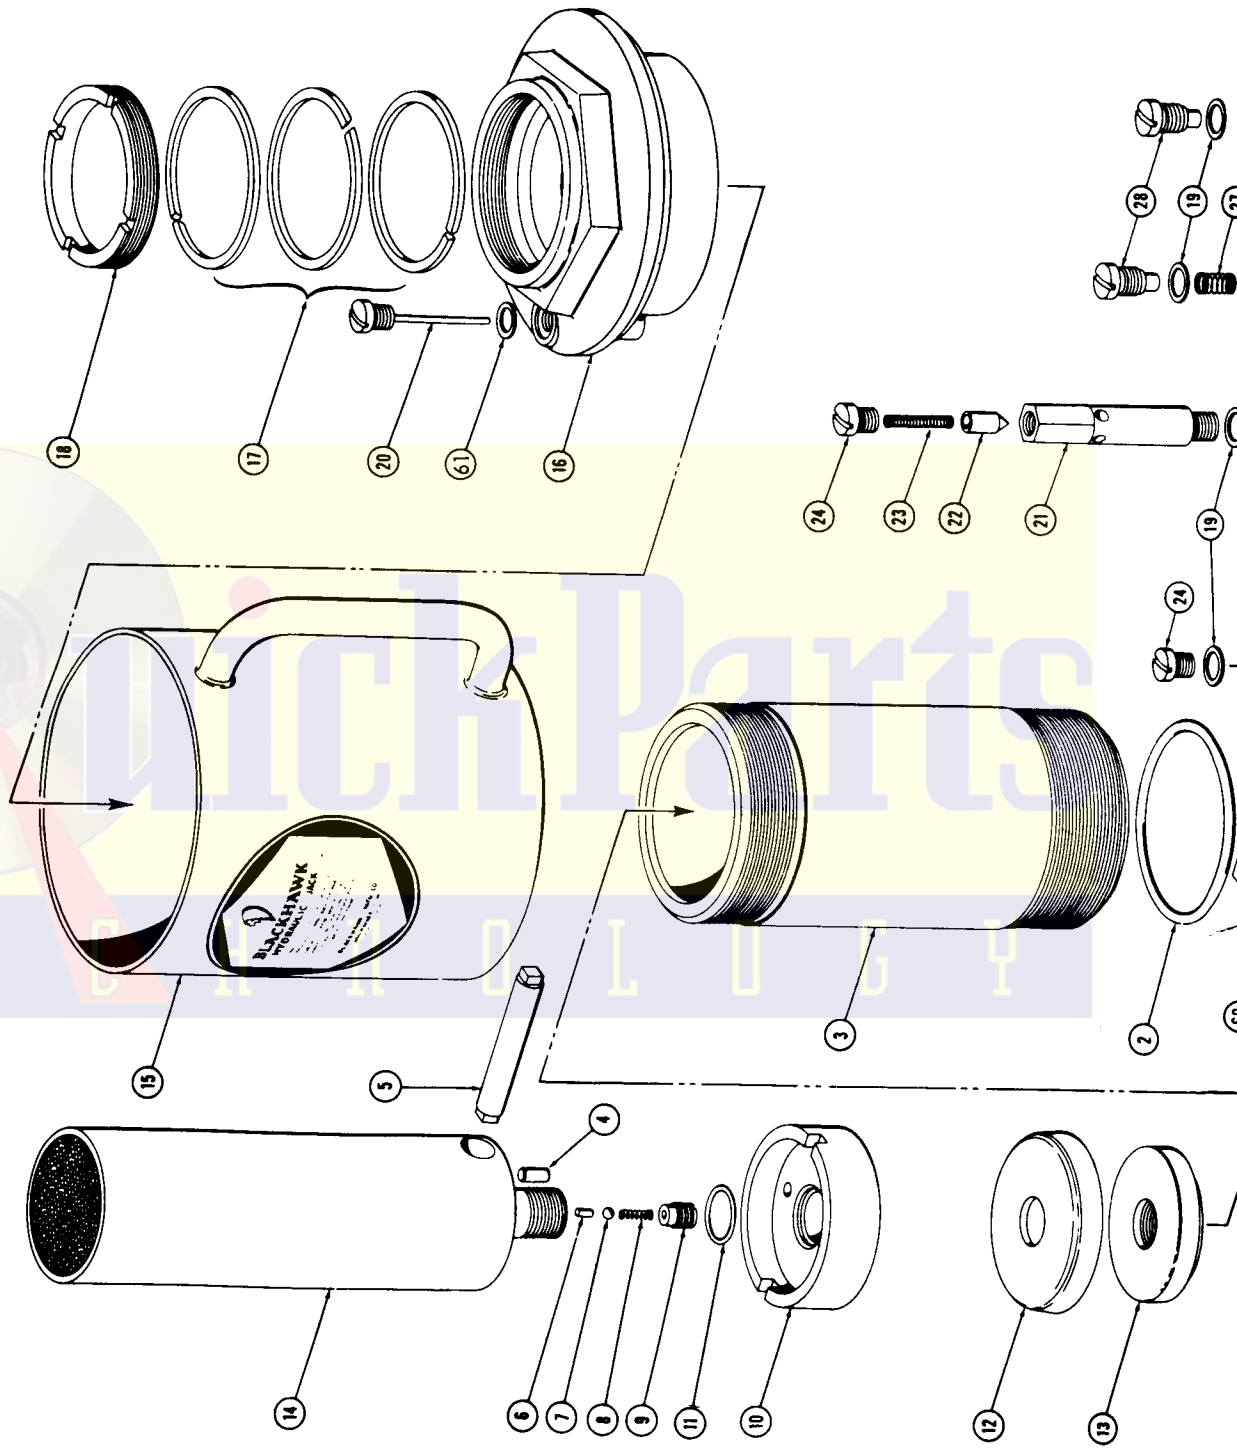

Master Copy

PARTS LIST FOR MODEL GB11-C

Item No.	Part No.	Description	No. Req.	Item No.	Part No.	Description	No. Req.
1	GB11.05P	Base	1	35	GB11.192	Inner Pump Cup Spacer	1
* 2	GB11.511	'O' Ring	1	36	GB11.54	Plunger Packing Nut	1
3	GB11.30	Cylinder	1	37	GB11.51	Speed Pump Plunger	1
4	N12.212	Dowel Pin	1	38	N12.233	Pump Plunger Button	1
5	GB11.107	Rod	1	39	GB11.52-1	Spreader	1
* 6	GB11.395-1	Valve Spacer	1	* 40	GB11.53	Pump Plunger Cup	2
* 7	1.16	Ball, 7/32" Dia.	2	* 41	A441.053	Pump Plunger Cup	1
* 8	S8.255	Spring	1	42	GB11.187	Plunger Packing Nut	1
9	N12.340	Spring Retainer	1	* 43	GB11.75	Pump Plunger Packing	3
10	GB11.71-1	Disc	1	44	GB11.55	Pump Packing Nut	1
* 11	GB11.505	'O' Ring	1	45	A129.281	Beam Handle Wheel	1
* 12	A442.041	Plunger Cup	1	46	N12.169	Beam Handle Wheel Pin	1
13	GA11.43	Spreader	1	* 47	N12.60A	Beam	1
14	GB11.40A	Plunger Assembly	1	* 48	N12.504	'O' Ring	1
15	GB11.25A	Reservoir	1	49	GB11.525	'O' Ring Fastener Plate	1
16	GA11.20	Top Cap	1	* 50	GB11.526	Std. Machine Screw	3
* 17	GA11.76	Plunger Packing	3	51	GB11.57	Beam Handle Pin	1
18	GA11.21	Gland Nut	1	52	N12.143	Nut	1
* 19	S15.167	Gasket	4	53	N12.28	Adjusting Screw	1
20	GB11.23A	Filler Plug Gauge	1	54	GB11.06	Base Plug	1
21	GB11.190K	Overflow Valve Body	1	* 55	GB11.74	Release Valve Packing	3
22	B160.274	Safety Valve Needle	1	56	GB11.11	Release Valve Packing Nut	1
* 23	S13.164	Overflow Valve Spring	1	57	GB11.10A	Release Valve Spindle	1
* 24	S4.185	Valve Plug	1	58	P5.245-1	Pipe Plug	1
* 25	E14.16	Ball 9/32" Dia.	2	59	1.26E	Name Plate	1
* 26	W12.16	Ball 3/8" Dia.	2	60	W78.03	Drive Screw	1
* 27	P26.183	Outlet Valve Spring	2	* 61	S1.167	Gasket	1
* 28	GB11.186A	Valve Spacer	2		Oil	85 cu. in.	
* 29	S4.18	Oil Strainer Screen	1		GB11K - Repair Kit includes items * above		
* 30	GB11.167	Gasket	1		SUB-ASSEMBLY		
31	GB11.150	Oil Sealing Plug	1		GB11.190L	Speed Pump Overflow Valve	
32	GB11.163	Pump Plunger Guide	1			(Includes Items 21,22,23,	
33	N12.52	Pump Cup Spreader	1			and 24)	
* 34	DA67.53	Pump Cup	5		GB11.26	Decal	

NOTE: No orders for parts can be filled unless both model and serial number with prefix, imprinted on nameplate of jack, are given.

GUARANTEE

All Blackhawk Hydraulic Jacks are guaranteed against defects in workmanship and material. In case of such defects, repairs and adjustments will be made on a no charge basis, providing jack or jack parts are returned to one of our Authorized Repair Service Stations or the Blackhawk Service Station, 5054 W. State St., Milwaukee 8, Wis., by prepaid transportation for inspection. Guarantee does not cover jacks worn out in service, damaged through abuse, overloading or accident. This Guarantee is VOID if anything but BLACKHAWK HYDRAULIC JACK OIL is used in jack. Do NOT USE brake fluids.

A Network of AUTHORIZED REPAIR STATIONS serves Blackhawk Users worldwide

For quality workmanship with genuine Blackhawk parts select an authorized Blackhawk Service Station for your repair work. Only repairs performed by an authorized service station are backed with full factory guarantee. The Classified Section in your Phone Book lists your nearest Authorized Service Station.

BLACKHAWK MFG. CO. - - - MILWAUKEE 46, WIS.