


Repair Parts Sheet	Revision	Revision Date	Product Code Beginning
L3018	Rev. D	06/2013	B

Fig. 1, Cylinder Assembly

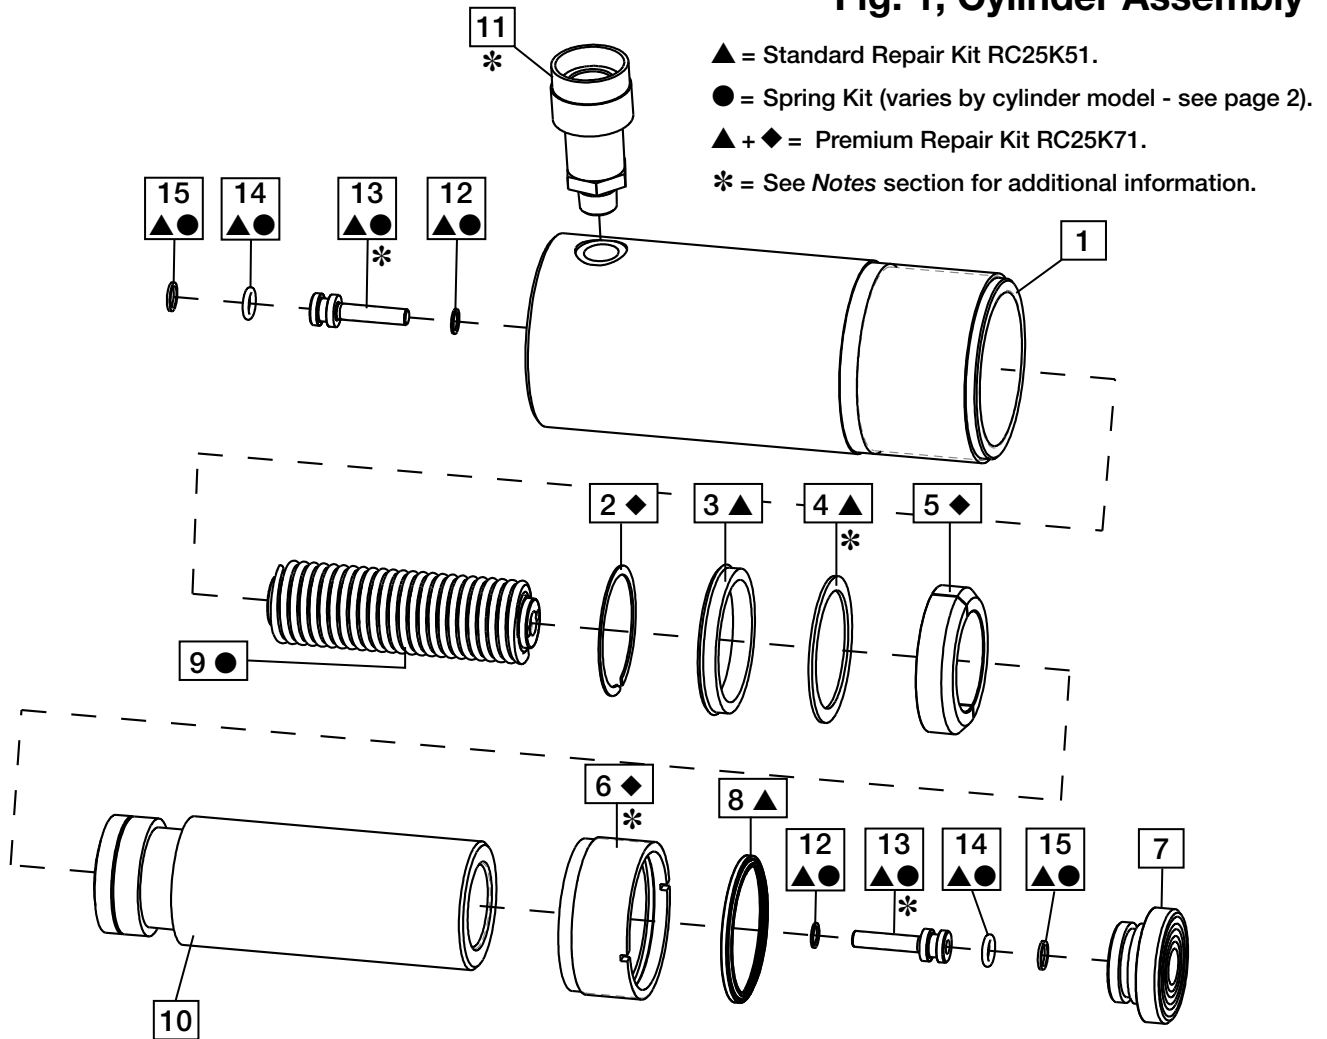

**Note: See Page 2
for parts list.**

(*) Notes

Item	Torque / notes
4	Washer to be placed with the sharp edge towards U-Cup.
6	7.9 - 10.2 Nm, 70 - 90 In - Lbs
6	Secure with Loctite 222.
11	54 - 81 Nm, 40- 60 Ft - Lbs
11	Use Loctite 545 or Teflon tape.
13	10.2 - 12.4 Nm, 90 - 110 In - Lbs

Repair Parts List, Figure 1

L3018

Item	Description	Qty.	Part Number		
			RC-251	RC-252	RC-254
1	Base (not sold separately)	1	DD2288030	DD2298030	DD2299030
2	Retaining Ring ▲	1	G908044	G908044	G908044
3	U-Cup ▲	1	DD2390041	DD2390041	DD2390041
4	Washer ▲	1	G907108	G907108	G907108
5	Rod Bearing ◆	1	G898107	G898107	G898107
6	Stop Ring ◆	1	G899044	G899044	G899044
7	Saddle, Grooved	1	A252G	A252G	A252G
8	Wiper Ring ▲	1	G731044	G731044	G731044
9	Spring ●	1	DD2289110	DD2351110	DD2353110
10	Plunger (not sold separately)	1	DD2349040	DD2350040	DD2352040
11	Coupler	1	CR-400	CR-400	CR-400
12	Gasket ▲ ●	2	C846037	C846037	C846037
13	Spring Retainer ▲ ●	2	DD2065160	DD2065160	DD2065160
14	O-Ring ▲ ●	2	B1110903	B1110903	B1110903
15	Ring, Back-up ▲ ●	2	B1110564	B1110564	B1110564
N/S	Dust Cap ▲	1	DD1782020	DD1782020	DD1782020
N/S	Thread Protector ▲	1	DD1776271	DD1776271	DD1776271
N/S	O-Ring Coupler ▲	1	B1116803	B1116803	B1116803
N/S	Enerpac Decal ▲	1	DD2215026	DD2215026	DD2215026
N/S	Warning Decal ▲	1	CH272026	CH272026	DA5625026
N/S	O-Ring Saddle ▲	1	B1021503	B1021503	B1021503
▲	Repair Kit, Standard	-	RC25K51	RC25K51	RC25K51
◆ + ▲	Repair Kit, Premium	-	RC25K71	RC25K71	RC25K71
●	Spring Kit	-	RC25K31	RC25K32	RC25K33

Notes:

Premium repair kit includes all standard (▲) repair kit items plus additional premium (◆) items.

N/S = Item not shown.

IMPORTANT: Shaded items are available only in kits (not sold separately).

Cylinders with Viton components only: Order Repair Kit RC2510KV in addition to Repair Kit RC25K51 or RC25K71. Repair Kit RC2510KV includes Viton components for items 3 and 8. Standard components are used in other locations.



To maintain your warranty:

- Use only Enerpac Oil
- Have your products inspected and repaired by an Enerpac Authorized Service Center

ENERPAC

Visit www.enerpac.com for the location of the Enerpac Authorized Service Center nearest you.