


Repair Parts Sheet	Revision	Revision Date	Product Code Beginning
L1217	M	06/2012	A: RCS 101/201 B: RCS 302 D: RCS 502/1002

▲ = Parts available in kits (see page 2).

* See  on page 2.

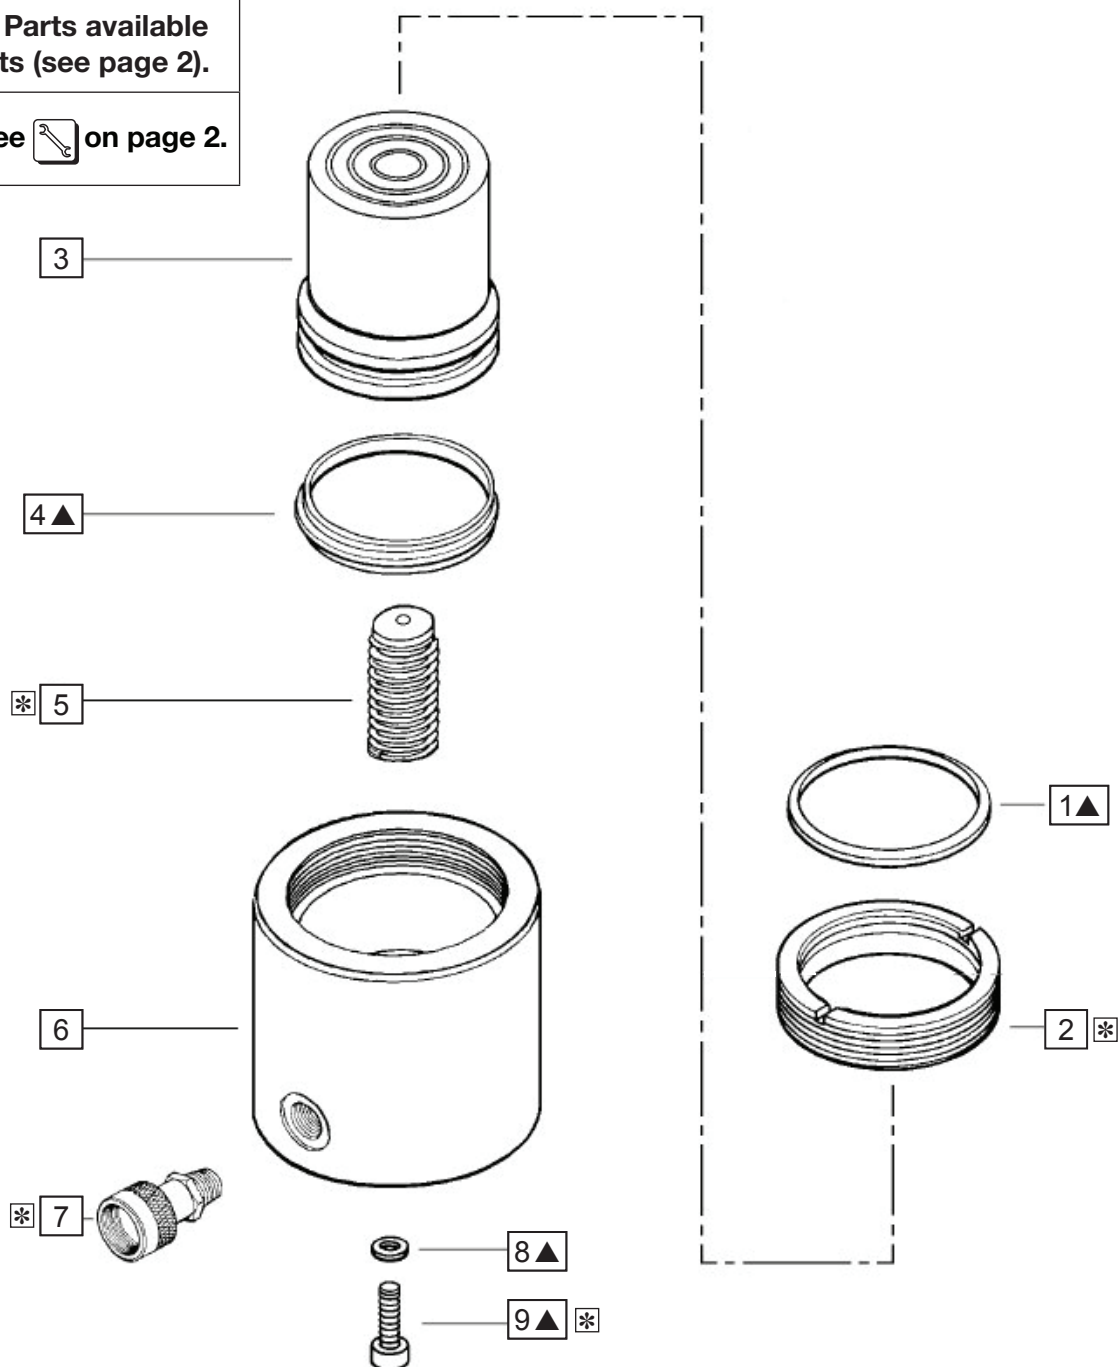

Repair Parts List							L1217
Item nr.	Description	Qty.	RCS101	RCS201	RCS302	RCS502	RCS1002
1	Wiper Ring ▲	1	CR219041	A8020476	CR77044	CB388044	CJ57044
2	Stop Ring	1	CR28044	CR39044	CR83044	DA2556044	CR106044
3	Plunger	1	CR80040	CR79040	CR78040	DA2557040	DA9419040
4	G-T Ring ▲	1	B1221513	B1329513	B1333513	B1338513	B1350513
5	Spring assy.	1	CU678900	CU678900	DC5215900	DC5215900	DC5215900
6	Cylinder Base	1	Not available as a service item. Order a new cylinder.				
7	Coupler	1	CR400	CR400	CR400	CR400	CR400
8	Gasket ▲	1	W22237	W22237	S3037	S3037	S3037
9	Screw ▲	1	B1332028	B1332028	B1014028	B1014028	B1020028
10	Caution decal (not shown) ▲	1	CH272026	CH272026	DA5625026	DA5625026	DA5117026
11	Enerpac decal (not shown) ▲	1	G421026	G423026	G423026	G424026	G425026
12	Dust Cap (not shown) ▲	1	M229900	M229900	M229900	M229900	M229900
▲	Repair Kit		RCS101K	RCS201K	RCS302K	RCS502K	RCS1002K

▲ = Indicates item included as part of repair kit.

Parts included in repair kits will vary, depending on kit ordered.

IMPORTANT: Shaded items are available only in kits (not sold separately).



Service Notes			L1217
Item	Model	Torque / Remark	
2	all	Apply Loctite 222 to threads	
5	RCS101 / 201	40 – 45 in-lbs [4.5 – 5.1 Nm]	
5	RCS302 / 502 / 1002	90 – 95 in-lbs [10.2 – 10.7 Nm]	
7	all	25 – 60 ft-lbs [34 – 81 Nm]	
7	all	Use Loctite 545 or Teflon tape	
9	RCS101 / 201	40 – 45 in-lbs [4.5 – 5.1 Nm]	
9	RCS302 / 502 / 1002	90 – 95 in-lbs [10.2 – 10.7 Nm]	



To maintain your warranty:

- Use only Enerpac Oil
- Have your products inspected and repaired by an Enerpac Authorized Service Center

ENERPAC

Visit www.enerpac.com for the location of the Enerpac Authorized Service Center nearest you.