



norco

DESCRIPTION
UNDERHOIST TRUCK TRANSMISSION JACK


CAPACITY
1 TON

MODEL NO.
72700A

REPLACEMENT PARTS

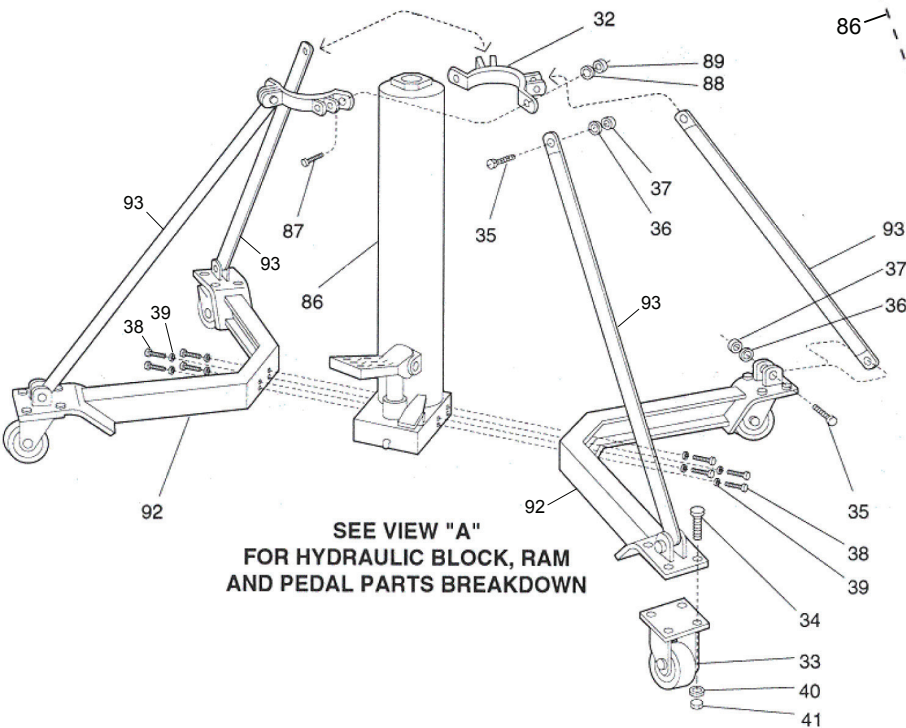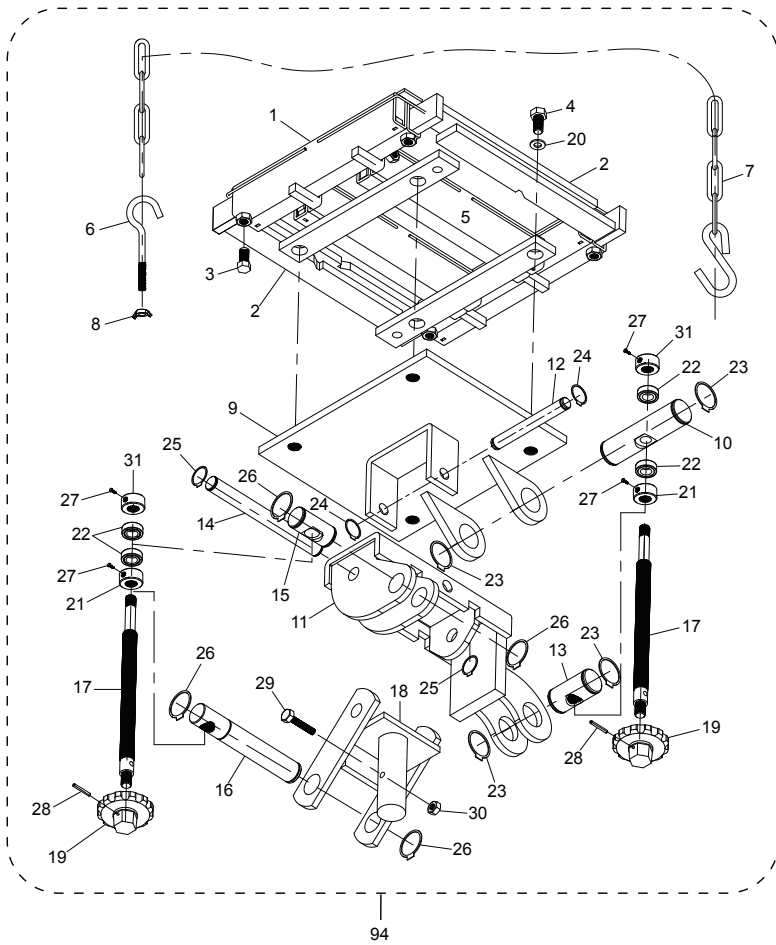

SEE VIEW "A"
FOR HYDRAULIC BLOCK, RAM
AND PEDAL PARTS BREAKDOWN

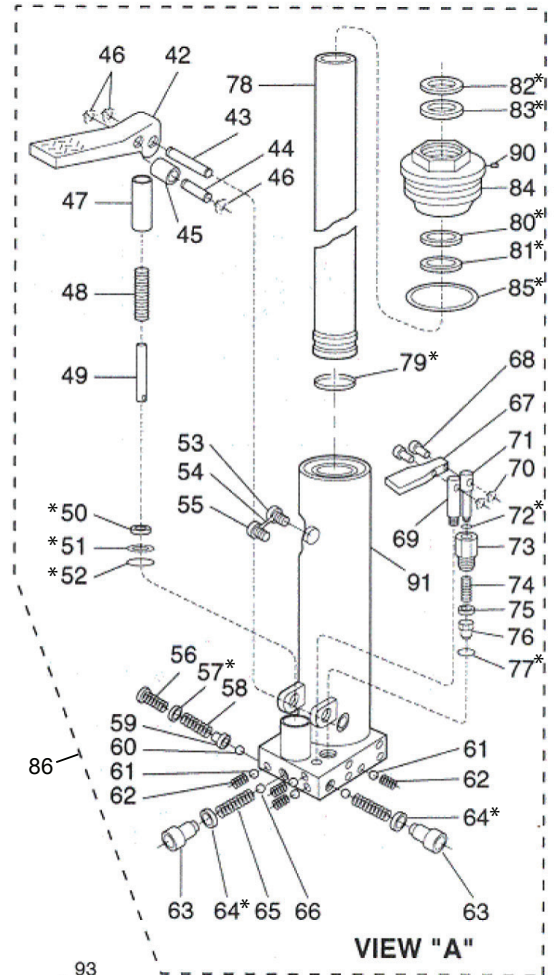

INDEX NO.	DESCRIPTION	PART NUMBER	REQ'D NO.	INDEX NO.	DESCRIPTION	PART NUMBER	REQ'D NO.
1	Fore/Aft Extension Assy	229356	2	*51	Backup Ring	229704	1
2	Extension Arms	229768	4	*52	O-Ring	229706	1
3	Lock Screws	229357	6	53	Fill Plug	229707	1
4	Mounting Bolts	229760	4	54	Strap (Plastic)	229708	1
5	Universal Adapter	229358	1	55	Vented Fill Plug	229709	1
6	Eye Bolt	229359	1	56	Overload Screw	282248	1
7	Chain w/Hook	229360	1	*57	O-Ring	282247	1
8	Wing Nut	229361	1	58	Overload Spring	282246	1
9	Saddle Plate	229362	1	59	Ball Retainer	282244	1
10	Anchor Trunion	229363	1	60	Check Ball, 3/16" Dia.	9007	1
11	Saddle Base	229364	1	61	Check Ball, 1/4" Dia.	9004	4
12	Saddle Tilt Pin	229365	1	62	1/4-20 x 5/16" Skt., Allen	3142	4
13	Trunion	229369	1	63	Valve Cover Screw	282239	2
14	Side Tilt Pin	229370	1	*64	Copper Washer	282241	2
15	Trunion	229371	1	65	Valve Spring	282243	2
16	Threaded Trunion	229372	1	66	5/16" Dia. Check Ball	9005	2
17	Tilt Screw	229366	2	67	Release Pedal	282258	1
18	Adapter	229375	1	68	Release Pivot Pin	282231	2
19	Tilt Screw Knob	229367	2	69	Pedal Support Pin	282233	1
20	Flat Washer	229376	4	70	Retaining Ring	282232	2
21	Collar	229373	2	71	Release Valve Shaft	282249	1
22	Bearing	229374	4	*72	Release O-Ring	282234	1
23	Retainer	229377	4	73	Release Housing	282236	1
24	Retainer	229378	2	74	Release Spring	282237	2
25	Retainer	229379	2	75	Release Nut	282238	1
26	Retainer	229380	4	76	Release Valve Assembly	282250	1
27	Set Screw	229381	4	*77	Copper Washer	282241	1
28	Expansion Pin	229368	2	78	Ram	229724	1
29	Bolt, 5/16"	229382	1	*79	Split Guide Ring	229726	1
30	Nut, 5/16"	229383	1	*80	Backup	229727	1
31	Collar	229384	2	*81	O-Ring	229752	1
32	Brace Collar	229712	2	*82	Oil Seal	229756	1
33	Caster	229713	4	*83	Pressure Seal	229757	1
34	Bolt, Caster	229714	16	84	Cylinder Nut	229753	1
35	Bolt, Strut	11156	8	*85	O-Ring	229754	1
36	Washer	2017	8	86	Hydraulic Assy, Complete	229715	1
37	Nut	1007	8	87	Bolt	11009	2
38	Leg Mounting Bolt	229719	8	88	Lock Washer	2007	2
39	Leg Mounting Washer	229721	8	89	Nut	1006	2
40	Washer, Caster	229722	8	90	Vent Plug	229758	1
41	Nut, Caster	229723	8	91	Hydraulic Block Housing	229705	1
42	Pump Pedal	282221	1	92	Leg	229710	2
43	Pedal Pivot Pin	282222	1	93	Brace	229711	4
44	Pedal Bearing Pin	282223	1	94	Complete Saddle Assy.	229785	1
45	Spacer	282224	1				
46	Retaining Ring	282219	4				
47	Pump Piston	229702	1				
48	Pump Spring	282229	1				
49	Spring Guide	229701	1				
*50	Oil Wiper Seal	229703	1				

*Items included in Repair Kit 229750