

AWARNING

SERVICE CART WEIGHT CAPACITY

It is the responsibility of the owner to make sure all personnel read this manual prior to using the device. It is also the responsibility of the device owner to keep this manual intact and in a convenient location for all to see and read. If the manual or product labels are lost or not legible, contact Matco Tools for replacements. If the operator is not fluent in English, the product and safety instructions shall be read and discussed with the operator in the operator's native language by the purchaser/owner or his designee, making sure that the operator comprehends its contents. PLEASE NOTE: Loading cart beyond rated capacity may cause structural damage to the cart as well as personal and /or property damage. Please educate your customers to the dangers of overloading.



- Read and follow all instructions in User's Manual
- Do not load carts beyond rated capacity.
- Lock lid and drawers before moving.



- Apply brake on locking casters anytime cart is in place.
- Do not pull cart. Push from handle on end to move.



Units can tip or fall causing damage or personal injury.



- Do not open more than one loaded drawer at a time.
- Keep children away from unit.

Do not stand on or step in drawers.



Wear gloves when lifting edges.




- Cart is designed to roll easily on flat surfaces and should not be used on uneven or inclined surfaces.
- This product may contain one or more chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
 Wash hands thoroughly after handling.

1

 Failure to heed these warnings may result in personal injury and/or property damage.




ASSEMBLY INSTRUCTIONS

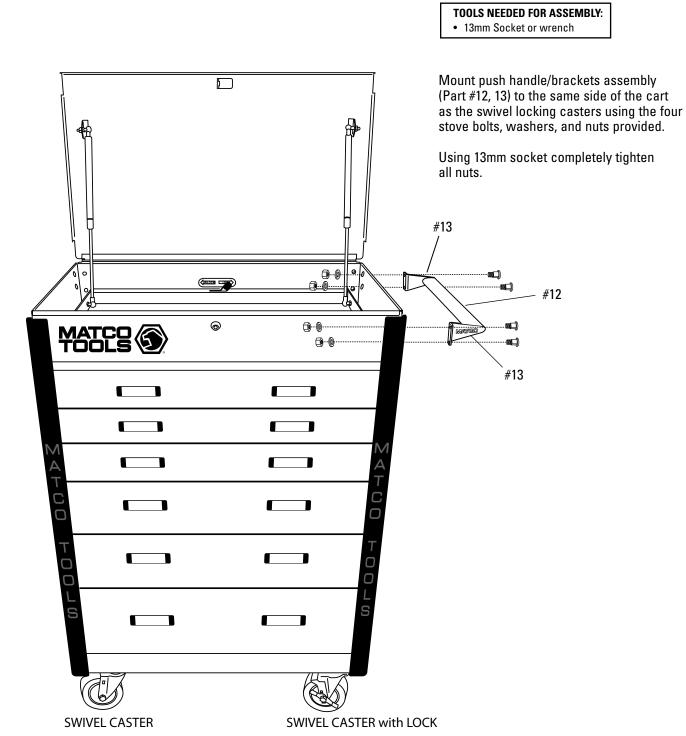



HARDWARE SPECIFICATIONS

Handle Hardware






4 pcs.



4 pcs.

Caster Hardware





16 pcs



16 pcs

TROUBLESHOOTING

Troubleshooting Points for the MSC4FD Series:

Problem: Drawers appear not to fit, do not slide in accurately and bump the cart sides.

Solution: The roller bearing slides must be fully engaged into the mounting slots on all drawers. They potentially could fall out of position during shipment. Check the side of the cart to determine which slide is out of position.

Remove the drawer that is out of position. The drawer is removed by the two clips on the actual roller bearing slide.

Simply push the roller bearing slide back down into position.

Insert the drawer back onto the roller bearing slides.


Problem: Back Lock/Unlock Switch does not engage the drawer.

Solution: The inside Lock/Unlock slide potentially could fall out of its groove during shipment. Unscrew the four screws that are holding the Lock/Unlock slide in place.

Once the screws are removed, simply place the latch back onto the slide and tighten the four screws back down.





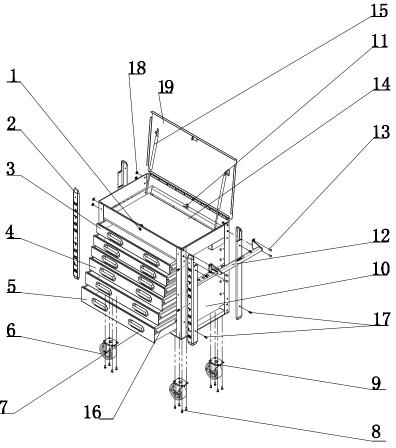

		<u> </u>				
No.	Part No.	Description	Q ty	No.	Part No.	Description
1	RSLKB	Lock with Keys	1	11	RSMSC4FDLMR	Red Locking Mechanism (Excludes Lock)
2	RSMSC4FDBP	Set of 4 Bumpers (Including #17, (16) fasteners)	1		RSMSC4FDLMBH	(Black Locking Mechanism (Excludes Lock)
	These bumpers ar	e attached to the legs with fasteners and may not be			RSMSC4FDLMBI	. Blue Locking Mechanism (Excludes Lock)
	used on carts whi	ch originally did not use these fasteners because the			RSMSC4FDLMS\	'A Silver Vein Locking Mechanism (Excludes Lock)
	legs were not mad	le to accommodate them.			RSMSC4FDLMTI	Titanium Locking Mechanism (Excludes Lock)
3	MSC4FD3R	Red 3" Drawer	3		RSMSC4FDLMSE	3 Stealth Black Locking Mechanism (Excludes Lock)
	MSC4FD3BK	Black 3" Drawer		12	RSMSC4HDL	Push Handle
	MSC4FD3BL	Blue 3" Drawer		13	RSMSC4HB	Handle Brackets/Pr. w/ hardware
	MSC4FD3SVA	Silver Vein 3" Drawer		14	RSMSC4FD7LK	EVA Liners for Drawers and Top
	MSC4FD3TI	Titanium 3" Drawer		15	RSGP	Gas Piston/each
	MSC4FD3SB	Stealth Black 3" Drawer		16	RSRBS	Roller Bearing Slides/pair
4	MSC4FD4R	Red 4" Drawer	2	17	RSFDFK	Fastener (set of 4)
	MSC4FD4BK	Black 4" Drawer		18	RSFDPCK	Plastic Cap (set of 4)
	MSC4FD4BL	Blue 4" Drawer		19	MSC4FDLIDR9	Red Lid
	MSC4FD4SVA	Silver Vein 4" Drawer	ı		MSC4FDLIDBK9	Black Lid
	MSC4FD4TI	Titanium 4" Drawer			MSC4FDLIDBL9	Blue Lid
	MSC4FD4SB	Stealth Black 4" Drawer			MSC4FDLIDSV9	Silver Vein Lid
5	MSC4FD5R	Red 5" Drawer	1		MSC4FDLIDTI9	Titanium Lid
	MSC4FD5BK	Black 5" Drawer			MSC4FDLIDSB9	Stealth Black Lid
	MSC4FD5BL	Blue 5" Drawer		Only items identified by part number are available separately.		
	MSC4FD5SVA	Silver Vein 5" Drawer		•	•	,
	MSC4FD5TI	Titanium 5" Drawer				
	MSC4FD5SB	Stealth Black 5" Drawer		Also	available:	
6	RSSWCS	5" Swivel Caster / each	2			Design Clide Detents (Dk of 9)
7	MSC4HC	6 Pc. set Chrome Handles	2			Bearing Slide Detents (Pk of 8) Touch Up Paint (1oz.)
	MSC4HBK	6 Pc. set Black Handles (Optional)		RSBK		k Touch Up Paint (102.)
	MSC4HBL	6 Pc. set Blue Handles (Optional)		_		Touch Up Paint (10z.)
	MSC4HR	6 Pc. set Red Handles (Optional)		RSMS		ium Touch Up Paint (10z.)
8	RSMSC4FDBK	Caster Bolt Kit (M8 x 16)	1			th Black Touch Up Paint (1oz.)
_	B0014# 00	(Incl. 16 Bolts, 16 Spring Washers, & 16 Flat Washers)	_	Touch Up Paint Not Available For Silver Vein		
9	RSSWLCS	5" Swivel Locking Caster / each	2	MSC4	,	of 2 Fixed 5" x 2" Casters (Optional - Not included)

Frame

10

Set of 2 Fixed 5" x 2" Casters (Optional - Not included)

Qty

2

MSC4FC